

 
GT-E3309  
user guide

- Some of the contents in this guide may differ from your device depending on the software of the device or your service provider.
- Third party services may be terminated or interrupted at any time, and Samsung makes no representation or warranty that any content or service will remain available for any period of time.
- This product includes certain free/open source software. The exact terms of the licenses, disclaimers, acknowledgements and notices are available on the Samsung's website [opensource.samsung.com](http://opensource.samsung.com).

www.samsung.com

Printed in Korea  
GH68-37481A  
English (VNZ), 08/2012, Rev. 1.0

## Device layout

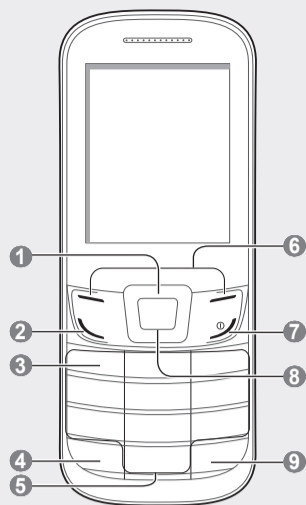


- Navigation key**  
From the Home Screen, access user-defined menus; In Menu screen, scroll through menu options  
*Pre-defined menus might differ, depending on your service provider*
- Dial Key**  
Make or answer a call; From the Home Screen, retrieve recently dialled, missed, or received numbers
- Voicemail key**  
From the Home Screen, access voice mails (press and hold)
- Keypad lock key**  
From the Home Screen, lock or unlock the keypad (press and hold)
- Alphanumeric keys**
- Softkeys**  
Perform actions indicated at the bottom of the display
- Power key**  
Turn the device on or off (press and hold); End a call; In Menu mode, cancel an input and return to the Home Screen
- Confirm key**  
From the Home Screen, access Menu screen; In Menu screen, select the highlighted menu option, or confirm an input  
*The key might perform differently, depending on your region*
- Silent mode key**  
From the Home Screen, activate or deactivate the silent mode (press and hold)

Your device displays the following status indicators on the top of the screen:

Icon	Description	Icon	Description
	No SIM card		Normal profile activated
	No signal		Silent profile activated
	Network searching		Browsing the web
	GPRS network connected		Connected with PC
	Battery power level		Bluetooth activated
	Call in progress		Wi-Fi activated
	Call diverting activated		Alarm activated
	New text message (SMS)		Music playback in progress
	New multimedia message (MMS)		Music playback paused
	New voice mail message		FM radio on
	New push message		Roaming (outside of normal service area)
	SOS message feature activated		Memory card inserted


## Installing the SIM card and battery

 - Remove the back cover and insert the SIM card.

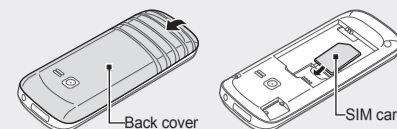

- Do not bend or twist the back cover excessively. Doing so may damage the cover.

 - Insert the battery and replace the back cover.

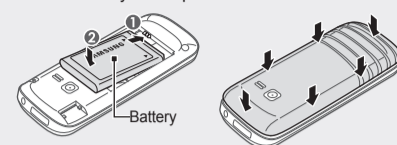

## Charging the battery



 
- Plug a charger into the multipurpose jack.
- Unplug the charger when charging is complete.

- Use only Samsung-approved chargers and cables. Unauthorised chargers or cables can cause batteries to explode or damage your device.
- Do not remove the battery from the device before unplugging the charger to prevent damage.

- To save energy, unplug the charger when not in use. The charger does not have a power switch, so you must unplug the charger from the outlet when not in use to avoid wasting power. The charger should remain close to the electrical socket while charging.

## Installing a memory card

Your device accepts memory cards with maximum capacities of 16 GB. Depending on the memory card manufacturer and type, some memory cards may not be compatible with your device.

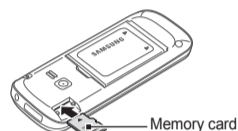

Insert the memory card as shown in the drawing.

- Formatting the memory card on a PC might cause incompatibility with your device. Format the memory card only on the device.
- Frequent writing and erasing of data will shorten the lifespan of memory cards.
- Do not use sharp tools to remove the memory card from the device.

## Turning your device on or off

## Turn your device on

Press and hold the Power key, then enter your PIN and press &lt;Confirm&gt;, if necessary.

## Turn your device off

Press and hold the Power key.

- If the battery is fully discharged or removed from the device, the time and date will be reset.

## Accessing menus

To access your device's menus or options,

Navigation key	Scroll to each menu.
Confirm key	Launch a menu or an application.
<Menu>	Open the Menu screen.
<Back>	Return to previous screen.
	Close menu or application and return to the Home Screen.

- When you access a menu requiring the PIN2, you must enter the PIN2 supplied by the SIM card. For details, contact your service provider.
- Samsung is not responsible for any loss of passwords or private information or other damage caused by illegal software.

## Entering text

## Change the text input mode

Press [#]	Change to uppercase, lowercase, or switch to Number mode.
Press and hold [#]	Switch between T9 and ABC mode. Depending on your region, you might be able to use an input mode for your specific language.
Press [*]	Switch to Symbol mode.
Press and hold [*]	Select an input mode or change input language.

## T9 mode

- Press the appropriate alphanumeric keys to enter an entire word.
- When the word displays correctly, press [0] to insert a space. If the word does not display, press the Navigation key up or down to select an alternate word.

## ABC mode

Press an appropriate alphanumeric key until the character you want appears on the display.

## Number mode

Press an appropriate alphanumeric key to enter a number.

## Symbol mode

Press an appropriate alphanumeric key to enter a symbol.

## Other features for text input

Navigation key	Move the cursor.
Press <Clear>	Delete characters one by one.
Press and hold <Clear>	Delete characters quickly.
Press [0]	Insert a space.
Press [1]	Enter punctuation marks.

## Making or answering a call

- To make a call, enter a phone number and press [Call].
- To end a call, press [End].
- To call a recently dialled number, press [Redial] to select a number, and press [Redial] again to dial the number.
- To make a call using the phonebook, press <Menu> → Phonebook, select a contact and press [Call].
- To answer an incoming call, press [Call].

## Sending and viewing messages

&lt;Menu&gt; → Messages

## Send a message

- Press **Create message**.
- Press **Add** to open the phonebook.
- Select a contact and press **Add**. Or, enter a contact number.
- Scroll down and enter a text message. See "Enter text".
- To attach files with the message, press <Options> → **Add multimedia** and select files.
- Press **Send**.

## View a message

Press **Inbox** and select a message to read.

## Managing your contacts

Save your data such as names, phone numbers and personal information in the device memory, SIM card, or the memory card.

&lt;Menu&gt; → Phonebook

## Add a new contact

- Press the confirm key to **Create contact**
- Select a number type (if necessary)
- Enter contact information and press the Confirm key.

## Edit a contact

- Select a contact and press the Confirm key.
- Edit items and press the Confirm key to save.

## Delete a contact

Select a contact and press <Options> → **Delete contact**.

- You can change the memory location by pressing <Menu> → Phonebook → <Options> → **Settings** → **Save new contacts to** and selecting a memory location.

## Using the camera

&lt;Menu&gt; → Camera

## Take a photo

- Rotate the device anti-clockwise to landscape view.
- Aim the lens at the subject and make any adjustments by pressing <Options>.
- Press the Confirm key to take a photo. Photos are saved automatically.

## Record a video

- Press <Options> and select **Camcorder**. Or, press [1] to change from **Camera to Camcorder**.
- Rotate the device anti-clockwise to landscape view.
- Aim the lens at the subject and make any adjustments by pressing <Options>.
- Press the Confirm key to start recording.
- Press the Confirm key to end recording. Videos are saved automatically.

## View photos and videos

From the Home Screen, press <Menu> → **My files** → **Images** or **Videos** and select an item to view.

## Listening to music

&lt;Menu&gt; → Music

Keys	Function
Confirm key	Play, pause, or resume a music.
Navigation key	<ul style="list-style-type: none"> <li>Left: Skip backward (press); Scan backward in a file (press and hold).</li> <li>Right: Skip forward (press); Scan forward in a file (press and hold).</li> <li>Up/Down: Adjust the volume.</li> </ul>
2	Select the sound effect.
3	Turn shuffle mode on or off.
4	Change the repeat mode.
5	Change the music display.

## Browsing the web

&lt;Menu&gt; → Internet

- When you access **Internet** for the first time, you might be prompt to create an Internet profile.

## Navigate web pages

Keys	Function
Navigation key	Scroll up or down on a web page.
Confirm key	Select an item.
<Back>	Return to the previous page.
<Options>	Open browser options.

## Bookmark your favourite web page

- Press <Options> → **Bookmarks** → <Options> → **Add bookmark**.
- Enter details and press the Confirm key.

## Using the alarm

&lt;Menu&gt; → Organiser → Alarms

## Set a new alarm

- Press <Create>.
- Enter details and press <Save>.

## Stop an alarm

- When an alarm rings,
  - Press <Confirm> to stop the alarm.
  - Press <Snooze> to silence the alarm for the snooze period.

## Deactivate an alarm

Select an item and press <Options> → **Deactivate alarm**.

## Listening to the FM radio

&lt;Menu&gt; → Applications → FM radio

## Activate the FM radio

- Plug a headset into the device.
- Press the Confirm key to turn on the FM radio.
- Press <Yes> to start automatic tuning. You will be asked to start automatic tuning when accessing the FM radio for the first time.
- Control the FM radio using the following keys:

Keys	Function
Confirm key	Turn the FM radio on or off.
Navigation key	<ul style="list-style-type: none"> <li>Left/Right: Fine-tune the frequency; Search for the next available station (press and hold).</li> <li>Up/Down: Adjust the volume.</li> </ul>

## Add a radio station to the favourites list

- Plug a headset into the device.
- Press <Options> → **Add to Favourites**.
- Assign a key and press <Select>.

## Using the Bluetooth feature

&lt;Menu&gt; → Applications → Bluetooth

## Turn on the Bluetooth feature

- Press <Options> → **Settings** and set **Bluetooth to On**.
- Set **My phone's visibility** to allow other devices to search your device.

## Find and pair with other Bluetooth devices

- Press the confirm key to find other Bluetooth devices.
- Select a device and press the Confirm key.
- Enter the PIN code, and press <OK> to match the PIN between the devices (if necessary).
- When the other device accepts the connection, pairing is complete.

- You might have to enter a PIN, depending on the device.

## Turn off the Bluetooth feature

Select <Options> → **Settings** and set **Bluetooth to Off**.

## Send data using the Bluetooth feature

- Select items to send from one of your device's applications.
- Press <Options> → **Send via** → **Bluetooth**.

## Customising your device

Settings control how applications and functions operate. Change them to customise the device. Appearances, sound profiles, call actions and many more can be customised.

&lt;Menu&gt; → Settings

Menu	Description
<b>Sound profiles</b>	Change alert type, ringtone, volume, etc.
<b>Display</b>	Alter wallpaper, theme, font, brightness, etc.
<b>Time and date</b>	Change time and date of the device.
<b>Phone</b>	Change device language, etc.
<b>Call</b>	Set auto reject, answering mode, call forwarding, fake call, etc.
<b>Backup manager</b>	Back up or restore your data.
<b>Security</b>	Set locks or change passwords.
<b>PC connections</b>	Set connection settings with a PC.
<b>Network</b>	Change network profiles settings.
<b>Memory</b>	Clear memory, manage the memory card, or set default memory location.
<b>Reset all</b>	Reset the device.

## Adjusting the sound profiles

&lt;Menu&gt; → Settings → Sound profiles

## Change the ringtone

- Select a profile and press <Edit>.
- Press **Voice call ringtone**.
- Choose a ringtone and press the Confirm key.

## Change the message alert tone

- Select a profile and press <Edit>.
- Press **Message alert tone**.
- Choose a tone and press the Confirm key.

## Adjust the volume of the ringtone

- Select a profile and press <Edit>.
- Press **Volume** → **Call alert**.
- Adjust the volume and press <Save>.

## Adjust the volume of voice during a call

While a call is in progress, press the Navigation key up or down to adjust the volume.

- To switch to another profile, select it from the list.

## Customising the Home Screen

Customise your Home Screen with your favourite applications, contacts, calendar, and many more.

- The shortcuts assigned to the Navigation key is disabled when you are using the smart idle on your Home Screen.

<Menu> → Settings → Display → **Smart home** → **Smart idle**

## Add items to the smart idle

- Press <Edit> and select items to display on the Home Screen.
- Press <Options> → **Save** → <Set>.

## Customize the shortcuts toolbar

- Press <Edit> → **Shortcuts toolbar** → <Options> → **Edit shortcuts** → <Edit>.
- Select items to add to the shortcuts toolbar and press <Save>. New items can be added to empty spaces.

## Use the smart home

Select an item on the smart home and press the Confirm key to launch the item.

- Press <Menu> → Settings → Display → **Smart home** to change the Home Screen to another style.

## Backing up your data

Back up your data, such as contacts, messages, calendar, and tasks to your memory card. To use this feature, a memory card must be installed.

<Menu> → Settings → Backup manager

### Back up your data

Press **Backup**, select items to back up and press <Backup>.

### Restore your data

Press **Restore**, select items to restore and press <Restore>.

## Using shortcuts

<Menu> → Settings → Phone → Shortcuts

### Edit shortcuts

1. Select a Navigation key and press <Change>.
2. Select an application to assign and press <Save>.

## Using the mobile tracker

The mobile tracker feature helps locate and recover your device if its stolen or lost. When someone inserts a different SIM card, a tracking message will be sent to preset recipients. This feature might be unavailable due to certain features supported by your service provider.

<Menu> → Settings → Security → Mobile tracker

You might have to confirm your password when accessing the mobile tracker.

### Activate the mobile tracker

1. Enter password and press <OK>.
2. Press <Change> to select **On**.
3. Enter recipients and sender details.
4. Press **Save** → <Accept>.

### Deactivate the mobile tracker

1. Enter password and press <OK>.
2. Press <Change> to select **Off**.

## Using the SOS message feature

Send an SOS message to your family or friends in an emergency.

<Menu> → Messages → Settings → SOS messages

### Activate the SOS message feature

1. Press **Sending options** → <Change> and set **Sending SOS** to **On**.
2. Enter recipient and press the Confirm key.
3. Set the number of times to repeat the message.
4. Edit SOS message (if necessary).
5. Press <Back> → <Yes>.

### Send an SOS message

1. With the keypad locked, press [ ] four times to send an SOS message to preset numbers.
2. To exit SOS mode, press [ ].

## Making fake calls

<Menu> → Settings → Call → Fake call

### Activate the fake call feature

1. Set **Fake call hot key** to **On**.
2. Change caller name or number (if necessary).

### Make a fake call

Press and hold the Navigation key down.



## Safety information

**SAR**

www.sar-tick.com

This product meets applicable national SAR limits of 2.0 W/kg. The specific maximum SAR values can be found in the SAR information section of this manual.

When carrying the product or using it while worn on your body, maintain a distance of 1.5 cm from the body to ensure compliance with RF exposure requirements.

### Trademarks

- SAMSUNG and the SAMSUNG logo are registered trademarks of Samsung Electronics.
- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide.
- All other trademarks and copyrights are the property of their respective owners.

This safety information contains content for mobile devices. Some content may be not applicable to your device. To prevent injury to yourself and others or damage to your device, read the safety information about your device before using the device.

### Warning: Prevent electric shock, fire, and explosion

Do not use damaged power cords or plugs, or loose electrical sockets

Do not touch the power cord with wet hands, or disconnect the charger by pulling on the cord

Do not bend or damage the power cord

Do not use your device while charging or touch your device with wet hands

Do not short-circuit the charger or the battery

Do not drop or cause an impact to the charger or the battery

Do not charge the battery with chargers that are not approved by the manufacturer

Do not use your device during a thunderstorm  
Your device may malfunction and your risk of electric shock is increased.

Do not handle a damaged or leaking Lithium Ion (Li-Ion) battery

For safe disposal of your Li-Ion batteries, contact your nearest authorised service centre.

Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your device. Incompatible batteries and chargers can cause serious injuries or damage to your device.

- Never dispose of batteries or devices in a fire. Follow all local regulations when disposing of used batteries or devices.
- Never place batteries or devices on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Protect the device, batteries, and chargers from damage

- Avoid exposing your device and batteries to very cold or very hot temperatures.
- Extreme temperatures can cause the deformation of the device and reduce the charging capacity and life of your device and batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and - terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

### Caution: Follow all safety warnings and regulations when using your device in restricted areas

Do not use your device near other electronic devices

Most electronic devices use radio frequency signals. Your device may interfere with other electronic devices.

Do not use your device near a pacemaker

- Avoid using your device within a 15 cm range of a pacemaker, if possible, as your device can interfere with the pacemaker.
- To minimise possible interference with a pacemaker, use your device only on the side of your body that is opposite the pacemaker.

- Call roadside assistance or a special, non-emergency assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle that you know to be stolen, call a number that is designated for reporting these types of situations.

## Proper care and use of your mobile device

### Keep your device dry

- Humidity and liquids may damage the parts or electronic circuits in your device.
- Do not turn on your device if it is wet. If your device is already on, turn it off and remove the battery immediately (if the device will not turn off or you cannot remove the battery, leave it as-is). Then, dry the device with a towel and take it to a service centre.
- Liquids will change the colour of the label that indicates water damage inside the device. Water damage to your device can void your manufacturer's warranty.

### Do not use or store your device in areas with high concentrations of dust or airborne materials

Dust or foreign materials can cause your device to malfunction and may result in fire or electric shock.

### Store your device only on flat surfaces

If your device falls, it may be damaged.

### Do not store your device in very hot or very cold areas. It is recommended to use your device at temperatures from 5 °C to 35 °C

- Your device can explode if left inside a closed vehicle, as the internal temperature can reach up to 80 °C.
- Do not expose your device to direct sunlight for extended periods of time (on the dashboard of a car, for example).
- Store the battery at temperatures from 0 °C to 45 °C.

### Do not store your device with metal objects, such as coins, keys, and necklaces

- Your device may be scratched or may malfunction.
- If the battery terminals come into contact with metal objects, this may cause a fire.

### Do not store your device near magnetic fields

- Your device may malfunction or the battery may discharge from exposure to magnetic fields.
- Magnetic stripe cards, including credit cards, phone cards, passbooks, and boarding passes, may be damaged by magnetic fields.
- Do not use carrying cases or accessories with magnetic closures or allow your device to come into contact with magnetic fields for extended periods of time.

### Do not store your device near or in heaters, microwaves, hot cooking equipment, or high pressure containers

- The battery may leak.
- Your device may overheat and cause a fire.

### Do not drop your device or cause impacts to your device

- The screen of your device may be damaged.
- If bent or deformed, your device may be damaged or parts may malfunction.

### Do not use your device or applications for a while if the device is overheated

Prolonged exposure of your skin to an overheated device may cause low temperature burn symptoms, such as red spots and pigmentation.

### If your device has a camera flash or light, do not use a flash close to the eyes of people or pets

Using a flash close to the eyes may cause temporary loss of vision or damage to the eyes.

### Use caution when exposed to flashing lights

- While using your device, leave some lights on in the room and do not hold the screen too close to your eyes.
- Seizures or blackouts can occur when you are exposed to flashing lights while watching videos or playing Flash-based games for extended periods. If you feel any discomfort, stop using the device immediately.

### Reduce the risk of repetitive motion injuries

When you repetitively perform actions, such as pressing keys, drawing characters on a touch screen with your fingers, or playing games, you may experience occasional discomfort in your hands, neck, shoulders, or other parts of your body. When using your device for extended periods, hold the device with a relaxed grip, press the keys lightly, and take frequent breaks. If you continue to have discomfort during or after such use, stop using the device and consult a physician.

### Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.
- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purposes.

### Use manufacturer-approved batteries, chargers, accessories and supplies

- Using generic battery or charger may shorten the life of your device or cause the device to malfunction.
- Samsung cannot be responsible for the user's safety when using accessories or supplies that are not approved by Samsung.

### Do not bite or suck the device or the battery

 
- Doing so may damage the device or cause explosion.
- If children use the device, make sure that they use the device properly.

### Do not insert the device or supplied accessories into the eyes, ears, or mouth

Doing so may cause suffocation or serious injuries.

### When using the device:

- Hold the device upright, as you would with a traditional phone.
- Speak directly into the microphone.
- Do not touch the device's internal antenna. Doing so may result in reduced call quality or cause the device to emit unintended levels of radio frequency (RF) energy.

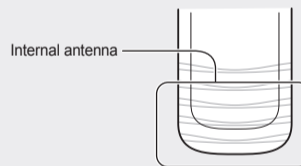

### Protect your hearing and ears when using a headset

- Excessive exposure to loud sounds can cause hearing damage.
- Exposure to loud sounds while driving may distract your attention and cause an accident.
- Always turn the volume down before plugging the earphones into an audio source and use only the minimum volume setting necessary to hear your conversation or music.
- In dry environments, static electricity can build up in the headset. Avoid using headsets in dry environments or touch a metal object to discharge static electricity before connecting a headset to the device.

### Do not allow children to use your device

Your device is not a toy. Do not allow children to play with it as they could hurt themselves and others or damage the device.

### Install mobile devices and equipment with caution

- Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted.
- Avoid placing your device and accessories near or in an airbag deployment area. Improperly installed wireless equipment can cause serious injury when airbags inflate rapidly.

### Allow only qualified personnel to service your device

Allowing unqualified personnel to service your device may result in damage to your device and will void your manufacturer's warranty.

### Handle SIM cards or memory cards with care

- Do not remove a card while the device is transferring or accessing information, as this could result in loss of data and/or damage to the card or device.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

### Ensure access to emergency services

Emergency calls from your device may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternative method of contacting emergency services personnel.

### Keep your personal and important data safe

- While using your device, be sure to back up important data. Samsung is not responsible for the loss of any data.
- When disposing of your device, back up all data and then reset your device to prevent misuse of your personal information.

- Carefully read the permissions screen when downloading applications. Be particularly cautious with applications that have access to many functions or to a significant amount of your personal information.

- Check your accounts regularly for unapproved or suspicious use. If you find any sign of misuse of your personal information, contact your service provider to delete or change your account information.
- In the event your device is lost or stolen, change the passwords on your accounts to protect your personal information.
- Avoid using applications from unknown sources and lock your device with a pattern, password, or PIN.

### Do not distribute copyright-protected material

Do not distribute copyright-protected material without the permission of the content owners. Doing this may violate copyright laws. The manufacturer is not liable for any legal issues caused by the user's illegal use of copyrighted material.

## Specific Absorption Rate (SAR) certification information

### THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves (radio frequency electromagnetic fields) recommended by international guidelines. The guidelines were developed by an independent scientific organisation (ICNIRP) and include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The radio wave exposure guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2.0 W/kg.

Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The highest SAR values under the ICNIRP guidelines for this device model are:

### Maximum SAR for this model and conditions under which it was recorded

Head SAR	0.822 W/kg
Body-worn SAR	0.546 W/kg

During use, the actual SAR values for this device are usually well below the values stated above. This is because, for purposes of system efficiency and to minimise interference on the network, the operating power of your mobile device is automatically decreased when full power is not needed for the call. The lower the power output of the device, the lower its SAR value.

A body-worn SAR test has been performed on this device at a separation distance of 1.5 cm. To meet RF exposure guidelines during body-worn operation, the device must be positioned at least 1.5 cm away from the body.

Organisations such as the World Health Organisation and the US Food and Drug Administration have suggested that if people are concerned and want to reduce their exposure, they could use a hands-free accessory to keep the wireless device away from the head and body during use, or reduce the amount of time spent using the device.

For more information, visit [www.samsung.com/sar](http://www.samsung.com/sar) and search for your device with the model number.

### Correct disposal of this product

(Waste Electrical & Electronic Equipment)

- (Applicable in countries with separate collection systems) This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

This EEE is compliant with RoHS.

### Correct disposal of batteries in this product

- (Applicable in countries with separate collection systems) This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

SAMSUNG ELECTRONICS



### Declaration of Conformity (R&TTE)

We, Samsung Electronics

declare under our sole responsibility that the product

GSM WCDMA BT Mobile Phone : GT-E3309

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY	EN 60950-1:2006 + A1:2010
SAR	EN 50360:2001 / AC 2006 EN 62209-1:2006 EN 62209-2:2010 EN 62479:2010 EN 62311:2008
EMC	EN 301 489-01 V1.9.2 (09-2011) EN 301 489-07 V1.3.1 (11-2005) EN 301 489-17 V2.1.1 (05-2009) EN 301 489-24 V1.5.1 (10-2010) EN 301 511 V9.0.2 (03-2003) EN 301 908-1 V5.2.1 (05-2011) EN 301 908-2 V5.2.1 (07-2011) EN 300 328 V1.7.1 (10-2006)
RADIO	

We hereby declare that all essential radio test suites have been carried out and that the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex IV of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies)

BABT, Forsyth House, Churchfield Road, Watton-on-Thames, Surrey KT12 2TD, UK\*  
Identification mark: 0168

The technical documentation kept at:  
Samsung Electronics QA Lab.

which will be made available upon request.  
(Representative in the EU)

Samsung Electronics Euro QA Lab,  
Blackbushe Business Park, Saxony Way,  
Yateley, Hampshire, GU46 6GG, UK\*

2012.08.07  
(place and date of issue)

CE 0168

Joong-Hoon Choi / Lab Manager  
(name and signature of authorised person)

\* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your product.