



Final Approval Request

Interoffice Correspondence
Integrated Technical Communications (ITC)

FROM: Norm Olsen

DATE: 6/18/2004

SUBJECT: V550 GSM R3.7.6 User Guide

PART #: 68XXXXXX6-O

FILE NAME AND LOCATION: <http://fl25-pcsitc-nas.comm.mot.com/PCSITC-Public/V550.GSM.R3.7.6/V550.GSM.UG.061804.pdf>

All comments to be submitted to: **Norm Olsen**

Return comments by this date: June 23, 2004

SPECIAL INSTRUCTIONS FROM ITC:

This guide is almost identical to the V535 refresh user guide posted for final approval review. Differences include the phone name listed on page 1, and the closed flip phone illustration with callout labels shown on page 2.

- Review draft publication for complete & accurate technical information.
- Focus on your area of expertise—ITC will complete editing before final review.
- Provide specific comments:
 - *If information is wrong*—Provide correct information or name of person with correct information.
 - *If information is missing*—Provide information to be added or name of person with correct information.
- Return markup by date specified above.
- When sending markup, include name of all reviewers who contributed.

Thank you.



MOTOROLA

Personal Communications Sector



***Integrated
Technical
Communications***

Final Approval Request

*Interoffice Correspondence
Integrated Technical Communications (ITC)*

Motorola V550
GSM R3.7.6
Wireless Phone
User's Guide

Final Approval Draft

June 18, 2004


DRAFT







Welcome

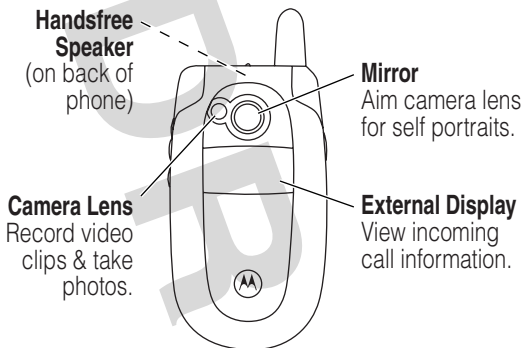





Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola V550 GSM wireless phone.



Check It Out!



Feature	Description
Record Video Clip	Record a video clip: Press  > Multimedia > Video Camera , point lens at subject, press CAPTURE () to begin recording, press STOP () to stop recording.
Play Video Clip	Play a video clip:  > Multimedia > Videos > <i>video clip</i>
Take Photo	Press CAMERA () to activate the camera, point lens at subject, press CAPTURE () to take a photo.

Feature	Description
Send Photo	Send a photo to a phone number or email address: Take photo, then press STORE (📷) > Send In Message.
Set Photo as Picture ID	Assign a photo to a phonebook entry to allow picture caller ID: Take photo, then press STORE (📷) > Apply as Phonebook Entry.
Send Multimedia Message	Send a multimedia message with pictures, animations, sounds, and videos:  > Messages > Create Message > New Multimedia Msg 
Read Multimedia Message	Read a new multimedia message or letter that you have received: Press READ (📷). 
Store Message Objects	Go to a multimedia message page, or highlight an object in a letter, then:  > Store 
Wireless Connection	Set up a Bluetooth® wireless connection to a headset accessory, car kit, or external device:  > Settings > Connection > Bluetooth Link > Setup > Power > On , press BACK (📷), press > Handsfree > [Look For Devices]

Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196

1-800-331-6456 (United States)
1-888-390-6456 (TTY/TDD United States)
1-800-461-4575 (Canada)

www.motorola.com (United States)
www.motorola.ca (Canada)

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2003, 2004.

The information contained in Motorola's user's guides is believed to be correct at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice. The contents of Motorola's user's guides are provided "as is." Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability, or contents of this guide.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Manual number: 68XXXXXX66-O

Contents

Getting Started	8
About This Guide	8
Installing the SIM Card	9
Battery Use	10
Installing the Battery	12
Charging the Battery	13
Turning Your Phone On	14
Turning Your Phone Off	14
Adjusting Volume	15
Making a Call	15
Answering a Call	16
Viewing Your Phone Number	16
Highlight Features	17
Recording and Playing Video Clips	17
Taking and Sending a Photo	21
Sending a Multimedia Message	23
Receiving a Multimedia Message	27
Using a Bluetooth® Wireless Connection	28
Learning to Use Your Phone	31
Using the Display	31
Using the 5-Way Navigation Key	36
Using Menus	37
Entering Text	39
Using the Smart Key	51
Using the External Display	52
Using the Handsfree Speaker	53
Changing a Code, PIN, or Password	54
Locking and Unlocking Your Phone	54

If You Forget a Code, PIN, or Password	56
Using the Phonebook	56
Setting Up Your Phone	59
Setting a Ring Style	59
Changing the Call Alert	60
Setting the Time and Date	60
Setting a Wallpaper Image	61
Setting a Screen Saver Image	62
Changing Phone Skin	63
Setting a Phone Theme	63
Setting Answer Options	64
Setting Display Brightness	65
Adjusting the Backlight	65
Setting Display Timeout	65
Storing Your Name and Phone Number	66
Calling Features	67
Turning Off a Call Alert	67
Viewing Recent Calls	67
Redialing a Number	69
Using Automatic Redial	69
Returning an Unanswered Call	70
Using the Notepad	70
Putting a Call On Hold or Mute	71
Using Call Waiting	72
Using Caller ID (Incoming Calls)	72
Calling an Emergency Number	73
Dialing International Numbers	73
Calling With 1-Touch Dial	74
Using Voicemail	74
Changing the Active Line	76

Phone Features	77
Main Menu	77
Settings Menu	78
Feature Quick Reference	79
Calling Features	79
Messages	80
Phonebook	81
Personalizing Features	84
Instant Messaging	85
Chat	86
Email	87
Menu Features	87
Special Dialing Features	88
Call Monitoring	89
Handsfree Features	90
Data and Fax Calls	92
Bluetooth® Wireless Connections	92
Network Features	94
Personal Organizer Features	94
Security	96
News and Entertainment	97
Specific Absorption Rate Data	99
Index	101

Getting Started



CAUTION: Before using the phone for the first time, read the *Important Safety and Legal Information* included in the gray-edged pages at the back of this guide.

About This Guide

This guide describes the basic features of your Motorola wireless phone.

Note: A *More Here* reference guide for your phone is also available that describes your phone's features in more detail.

To obtain the *More Here* guide for your phone, or another copy of this guide, see the Motorola Web site at:

<http://motorola.com/consumer/manuals> (U.S.A.)

<http://motorola.ca/consumer> (Canada)



or contact the Motorola Customer Call Center at 1-800-331-6456 (U.S.A.) or 1-800-461-4575 (Canada).

Selecting a Menu Feature

Use the menu system to access your phone's features. This guide shows you how to select a menu feature from the home screen as follows:

Find the Feature

 > **Recent Calls** > **Dialed Calls**

This example shows that, from the home screen, you must press the menu key  to open the menu, scroll to and select  **Recent Calls**, then scroll to and select **Dialed Calls**.

Press the 5-way navigation key  to scroll and highlight a menu feature. Press **SELECT** () to select the highlighted menu feature.

Optional Features



This label identifies an optional network, SIM card, or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

Optional Accessories




This label identifies a feature that requires an optional Motorola Original™ accessory.

Installing the SIM Card

Your *Subscriber Identity Module* (SIM) card contains your phone number, service details, and phonebook/message memory.

Caution: Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

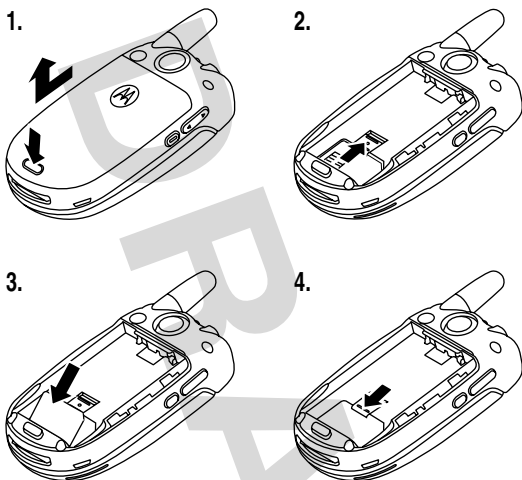

Battery Use

Battery performance depends on many factors, including your wireless carrier's network configuration; signal strength; the temperature at which you operate your phone; the features and/or settings you select and use; items attached to the phone's accessory connector port; and your voice, data, and other application usage patterns.

Caution: To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.

To maximize your battery's performance:

- Always use Motorola Original batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.
- New batteries or batteries that have been stored for a long time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery.



The rechargeable batteries that power this phone must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling center for proper disposal methods.

Warning: Never dispose of batteries in a fire because they may explode.




Installing the Battery



TM Your phone is designed to use only Motorola Original batteries and accessories.

Note: Your phone is shipped with a protective clear plastic liner covering the battery door latch. Remove the liner to ensure that the battery door attaches and closes properly.

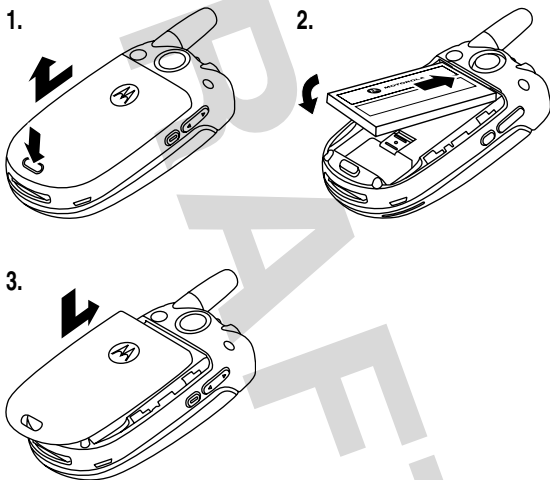


Charging the Battery

New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.



Action

- 1 Insert the travel charger plug into your phone with the release tab facing up. Make sure that both of the plug's connector hooks engage to lock the plug in place.

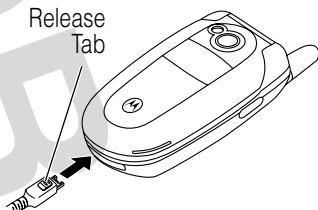

- 2 Plug the other end of the travel charger into the appropriate electrical outlet.


Note: It may take up to 10 seconds for your phone to provide a visible or audible indication that the battery is charging.

- 3 When your phone indicates **Charge Complete**, press the release tab and remove the travel charger.


Tip: You can safely leave the travel charger connected to the phone after charging is complete. This will **not** damage the battery.


Turning Your Phone On

Action


- 1 Open your phone.
- 2 Press and hold the power key  for 2 seconds to turn the phone on.

Note: It may take up to 4 seconds for the display to illuminate after you turn the phone on.

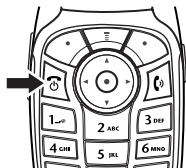


- 3 If necessary, enter your SIM card PIN code and press **OK** () to unlock the SIM card.

Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays **SIM Blocked**.

- 4 If necessary, enter your 4-digit unlock code and press **OK** () to unlock the phone.

Turning Your Phone Off

Action


Press and hold the power key  for 2 seconds to turn the phone off.

Adjusting Volume

Press the up or down volume keys to:



- silence an incoming call alert
- increase or decrease earpiece volume during a call
- increase or decrease the ringer volume setting when the home screen is visible (flip must be open)

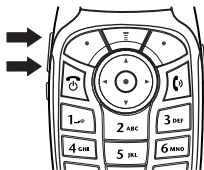Tip: At the lowest volume setting, press the down volume key once to switch to vibrate alert. Press it again to switch to silent alert. Press the up volume key to switch back to vibrate alert, then ring alert.



Making a Call

You must be in the home screen to dial a phone number (see page 31).

Press	To
1 keypad keys	dial the phone number
2 	make the call
3 	end the call and “hang up” the phone when you are finished

Tip: You can also close the phone flip to end the call.




Answering a Call



When you receive a call, your phone rings and/or vibrates and displays an incoming call message.


When the phone flip is active, open the phone to answer the call. (To activate, press  > **Settings** > **In-Call Setup** > **Answer Options** > **Open to Answer.**)

If the phone flip is **not** active:

Press	To
1  or ANSWER ()	answer the call
2 	end the call and “hang up” the phone when you are finished

Viewing Your Phone Number

To view your phone number from the home screen, press  .

While you are on a call, press  > **My Tel. Numbers.**

Note: Your phone number must be stored on your SIM card to use this feature. To store your phone number on the SIM card, see page 66. If you do not know your phone number, contact your service provider.

Highlight Features

You can do much more with your phone than make and receive calls!



Recording and Playing Video Clips

You can record a video clip with your phone, and send it to other wireless phone users in a multimedia message.


Recording a Video Clip

To activate your phone's video camera:

Find the Feature

 > **Multimedia**
> **Video Camera**

The active viewfinder image appears on your display.

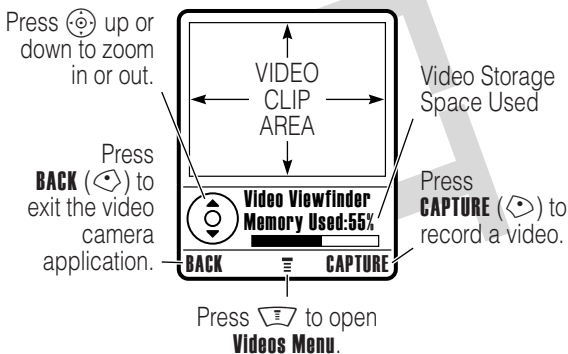

Point the camera lens at the video subject, then:



	Press	To
1	CAPTURE (📷)	begin video recording
2	STOP (📷)	stop video recording
3	STORE (📷)	view storage options
		If you choose to store the video, continue to step 4.
	or	
	DISCARD (📷)	delete the video and return to active viewfinder
4	⦿	scroll to Send in Message or Store Only
5	SELECT (📷)	perform the storage option


Playing a Video Clip

To play a video clip stored on your phone:

Find the Feature

☰ > **Multimedia** > **Videos**
> *video clip*

The video clip displays in the video clip playback screen.

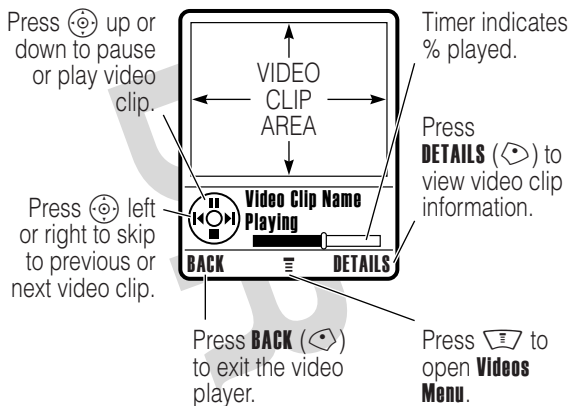

Adjusting Video Settings

Press to open the **Videos Menu** during video recording or playback. The **Videos Menu** can include the following options:

Option	Description
Go To Videos	View video clips stored on your phone.
Send In Message	Insert selected video clip or marked video clips in a new message.
Details	View video clip information.
Rename	Rename the video clip.
Delete	Delete the selected video clip or all marked video clips.



Option	Description
Move	Move selected video clip or marked video clips to another device, and delete original video(s) from phone memory.
Copy	Copy selected video clip or marked video clips to another device, and leave copy of video(s) on phone.
Mark/Unmark or Mark All/Unmark All	Mark one or more video clips that you want to move, copy, send, or delete.
Categories	Create a new category, or view video clips in a selected category.
Assign To Category	Assign the video clip to a defined category.
Videos Setup	Open the setup menu to adjust video settings.
View Free Space	View memory space available for storing video clips.
Zoom	Change the zoom factor of the selected video clip (not available for all videos).


Taking and Sending a Photo

Shortcut: From the home screen, press **CAMERA** (📷) to activate the camera.

To activate your phone's camera from the menu system:

Find the Feature 📄 > **Multimedia** > **Camera**

The active viewfinder image appears on your display.

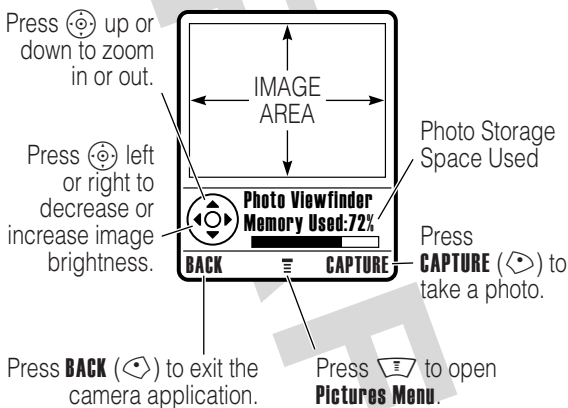

Point the camera lens at the photo subject, then:



	Press	To
1	CAPTURE (📷)	take a photo
2	STORE (📷)	view storage options If you choose to store the photo, continue to step 3.
	or	
	DISCARD (📷)	delete the photo and return to active viewfinder
3	⏸	scroll to Send in Message , Store Only , Apply as Wallpaper , Apply as Screen Saver , or Apply as Phonebook Entry
4	SELECT (📷)	perform the storage option

Taking a Self-Portrait

Activate the camera and then press

☰ > **Auto-Timed Capture**. Press ⏸ left or right to set a 5 or 10 second timer delay, then press **START** (📷). Close the flip, and use the mirror to aim the camera lens. When you hear the camera click, open the flip to see your photo.

Adjusting Camera Settings

Press  to open the **Pictures Menu** when the camera is active. The **Pictures Menu** can include the following options:

Option	Description
Go To Pictures	View pictures and photos stored on your phone.
Auto-Timed Capture	Set a timer for the camera to take a photo.
Pictures Setup	Open the setup menu to adjust picture settings.
View Free Space	See how much memory remains for storing pictures.



Sending a Multimedia Message



A *Multimedia Messaging Service* (MMS) multimedia message contains one or more pages with text and embedded media objects (including photos, pictures, animations, sounds, voice records, and video clips). You can send a multimedia message to other wireless phone users, and to email addresses.




 






Tip: The layout of all pages in a multimedia message is defined by the layout of the first page. To display a media object at the top of the page, insert it in the first half of the



message text. To display a media object at the bottom of the page, insert it in the second half of the message text.





Find the Feature

-  > **Messages**
- > **Create Message**
- > **New Multimedia Msg**

Press	To
1 keypad keys	enter text on the page
2 	open the MMS Menu
3 	scroll to Insert
4 SELECT ()	display a list of items you can insert
5 	scroll to Picture, Voice Record, Sound, Video, New Page, Quick Note, or Contact Info
6 SELECT ()	select the file type
7 	highlight the file you want
8 SELECT ()	insert the file
	To add another page to the message, continue to step 9.
9 	open the MMS Menu to insert a new page
10 	scroll to Insert
11 SELECT ()	display a list of items you can insert





Press	To
12 	scroll to New Page
13 SELECT ()	insert a new page after the current page Repeat steps 1 to 8 to enter contents for the new page.

When you finish composing the multimedia message:

Press	To
1 OK ()	store the message
2 	scroll to a Send To option: Highlight an existing phonebook entry. Or highlight [One Time Entry] to enter one or more phone numbers or email addresses. Or highlight [New Phonebook Entry] to enter a number/address and add it to the phonebook.






Press	To
3 ADD (◀)	add a phonebook entry to the list of recipients
	Repeat steps 2 and 3 to add additional phonebook entries to the list.
or	
SELECT (◀)	select [One Time Entry] or [New Phonebook Entry]
4 DONE (◀)	store the numbers/addresses
5 	scroll to Subject
6 CHANGE (◀)	select Subject
7 keypad keys	enter the subject
8 OK (◀)	store the subject
9 CHANGE (◀)	select Attachments to attach a file to the message, if desired
10 	scroll to Picture, Sounds, or Video
11 SELECT (◀)	select the file type
12 	highlight the file you want
13 SELECT (◀)	attach the file
14 BACK (◀)	return to the message editor
15 	scroll to Receipt to request a receipt, if desired
16 CHANGE (◀)	select Receipt





Press	To
17 ADD (◀) or REMOVE (▶)	activate/deactivate the delivery report
18 DONE (◀)	return to the message editor
19 SEND (▶)	send the message
or 	view message details, save the message in the drafts folder, or cancel the message

Receiving a Multimedia Message



When you receive a multimedia message or letter, your phone displays the message indicator  and the **New Message** notification, and sounds an alert.

Press	To
READ (▶)	open the message

Multimedia messages that you receive can contain different media objects:

- Photos, pictures, and animations are displayed as you read the message.



- A sound file or video clip begins playing when its page is displayed. Use the volume keys to adjust the volume as the sound file or video clip plays.

Note: In a multimedia letter, you may have to highlight an indicator embedded in the text to play a sound file or video clip.

- Attached files are added to the end of the message. To open the attachment, highlight the file indicator/filename and press **VIEW** (◁) (image file type), **PLAY** (▷) (sound file or video clip), or **OPEN** (◁) (vObject such as a phonebook vCard or datebook vCalendar entry, or unknown file type).

Using a Bluetooth® Wireless Connection

Your phone supports Bluetooth wireless connections. You can set up a wireless link with a Bluetooth headset or handsfree car kit, or connect to a computer or hand-held device to exchange and synchronize data.

Turning Bluetooth On or Off

The preferred method for connecting your phone to a Bluetooth headset or handsfree car kit is to turn on Bluetooth on your phone, then connect your phone to the headset or car kit.

To turn Bluetooth on:

Find the Feature

☰ > **Settings** > **Connection**
 > **Bluetooth Link** > **Setup**
 > **Power** > **On**

This procedure turns Bluetooth on and leaves it on until you turn it off. When your phone's Bluetooth power is on, your handsfree accessory can automatically reconnect to the phone when you turn on the accessory or move it within range of the phone.

Note: To extend battery life, use the above procedure and set Bluetooth power to **Off** when not in use.



Searching for Other Devices

To connect your phone to a Bluetooth headset or handsfree device:

Find the Feature

- > Settings > Connection
- > Bluetooth Link
- > Handsfree
- > [Look For Devices]


If Bluetooth is turned off, your phone asks if you want to **Temporarily Power On?** Bluetooth. Press **YES** (◁) to proceed. Alternatively, set **Power** to **On** in the **Setup** menu to turn Bluetooth on and leave it on.

Your phone scans for and displays a list of device(s) located within range of the phone.

Note: If your phone is already connected to a device, you must disconnect from it to search for other devices.

To connect to a device, highlight the device name and press **SELECT** (◁).

The device may request permission to bond with your phone. Select **YES** (◁) and enter the correct PIN code to create a secure connection with the device. When the

connection is made, the Bluetooth indicator  displays in the home screen.



Sending Objects to Another Device

You can use a Bluetooth wireless connection to send a picture, sound, video, phonebook entry, datebook event, or bookmark from your phone to another phone, computer, or hand-held device.

Sending a Picture, Sound, or Video

Highlight the object on your phone that you want to send to the other device, then press  > **Copy**.

Select a recognized device name listed in the **Object Exchange** menu, or **[Look For Devices]** to search for the device to which you want to send the object.

Sending a Phonebook Entry, Datebook Event, or Bookmark

Highlight the item on your phone that you want to send to the other device, then press  > **Send**.


Select a recognized device name listed in the **Object Exchange** menu, or **[Look For Devices]** to search for the device to which you want to send the item.



Learning to Use Your Phone



See page 1 for a basic phone diagram.

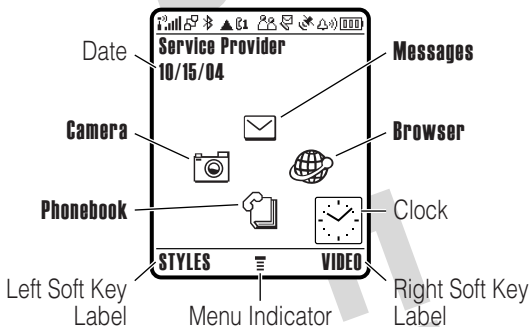

Using the Display

The *home screen* is displayed when you are **not** on a call or using the menu. You must be in the home screen to dial a phone number.



Press the 5-way navigation key  up, down, left, or right to select one of the menu feature icons displayed in the home screen. If you select a menu feature by mistake, press  to return to the home screen.

The menu indicator  shows that you can press the menu key  to enter the main menu.


Labels at the bottom corners of the display show the current soft key functions. Press the left soft key  or right soft key  to perform the indicated function.

 
Notes:


- Your home screen may appear different than shown. For example, the menu feature icons normally are hidden to allow a better view of the wallpaper image. You can still select the menu icons when they are hidden from view. To show or hide menu icons, see page 85.
- Your phone can display an analog or digital clock in the home screen (see page 84).
- Your phone's display normally is visible only when the display backlight is on, or when the display is viewed in direct sunlight. To extend battery life, the backlight turns off automatically when no activity is detected for a period of time. The backlight turns back on when you open the flip or press any key. To set the time that the backlight stays on, see page 65.
- To further extend battery life, you can set the display to turn off, in addition to the backlight, after a period of inactivity. The display turns back on when you open the flip or press any key. To set the time that the display stays on, see page 65.




The following status indicators can display:

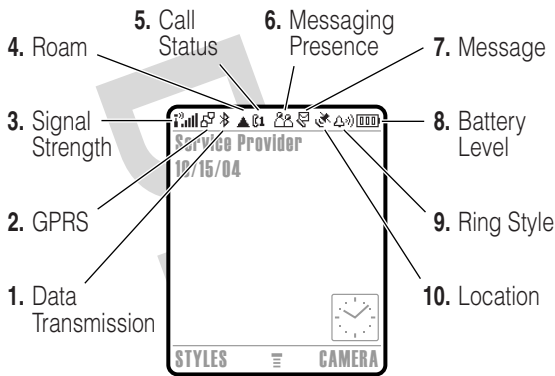



1. Data Transmission Indicator – Shows connection and data transmission status. The Bluetooth® wireless connection indicator  shows when a Bluetooth connection is active. Other indicators can include:

 
 = secure packet data transfer

 = unsecure packet data transfer

 = secure application connection

 = unsecure application connection

 = secure *Circuit Switch Data* (CSD) call

 = unsecure CSD call







2. GPRS Indicator – Shows that your phone is using a high-speed *General Packet Radio Service* (GPRS) network connection. GPRS allows faster data transfer speeds. Other


indicators can include:

 = GPRS PDP context active

 = GPRS packet data available

3. Signal Strength Indicator – Vertical bars show the strength of the network connection. You cannot make or receive calls when the no signal indicator  or not transmit indicator  is displayed.



4. Roam Indicator – The roam indicator  shows when your phone is seeking or using another network outside your home network. Other indicators can include:

 = 2.5G home


 = 2.5G roam

 
 = 2G home

 = 2G roam




 
5. Call Status Indicator – Shows the call status of your phone. For dual-line-enabled SIM cards, shows the current active phone line. Indicators can include:


 = phone in call

 = call forward on

 = line 1 active

 = line 2 active

  = line 1 active, call forward on

 = line 2 active, call forward on



6. Messaging Presence Indicator – Shows when instant messaging is active. Indicators can include:

= IM active

= available for IM

= busy

= invisible to IM

= available for phone calls

= offline

When a Java™ application is active, the Java midlet indicator displays in this location.



7. Message Indicator – Displays when you receive a new message. Indicators can include:

= text message

= voicemail message

= voicemail and text message

= IM message

= active chat session

8. Battery Level Indicator – Vertical bars show the battery charge level. Recharge the battery when **Low Battery** displays and the battery alert sounds.

9. Ring Style Indicator – Shows the ring style setting.

= loud ring

= soft ring

= vibrate

= vibrate and ring

= silent






10. Location Indicator – Your phone may be able to send location information to the network during an emergency call. Indicators show when your phone is sending location information:



 = location on


 = location off

Using the 5-Way Navigation Key




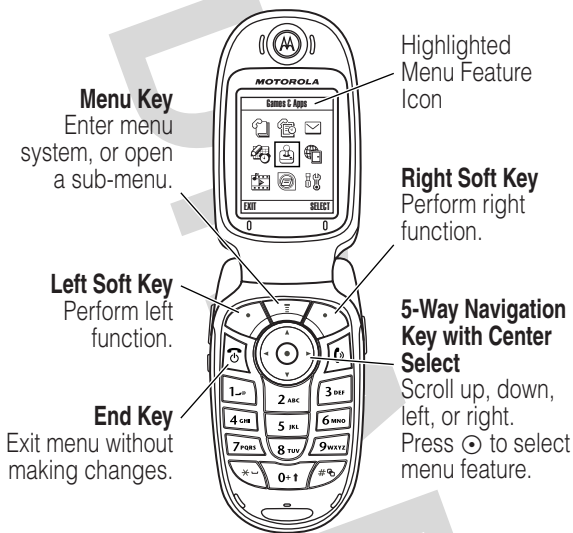
Press the 5-way navigation key  up, down, left, or right to scroll through the menu system, highlight menu items, change feature settings, and play games.

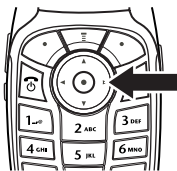


Press the *center select* key  in the center of the 5-way navigation key to select a highlighted menu item. The center select key usually performs the same function as the right soft key .



Using Menus










From the home screen, press  to enter the main menu.



Press  to scroll to and highlight a menu feature icon in the main menu. Press **SELECT** () or  to select the highlighted menu feature.




The following icons represent features that may display in the main menu, depending on your service provider and service subscription options.


Menu Icon	Feature	Menu Icon	Feature
	Phonebook		Recent Calls
	Messages		Office Tools
	Games & Apps		Web Access
	Multimedia		IM
	Settings		





Selecting a Feature Option

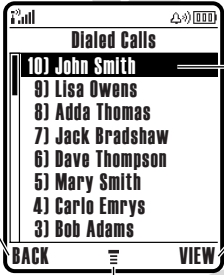Some features require you to select an option from a list:





Press **BACK** () to go back to previous screen.

Press **VIEW** () to view details of highlighted option.

Press  to open sub-menu.


Highlighted Option


- Press  to scroll up or down to highlight the option you want.


- In a numbered list, press a number key to highlight the option.
- In an alphabetized list, press a key repeatedly to cycle through the letters on the key and highlight the closest matching list option.
- When an option has a list of possible values, press  left or right to scroll through and select a value.
- When an option has a list of possible numeric values, press a number key to set the value.

Entering Text

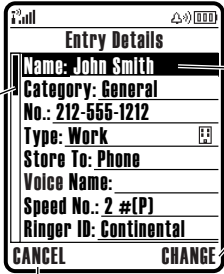

Some features require you to enter information.



Highlighted option. Press  to scroll to other options.


Press **CHANGE** () to set or edit highlighted option.

Scroll down to bottom of list to view more options.

Press **CANCEL** () to exit without making changes. **DONE** () displays when you enter or edit information.



The message center lets you compose text messages.

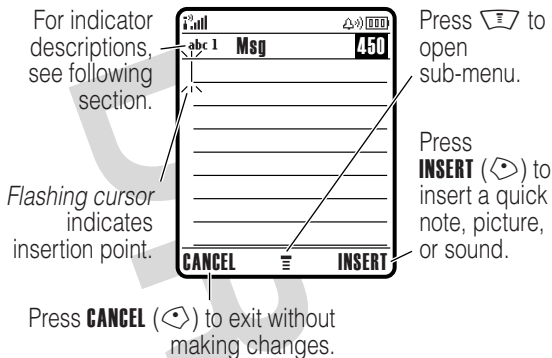

Selecting a Text Entry Mode

Multiple text entry modes make it easy for you to enter names, numbers, and messages. The mode you select remains active until you select another mode.

Press **☰** in any text entry screen to select one of the following entry modes:

- | | |
|------------------|---|
| Primary | The primary text entry mode (see below to set). |
| Numeric | Enter numbers only (see page 49). |
| Symbol | Enter symbols only (see page 49). |
| Secondary | The secondary text entry mode (see below to set). |

Alternatively, you can select a text entry mode in any text entry screen by pressing **☰** > **Entry Mode**.

 
Setting Primary and Secondary Text Entry Modes

You can set different primary and secondary text entry modes, and easily switch between modes when you enter data or compose a message.

Press  > **Entry Setup** in a text entry screen. Select **Primary Setup** or **Secondary Setup**, and choose:

- ITAP** iTAP® software predicts each word as you enter it, to simplify and speed up text entry.
- Tap** Enter letters and numbers by pressing a key one or more times.
- Tap Extended** Enter individual letters, numbers, and symbols by pressing a key one or more times.
- None** Hide the **Secondary** setting if you prefer not to set a secondary text entry mode (only available for **Secondary Setup**).

Using Capitalization

Press  in a text entry screen to change text case. Indicators at the top of the display show the capitalization setting:

abc = no capital letters

ABC = all capital letters

Abc = capitalize next letter only



Text Entry Mode Indicators

In **Primary** or **Secondary** text entry mode, indicators at the top of the display show the text entry setting:

Primary	Secondary	
1	2	Tap, no capital letters
1↑	2↑	Tap, capitalize next letter only
1↑	2↑	Tap, all capital letters
1	2	iTAP, no capital letters
1↑	2↑	iTAP, capitalize next letter only
1↑	2↑	iTAP, all capital letters




The following indicators identify **Numeric** or **Symbol** entry mode:


123 = numeric mode

@ = symbol mode





Using iTAP® Mode

iTAP mode lets you enter words using one keypress per letter. The iTAP software combines your keypresses into common words, and predicts each word as you enter it.

For example, to enter “the,” you would press   . The iTAP software recognizes that the most common word formed by this keypress combination is “the,” and predicts that “the” is the word you are spelling. Other common words or word fragments that can be spelled by the same keypress combination are presented as alternate choices at the bottom of the display.


If necessary, press  in a text entry screen to switch to **iTAP** mode. An indicator tells you which mode is active (see page 42). If **iTAP** mode is not set as the **Primary** or **Secondary** entry mode, see page 41.

Entering Words i iTAP Mode

Press	To
1 Keypad keys (one press per letter)	show possible letter combinations at the bottom of the display
2  left or right	highlight the combination you want
3  up	accept the predicted word completion, followed by a space
or 	enter the highlighted combination, followed by a space
or SELECT 	select the highlighted combination, with no space
	You can press keypad keys to add more letters at the end of the combination.



For example, if you press    , your phone displays:

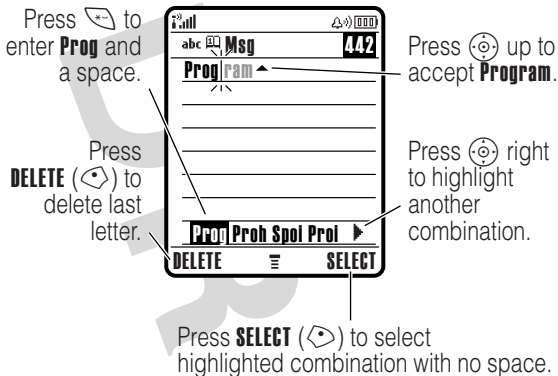



If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining characters.

Entering Novel Words in iTAP Mode

You may enter a word that the iTAP software does not recognize. If your word is not shown as a letter combination choice at the bottom of the display:

Action

- 1 Press **DELETE** () one or more times to delete letters, until you see a letter combination at the bottom of the display that matches the start of the word you want to enter.
- 2 Press  left or right to highlight the letter combination.

Action

- 3 Press **SELECT** (⏏) to select the letter combination.
- 4 Continue to enter letters and select letter combinations to spell the word.

Your phone automatically stores the novel word and displays it as an option the next time you enter its letter combination. When the memory space for storing novel words is filled, your phone deletes the oldest words to add new words.

Entering Numbers and Punctuation in iTAP Mode


To enter numbers quickly, press and hold a number key to temporarily switch to numeric mode. Press the number keys to enter the numbers you want. Enter a space to revert to **ITAP** mode.

Press  to enter punctuation or other characters as shown in the “Character Chart” on page 48.

Using Tap Mode





This is the basic text entry mode on your phone.

Tap mode cycles through the letters and number of the key you press. **Tap Extended** mode also cycles through additional symbols as shown in the “Character Chart” on page 48.




If necessary, press  in a text entry screen to switch to **Tap** mode. An indicator shows which mode is active (see page 42). If **Tap** or **Tap Extended** is not set as the **Primary** or **Secondary** entry mode, see page 41.




Tap Mode Text Entry Rules

- Press a keypad key repeatedly to cycle through its characters. For example, you would press  one time to enter “**1**,” two times to enter “**!**,” three times to enter “**@**,” or four times to enter “**2**.”
- After 2 seconds, **Tap** mode accepts the character, and the cursor moves to the next position.
 - The first character of every sentence is capitalized. If necessary, press  down to change the character to lowercase before the cursor moves to the next position.
- Press  to move the flashing cursor to enter or edit message text.
- If you do not want to save your text or text edits, press  to exit without saving.

Entering Words in Tap Mode


	Press	To
1	a keypad key one or more times	select a letter, number, or symbol
2	keypad keys	enter remaining characters
		Tip: Press  right to accept a word completion, or  to insert a space.
3	OK ()	store the text




In a text entry screen, you can press  to switch entry modes. An indicator shows which mode is active (see page 42). If **Tap** or **Tap Extended** is not set as the **Primary** or **Secondary** entry mode, see page 41.

For example, if you press  one time, your phone displays:

Character displays at insertion point.

Press **DELETE** () to delete last character entered.

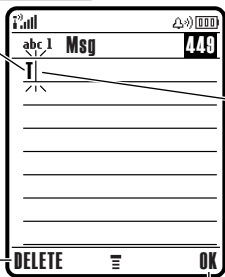


After 2 seconds, character is accepted and cursor moves to next position.

Press **OK** () to accept and store text.



When you enter 3 or more characters in a row, your phone may guess the rest of the word. For example, if you enter "prog" your phone might display:



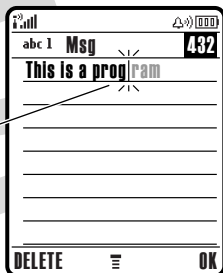






Press  right to accept **program**. Press  to reject it and enter a space after **prog**.






 
To enter a different word (such as **progress**), press keys to enter remaining characters.

Character Chart

   
Use this chart as a guide for entering characters with **Tap Extended** mode.


	. 1 ? ! , @ _ & ~ : ; " - () ' ÷ ÿ % £ \$ ¥ ¤ € + x * / \ [] = > < # §
	a b c 2 ä å á à â ã α β ç
	d e f 3 δ ε é è ê φ
	g h i 4 ï í î γ
	j k l 5 λ
	m n o 6 ñ ö ø ó ò ô õ ω
	p q r s 7 π β σ
	t u v 8 θ ü ú ù û
	w x y z 9 ξ ψ

	<i>change text case, for capital letters</i>
	<i>enter a space (hold to enter a return)</i>
	<i>change text entry mode (hold for default)</i>

Note: This chart may not reflect the exact character set available on your phone. In an email or Web address editor,  first shows common characters for that editor.

Using Numeric Mode

In a text entry screen, press  to switch entry modes until the numeric indicator **123** displays.

Press the number keys to enter the numbers you want. When you finish entering numbers, press  to switch to another entry mode.


Using Symbol Mode


In a text entry screen, press  to switch entry modes until the symbol indicator **@** displays.

Press	To
1 keypad keys (one press per symbol)	show possible symbol combinations at the bottom of the display



Press**To**

2  left or right highlight the combination you want

3 **SELECT** () select the highlighted combination

You can press keypad keys to add more symbols to the end of the combination.

or















enter the highlighted combination




Symbol Chart

Use this chart as a guide for entering characters with symbol mode.



	. ? ! , @ _ & ~ : ; " - () ' ` ; ; % £ \$ ¥ ¤ €
	@ _ \
	/ : ;
	" & '
	() [] { }
	¿ ¡ ~
	< > =
	\$ £ ¥ ¤ €
	# % *
	+ - x * / = > < # §

	<i>enter a space (hold to enter a return)</i>
	<i>change text entry mode (hold for default)</i>


Note: This chart may not reflect the exact character set available on your phone. In an email or Web address editor,  first shows common characters for that editor.


Deleting Letters and Words

Place the cursor to the right of the text you want to delete, and then:

Action
Press DELETE () to delete one letter at a time.
Hold DELETE () to delete the entire message.

Using the Smart Key


The *smart key* gives you another way to perform many basic phone functions. It anticipates the next action you are likely to perform. For example, when you highlight a menu item, you can press the smart key to select it. You can use the smart key to make and end calls, turn features on and off, and open your phonebook. The smart key usually performs the same function as the right soft key .

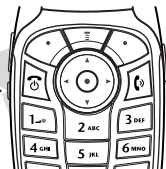

Using the External Display

When the flip is closed, the external display shows time and phone status information. It also displays messages to notify you of incoming calls and other events. You can perform the following functions in the external display.

Setting Phone Ring Style



Press	To
1 volume keys	scroll to Style
2 smart key	select a ring style
3 volume keys	return to the home screen

Returning an Unanswered Call

Your phone keeps a record of your unanswered calls and displays **X Missed Calls** in the external display.

Action
1 Press the smart key to display the received calls list.
or
Press the volume keys to dismiss the Missed Calls message.

Action

- 2 If necessary, press the volume keys to scroll through the list and highlight an unanswered call.
- 3 If a headset is connected to your phone, press and hold the smart key to call the number.

or

Press the smart key to exit without calling.

Note: Because the microphone and earpiece are unavailable when the phone is closed, you must use a headset or other handsfree device with this feature.



Using the Handsfree Speaker

When you activate your phone's integrated handsfree speaker, you can talk to the other party without holding the phone to your ear.

Press **SPEAKER** (📞) to turn the handsfree speaker on or off during a call.

When you turn the handsfree speaker on, your phone displays **Spkrphone On** in the home screen. The handsfree speaker remains on until you press **SPEAKER** (📞) again or end the call.

Note: The handsfree speaker is disabled when you connect your phone to a handsfree car kit or headset accessory.

Changing a Code, PIN, or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset these codes before you receive your phone.

If your service provider has **not** reset these codes, we recommend that you change them to prevent others from accessing your personal information. The unlock code must contain 4 digits, and the security code must contain 6 digits.

You can also reset your SIM card PIN code, PIN2 code, and/or call barring password if necessary.

To change a code or password:

Find the Feature



> **Settings** > **Security**
> **New Passwords**

Locking and Unlocking Your Phone

You can lock your phone manually or set the phone to lock automatically whenever you turn it off.


To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, **but you must unlock it to answer.**

You can make emergency calls on your phone even when it is locked (see page 73).

Locking Your Phone Manually

Find the Feature


 > **Settings** > **Security**
> **Phone Lock** > **Lock Now**

Press	To
1 keypad keys	enter your unlock code
2 OK ()	lock the phone

Unlocking Your Phone

Tip: Your phone's unlock code is originally set to 1234. Your service provider may reset the unlock code to the last 4 digits of your phone number.

At the **Enter Unlock Code** prompt:


Press	To
1 keypad keys	enter your unlock code
2 OK ()	unlock your phone

Setting Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off:

Find the Feature

 > **Settings** > **Security**
> **Phone Lock**
> **Automatic Lock** > **On**



Press	To
1 keypad keys	enter your unlock code
2 OK ()	activate automatic lock



If You Forget a Code, PIN, or Password

Note: Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset the unlock code to the last 4 digits of your phone number before you receive your phone.

If you forget your unlock code, try entering 1234 or the last 4 digits of your phone number. If that does not work, do the following at the **Enter Unlock Code** prompt:

Press	To
1 	display the unlock code bypass screen
2 keypad keys	enter your security code
3 OK ()	submit your security code

If you forget your security code, SIM card PIN code, PIN2 code, or call barring password, contact your service provider.

Using the Phonebook

This section describes basic phonebook operations. For more information about using the phonebook, see page 81 and the *More Here* guide (described on page 8).



Storing a Phone Number

Enter a phone number in the home screen, then press **STORE** (Ⓛ) to create a phonebook entry with that number. Press **DONE** (Ⓛ) to store the number by itself, or fill in the other fields as necessary to complete the entry.

If you assign a **Name** to the phonebook entry, you can select **MORE** to store another number (for example, a work number) for the same **Name**.

Recording a Voice Name

When creating a phonebook entry, scroll to **Voice Name** and press **RECORD** (Ⓛ). Press and release the voice key and say the entry's name (within 2 seconds). When prompted, press and release the voice key and repeat the name.

Note: This option is not available for entries stored on the SIM card.

Dialing a Number

Press  > **Phonebook**, highlight the phonebook entry, press  to call.



Shortcut: In the phonebook, press a keypad key one or more times to jump to entries that begin with the key's letters.

Voice Dialing a Number


Press and release the voice key, and say the entry's name (within 2 seconds).





Sorting Phonebook Entries

Press  > **Phonebook**, press  > **Setup** > **Sort by**, then select whether you want to sort the phonebook list by **Name**, **Speed No.**, **Voice Name**, or **Email**.

When sorting by name, you can view **All** numbers or just the **Primary** number for each name. To set the primary number for a name, see page 83.

Tip: In **Primary** number view mode, highlight a name and press  left or right to view other numbers associated with the name.

Setting a Picture ID for a Phonebook Entry



Press  > **Phonebook** > *entry*, press  > **Edit** > **Picture** > *picture name*.

Also see pages 3 and 21.

Setting Picture ID View

Press  > **Phonebook**, press  > **Setup** > **View by** > **Picture**.

Viewing Entries By Category

Press  > **Phonebook**, press  > **Categories**, then select whether you want to view **All** entries, entries in a predefined category (**Business**, **Personal**, **General**, **VIPs**), or entries in a category you created.

To set the category for a phonebook entry, see page 83.

Setting Up Your Phone

Setting a Ring Style

You can set the following ring styles on your phone:

- **Loud**
- **Soft**
- **Vibrate**
- **Vibe & Ring**
- **Silent**

Each ring style is a profile that uses a different set of ring tone alerts or vibration alerts to notify you of incoming calls, text messages, and other events. The **Silent** setting silences your phone until you set another ring style.

To set a ring style:

Find the Feature

 > **Settings** > **Ring Styles**
> **Style** > *style name*

The ring style indicator shows the current ring style setting (see page 35).








Changing the Call Alert

You can change the alert that a ring style uses to notify you of incoming calls or other events. Any changes you make are saved to the ring style profile.

Find the Feature

 > **Settings** > **Ring Styles**
> **Style Detail**

Note: *Style* represents the current ring style. You cannot set an alert for the **Silent** ring style setting.

Press	To
1 	scroll to Calls (scroll to Line 1 or Line 2 for dual-line phones)
2 CHANGE ()	select the event
3 	scroll to the alert you want
4 SELECT ()	select the alert
5 BACK ()	save the alert setting

The ring style profile contains additional settings for other events, and settings for ringer ID, ringer and keypad volume. You can change ring style profile settings as desired to personalize the ring style.

Setting the Time and Date

You must set the time and date to use the datebook.

Find the Feature

 > **Settings** > **Initial Setup**
> **Time and Date**

Setting a Wallpaper Image

Set a photo, picture, or animation as a wallpaper (background) image in your phone's home screen. The wallpaper image appears as a faint watermark in text and menu displays.

Find the Feature



> Settings > Personalize
> Wallpaper

Press	To
1	scroll to Picture
2 CHANGE (open the picture viewer
3 up or down	scroll to a picture/animation Scroll to (None) to turn off the wallpaper image.
4 SELECT (select the image
5	scroll to Layout
6 CHANGE (adjust the image layout
7	scroll to Center , Tile , or Fit-to-screen Center places the image in the center of the display. Tile fills the display with adjacent copies of the image. Fit-to-screen resizes the image, if necessary, to fit the display.
8 SELECT (confirm the layout setting
9 BACK (save wallpaper settings



Setting a Screen Saver Image

Set a photo, picture, or animation as a screen saver image. The screen saver image displays when the flip is open and no activity is detected for a period of time. If necessary, the image shrinks to fill the display. An animation repeats for 1 minute, then the first frame of the animation displays.

Tip: Turn off the screen saver to extend battery life.

Find the Feature



> **Settings** > **Personalize**
> **Screen Saver**

Press	To
1	scroll to Picture
2 CHANGE (open the picture viewer
3 up or down	scroll to a picture/animation Scroll to (None) to turn off the screen saver image.
4 SELECT (select the image
5	scroll to Delay
6 CHANGE (set the delay interval
7	scroll to the inactivity interval that triggers the screen saver
8 SELECT (confirm the delay setting
9 BACK (save screen saver settings



Changing Phone Skin

Change the look and feel of your phone's user interface by selecting a different skin setting.

Find the Feature



> Settings > Personalize
> Skin > skin

Your phone displays the new skin.

Setting a Phone Theme

A *phone theme* consists of a bundled set of image and sound files with a specific theme (such as a special event or cartoon character) that you can apply collectively to your phone. Phone themes typically include a wallpaper image, screen saver image, and ring tone. Your phone includes several preloaded themes. You can download and install additional themes on your phone.

Downloading a Theme

To download a theme from a Web page with the micro-browser, see page 97. When you install the theme, you can instantly apply its screen saver, wallpaper, and ring tone when your phone prompts you to **Apply Theme Now?**

Selecting a Theme

You can apply any of the themes installed on your phone.

Note: If one of a theme's components is not available, then a default setting is applied.

Find the Feature



> Multimedia > Themes
> theme






Deleting a Theme



You cannot delete the preloaded themes on your phone. To delete one or all of the themes that you have downloaded and installed:

Find the Feature

 > **Multimedia** > **Themes**
> *theme*

Press	To
1 	open the Theme menu
2 	scroll to Delete or Delete All
3 SELECT ()	select the option

Setting Answer Options





You can use additional, alternative methods to answer an incoming call.

Multi-Key answer by pressing any key
Open to Answer answer by opening the flip

To activate or deactivate an answer option:

Find the Feature

 > **Settings** > **In-Call Setup**
> **Answer Options**

Press	To
1 	scroll to Multi-Key or Open to Answer
2 CHANGE ()	select the option
3 	scroll to On or Off
4 SELECT ()	confirm the setting

Setting Display Brightness

Find the Feature

 > Settings > Initial Setup
> Brightness

Adjusting the Backlight

Set the amount of time that the display and keypad backlights remain on.

Find the Feature

 > Settings > Initial Setup
> Backlight

Note: Your phone's display normally is visible only when the display backlight is on, or when the display is viewed in direct sunlight. To extend battery life, the backlight turns off automatically when no activity is detected for a period of time. The backlight turns back on when you open the flip or press any key.

Setting Display Timeout

To further extend battery life, you can set the display to turn off (in addition to the backlight) when no activity is detected for a period of time..

Find the Feature

 > Settings > Initial Setup
> Display Timeout

You can set the display to stay on for 1 or 2 minutes, or set **Off** to disable display timeout.

Note: The display turns back on when you open the flip or press any key.



Storing Your Name and Phone Number



To store or edit your name and phone number information on your SIM card:

Find the Feature

 > **Settings** > **Phone Status**
> **My Tel. Numbers**

Shortcut: Press   from the home screen to view and edit your name and phone number(s).

If you do not know your phone number, contact your service provider.



Calling Features

For basic instructions on how to make and answer calls, see page 15.

Turning Off a Call Alert


You can turn off your phone's incoming call alert before answering the call.

Action

- 1 Press the volume keys to turn off the alert.
- 2 Open the flip (or press the button on a handsfree headset) to answer the call.



Viewing Recent Calls

Your phone keeps lists of incoming and outgoing calls, even for calls that did not connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added.





Shortcut: Press  from the home screen to view the dialed calls list.

Find the Feature

 > Recent Calls


Press	To
1 	scroll to Received Calls or Dialed Calls
2 SELECT ()	select the list






Press	To
3 	scroll to an entry Note: ✓ means the call connected.
4 	call the entry's number
or	
VIEW 	view entry details (such as time and date of call)
or	
	open the Last Calls Menu to perform other procedures

The **Last Calls Menu** can include the following options:

Option	Description
Store	Create a phonebook entry with the number in the No. field.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Hide ID/Show ID	Hide or show your caller ID for the next call.
Send Message	Open a new text message with the number in the To field.
Add Digits	Add digits after the number.
Attach Number	Attach a number from the phonebook or recent calls lists.

Option	Description
Send Tones	Send the number to the network as DTMF tones. Note: This option displays only during a call.
Talk then Fax	Talk and then send a fax in the same call (see page 92). 



Redialing a Number

Press	To
1 	view the dialed calls list
2 	scroll to the entry you want to call
3 	redial the number

Using Automatic Redial



When you receive a busy signal, your phone displays **Call Failed, Number Busy**.


Press	To
 or RETRY ()	redial the number




When the call goes through, your phone rings or vibrates one time, displays **Redial Successful**, and connects the call.



Returning an Unanswered Call

Your phone keeps a record of your unanswered calls, and displays:

- the missed call indicator 
- **X Missed Calls**, where X is the number of missed calls

	Press	To
1	VIEW ()	display the received calls list
2		select a call to return
3		make the call

Using the Notepad

The most recent set of digits entered on the keypad are stored in your phone's *notepad* memory. This can be a phone number that you called, or a number that you jot down during a call, for later use. To retrieve the number stored in the notepad:

Find the Feature

 > Recent Calls > Notepad



Press



or

STORE (☎)

or



To

call the number

create a phonebook entry
with the number in the **No.** field

open the **Dialing Menu** to attach
a number or insert a special
character

Putting a Call On Hold or Mute

Press

> **Hold**

or

> **Mute**

To

put all active calls on hold

mute all active calls



Using Call Waiting



When you are on a call, an alert tone sounds to indicate that you have received a second call.

Press	To
1	answer the new call
2 SWITCH (switch between calls
or	
LINK (connect the 2 calls
or	
> End Call On Hold	end the call on hold

If necessary, you must turn on call waiting to use the feature. To turn call waiting on or off:

Find the Feature

> **Settings** > **In-Call Setup**
> **Call Waiting**

Using Caller ID (Incoming Calls)



Calling line identification (caller ID) displays the phone number for incoming calls in your phone's external and internal displays.


The phone displays the caller's name (and picture ID, if available) when the name is stored in your phonebook, or **Incoming Call** when caller ID information is not available.

You can also set your phone to play a distinctive ringer ID for specific entries stored in your phonebook. For more information, see page 81.

Calling an Emergency Number


Your service provider programs one or more emergency phone numbers, such as 911 or 112, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

	Press	To
1	keypad keys	dial the emergency number
2		call the emergency number

 Dialing International Numbers



If your phone service includes international dialing, press and hold  to insert the local international access code (+) for the country from which you are calling. (Inserting + enables your phone to make an international call.) Then press the keypad keys as usual to dial the country code and phone number.





Calling With 1-Touch Dial

To call phonebook entries 1 through 9, press and hold the single-digit speed dial number for one second.

You can set 1-touch dial to call the entries in your phone memory phonebook or the SIM card phonebook:

Find the Feature

 > **Settings** > **Initial Setup**
> **1-Touch Dial**

Press	To
1 	scroll to the location you want
2 SELECT ()	select the location

Using Voicemail



Voicemail messages that you receive are stored on the network. To listen to your messages, you must call your voicemail phone number.

Note: Your service provider may include additional information about using this feature.


Listening to Voicemail Messages

Find the Feature

 > **Messages** > **VoiceMail**

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

Receiving a Voicemail Message

When you receive a voicemail message, your phone displays the voicemail message indicator  and the **New VoiceMail** notification.

Press	To
CALL ()	listen to the message

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

Storing Your Voicemail Number

If necessary, use the following procedure to store your voicemail phone number on your phone. Usually, your service provider has already done this for you.


Find the Feature



> **Messages**



> **VoiceMail Setup**

Press	To
1 keypad keys	enter your voicemail number
2 OK ()	store the number

Note: You cannot store a **p** (pause), **w** (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then, you can use the entry to call your voicemail. For more information about these characters, see the *More Here* guide.



Changing the Active Line



Change the active phone line to make and receive calls from your other phone number.

Note: This feature is available only for dual-line-enabled SIM cards.

Find the Feature

 > **Settings** > **Phone Status**
> **Active Line**

The active line indicator in the display shows the current active phone line (see page 34).



Phone Features

Main Menu

This is the standard main menu layout. **Menu organization and feature names may vary on your phone.** Not all features may be available on your phone.

Phonebook

Recent Calls

- Received Calls
- Dialed Calls
- Notepad
- Call Times
- Call Cost
- Data Times
- Data Volumes

Games & Apps

Web Access

- Browser
- Web Shortcuts
- Stored Pages
- History
- Go To URL
- Browser Setup
- Web Sessions

Messages

- Create Message
- Email Msgs
- Message Inbox
- Voicemail
- Browser Msgs
- Info Services
- Quick Notes
- Outbox
- Drafts
- MMS Templates

Multimedia

- Video Camera
- Videos
- Camera
- Pictures
- Themes
- Sounds
- MotoMixer

IM

- ### Settings
- (see next page)

Office Tools

- SIM Apps
- Calculator
- Datebook
- Shortcuts
- Voice Dial
- Voice Records
- Alarm Clock
- Dialing Services
 - Fixed Dial
 - Service Dial
 - Quick Dial
- Chat



Settings Menu



Personalize

- Home Screen
- Main Menu
- Color Style
- Greeting
- Wallpaper
- Screen Saver
- Quick Dial



Ring Styles

- Style
- Style Detail



Connection

- Bluetooth Link
- Sync



Call Forward

- Voice Calls
- Fax Calls
- Data Calls
- Cancel All
- Forward Status



In-Call Setup

- In-Call Timer
- Call Cost Setup
- My Caller ID
- Talk and Fax
- Answer Options
- Call Waiting



Initial Setup

- Time and Date
- 1-Touch Dial
- Display Timeout
- Backlight
- TTY Setup
- Scroll
- Language
- Brightness
- DTMF
- Master Reset
- Master Clear



Phone Status

- My Tel. Numbers
- Credit Info/Available
- Active Line
- Battery Meter
- Other Information



Headset

- Auto Answer
- Voice Dial



Car Settings

- Auto Answer
- Auto Handsfree
- Power-Off Delay
- Charger Time



Network

- New Network
- Network Setup
- Available Networks
- My Network List
- Service Tone
- Call Drop Tone



Security

- Phone Lock
- Lock Application
- Fixed Dial
- Call Barring
- SIM PIN
- New Passwords
- Certificate Mgmt
















Java Settings

- Java App Loader
- Java System
- Delete All Apps
- App Vibration
- App Volume
- App Priority
- App Backlight
- Set Standby App
- DNS IP








Feature Quick Reference

This section helps you locate and use additional phone features that are not described in this guide. For more detailed information, see the *More Here* guide (described on page 8).







Calling Features

Feature	Description	
Conference Call	During a call: Dial next number, press  , press LINK ().	
Transferring a Call	During a call:  > Transfer , dial transfer number, press  .	
Caller ID (Outgoing)	Hide or show your caller ID phone number for the next outgoing call:  > Settings > In-Call Setup > My Caller ID. > Next Call Only > Hide ID or Show ID	
Attaching a Number	Dial an area code or prefix for a phonebook number, then:  > Attach Number	
Speed Dial	Speed dial and call a phonebook entry: Enter speed dial number, press  , press  .	












Feature	Description
Call Forwarding	Set up or cancel call forwarding:  > Settings > Call Forward 
Call Barring	Restrict outgoing or incoming calls:  > Settings > Security > Call Barring 
TTY Calls	Set up your phone for use with an optional TTY device:  > Settings > Initial Setup > TTY Setup  

Messages

Feature	Description
Send Text Message	Send a text message:  > Messages > Create Message > New Short Message 
Send Multimedia Message	Send a multimedia message:  > Messages > Create Message > New Multimedia Msg 
Send Letter	Send a multimedia letter:  > Messages > Create Message > New Letter 























Feature	Description
Use MMS Template	<p>Open an MMS template with preloaded media:</p> <p> > Messages > MMS Templates</p> 
Read New Message	<p>Read a new text or multimedia message that you have received:</p> <p>Press READ () when the New Message notification is displayed.</p> 
Received Messages	<p>Read received messages:</p> <p> > Messages > Message Inbox</p> <p>Tip: Press  to perform various operations on the message.</p> 
Store Message Objects	<p>Go to a multimedia message page, or highlight an object in a letter, then:</p> <p> > Store</p> 

Phonebook



Feature	Description
Add New Entry	<p>Add a new entry to the phonebook:</p> <p> > Phonebook  > New > Phone Number or Email Address</p>




 
 
 
Feature	Description
Dial Number	Call a number stored in the phonebook:  > Phonebook , highlight the phonebook entry, press  to call
Voice Dial Number	Voice dial a number stored in the phonebook: Press and release the voice key, and say the entry's name (within 2 seconds).
Set Ringer ID for Entry	Assign a distinctive ringer alert to a phonebook entry:  > Phonebook > <i>entry</i>  > Edit > Ringer ID > <i>ringer name</i> Note: The Ringer ID option is not available for entries stored on the SIM card.
Set Picture ID for Entry	Assign a photo or picture to a phonebook entry:  > Phonebook > <i>entry</i>  > Edit > Picture > <i>picture name</i> Note: The Picture option is not available for entries stored on the SIM card.
Set Picture ID View	View phonebook entries as text list, or with picture caller ID photos:  > Phonebook  > Setup > View by > <i>view name</i>

Feature	Description
Set Category for Entry	Set the category for a phonebook entry:  > Phonebook > <i>entry</i>  > Edit > Category > <i>category name</i> Note: The Category option is not available for entries stored on the SIM card.
Set Category View	Set a phonebook category view:  > Phonebook  > Categories > <i>category view</i>
Sort Phonebook List	Set the order in which phonebook entries are listed:  > Phonebook  > Setup > Sort by > <i>sort order</i>
Set Primary Number	Set the primary number for a phonebook entry with multiple numbers:  > Phonebook , highlight the entry, press  > Set Primary > <i>phone number</i> .
Copy Phonebook Entry	Copy a phonebook entry between the phone and SIM card:  > Phonebook , highlight the entry, press  > Copy > Entries > To
Send Phonebook Entry to Another Device	Send a phonebook entry to another phone, computer, or device:  > Phonebook , highlight the entry, press  > Send









Feature	Description
Create Group Mailing List	Create a group mailing list as a phonebook entry:  > Phonebook  > New > Mailing List

Personalizing Features

Feature	Description
Ringer IDs	Activate distinctive ring alerts assigned to phonebook entries:  > Settings > Ring Styles > Style Detail > Ringer IDs
Ring Volume	Set ringer volume:  > Settings > Ring Styles > Style Detail > Ring Volume
Keypad Volume	Set keypad keypress volume:  > Settings > Ring Styles > Style Detail > Key Volume
Reminders	Set reminder alerts for messages that you receive:  > Settings > Ring Styles > Style Detail > Reminders
Clock View	Display an analog clock or digital time readout in the home screen:  > Settings > Personalize > Home Screen > Clock








Feature	Description
Menu View	Display the main menu as graphic icons or as a text-based list:  > Settings > Personalize > Main Menu > View
Main Menu	Reorder your phone's main menu:  > Settings > Personalize > Main Menu > Reorder
Show or Hide Menu Icons	Show or hide menu feature icons in the home screen:  > Settings > Personalize > Home Screen > Home Keys > Icons
Change Soft Keys & Menu Icons	Change soft key labels and menu feature icons in the home screen  > Settings > Personalize > Home Screen > Home Keys
Shortcuts	Create a shortcut to a menu item: Highlight the menu item, then press and hold  . Select a shortcut:  > Office Tools > Shortcuts > <i>shortcut name</i>


Instant Messaging

Feature	Description
Log In	Log in to instant messaging:  > IM > Log In



Feature	Description
Find Others Online	After you sign on: Select Contact List to see a list of other users. 
Start Conversation	Start a conversation: From your Contact List , highlight a name in Online Contacts , press SEND IM (📎). 
Open Active Conversation	Open a conversation in progress: From your Contact List , highlight a name in Conversations , press VIEW (📎). 
End Conversation	From the conversation display: 📄 > End Conversation 
Log Out	Log out of instant messaging: Select Log Out from the IM Online menu. 

Chat

Feature	Description
Start Chat	Start a new chat session: 📄 > Chat 📄 > New Chat 



Feature	Description
Receive Chat Request	When you receive a chat request: Press ACCEPT (☞) or IGNORE (☞).
End Chat	During a chat session: ☞ > End Chat



Email


Feature	Description
Send Email Message	Send an email message: ☞ > Messages > Create Message > New Email
Read Email Message	Read a new email message that you have received: Press READ (☞).








Menu Features

Feature	Description
Language	Set menu language: ☞ > Settings > Initial Setup > Language
Master Reset	Reset all options <i>except</i> unlock code, security code, and lifetime timer: ☞ > Settings > Initial Setup > Master Reset






Feature	Description
Master Clear	<p>Clear all user settings and entries <i>except</i> SIM card information, erase all downloaded pictures and sound files, reset all options <i>except</i> unlock code, security code, and lifetime timer:</p> <p> > Settings > Initial Setup > Master Clear</p> <p>Caution: Master clear erases all user-entered information (including phonebook and datebook entries) and user-downloaded content (including photos and sounds) stored in your phone's memory. After you erase the information, you cannot recover it.</p>

Special Dialing Features


Feature	Description
Fixed Dial	<p>Turn fixed dialing on or off:</p> <p> > Settings > Security > Fixed Dial</p> <p>Use the fixed dial list:</p> <p> > Office Tools > Dialing Services > Fixed Dial</p> 
Service Dial	<p>Dial service phone numbers:</p> <p> > Office Tools > Dialing Services > Service Dial</p> 



Feature	Description
Quick Dial	Dial preprogrammed phone numbers:  > Office Tools > Dialing Services > Quick Dial
DTMF Tones	Activate DTMF tones:  > Settings > Initial Setup > DTMF Send DTMF tones during a call: Press number keys. Send stored numbers as DTMF tones during a call: Highlight a number in the phonebook or recent calls lists, then press  > Send Tones .









Call Monitoring

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For






billing information, please contact your service provider directly.











Feature	Description
Call Times	View call timers:  > Recent Calls > Call Times 
In-Call Timer	Display time or cost information during a call:  > Settings > In-Call Setup > In-Call Timer 
Call Cost	View call cost trackers:  > Recent Calls > Call Cost 

Handsfree Features

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.






Feature	Description
Speakerphone	Activate a connected external speakerphone during a call: Press SPEAKER () (if available) or  > Spkrphone On. 



Feature	Description
Auto Answer (car kit or headset)	Automatically answer calls when connected to a car kit or headset:  > Settings > Car Settings or Headset > Auto Answer 
Voice Dial (headset)	Enable voice dial with headset send/end key:  > Settings > Headset > Voice Dial 
Auto Handsfree (car kit)	Automatically route calls to a car kit when connected:  > Settings > Car Settings > Auto Handsfree 
Power-Off Delay (car kit)	Set the phone to stay on for a period of time after the ignition is switched off:  > Settings > Car Settings > Power-Off Delay 
Charger Time (car kit)	Charge the phone for a period of time after the ignition is switched off:  > Settings > Car Settings > Charger Time 








 





Data and Fax Calls

Feature	Description	
Send Data or Fax	Connect your phone to the device, then place the call through the device application.	
Receive Data or Fax	Connect your phone to the device, then answer the call through the device application.	
Talk Then Fax	Connect your phone to the device, enter the number, press  > Dialing Menu > Talk Then Fax , then press  to make the call.	



Bluetooth® Wireless Connections

Feature	Description	
Make Phone Visible to Other Device	Allow a Bluetooth device to discover your phone:  > Settings > Connection > Bluetooth Link > Setup > Find Me	




Feature	Description
Connect to Recognized Device	Connect to a recognized handsfree device:  > Settings > Connection > Bluetooth Link > Handsfree > <i>device name</i> 
Disconnect From Device	Disconnect from a device: Highlight the device name and press DROP (↵). 
Switch to Device During Call	Switch to a headset or car kit during a call:  > Use Bluetooth 
Send Multimedia Object to Device	Send a multimedia object to another device: Highlight the object, press  > Copy , select the device name. 
Move Multimedia Object to Device	Move a multimedia object to another device: Highlight the object, press  > Move , select the device name. Caution: Moving an object deletes the original object from your phone. 
Send Data to Another Device	Copy a phonebook entry, datebook event, or bookmark to another device: Highlight the item, press  > Send . 



Feature	Description
Edit Device Properties	Edit the properties of a recognized device: Highlight the device name and press  > Edit .
Set Bluetooth Options	Set your phone's Bluetooth options:  > Settings > Connection > Bluetooth Link > Setup






 



Network Features











Feature	Description
Network Settings	View network information and adjust network settings:  > Settings > Network







Personal Organizer Features

Feature	Description
Set Alarm	Set an alarm:  > Office Tools > Alarm Clock
Turn Off Alarm	Turn off alarm: Press DISABLE () or  Set 8-minute delay: Press SNOOZE ()
Add New Datebook Event	Add a new event to the datebook:  > Office Tools > Datebook , highlight the day, press  , press  > New






Feature	Description
View Datebook Event	View or edit event details:  > Office Tools > Datebook , highlight the day, press  , press VIEW ()
Event Reminder	View an event reminder: VIEW () Dismiss an event reminder: EXIT ()
Copy Datebook Event to Another Device	Send a datebook event to another phone, computer, or device:  > Office Tools > Datebook , highlight the day, press  , highlight the event, press  > Send
Create Voice Record	Create a voice record: Press and hold voice key, speak into the phone, release voice key. Note: Recording phone calls is subject to varying state and federal laws regarding privacy and recording of conversations.
Play Voice Record	Play back a voice record:  > Office Tools > Voice Records > <i>voice record</i>
Calculator	Calculate numbers:  > Office Tools > Calculator

 













Feature	Description
Currency Converter	Convert currency:  > Office Tools > Calculator  > Exchange Rate Enter exchange rate, press OK () enter amount, press  > Convert Currency.

  Security








Feature	Description
SIM PIN	Lock or unlock the SIM card:  > Settings > Security > SIM PIN Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays SIM Blocked .
Lock Application	Lock phone applications:  > Settings > Security > Lock Application
Certificate Management	Enable or disable security certificates stored on your phone:  > Settings > Security > Certificate Mgmt



News and Entertainment

Feature	Description
Manage Video Clips	Manage video clips:  > Multimedia > Videos
Manage Pictures	Manage pictures and animations:  > Multimedia > Pictures 
Manage Sounds	Manage ring tones and music that you have downloaded or composed:  > Multimedia > Sounds
Edit Sounds With MotoMixer	Edit MIDI-based sound files that you can use with your phone:  > Multimedia > MotoMixer > [New Mix] or <i>mix file name</i>
Launch Micro-Browser	Start a micro-browser session:  > Web Access > Browser 
Download Objects from Web Page	Download a picture, sound, or phone theme from a Web page: Highlight the file, press SELECT () , press STORE () . 
Web Sessions	Select or create a Web session:  > Web Access > Web Sessions 



Feature	Description
Download Game or Application (Micro-Browser)	Download a Java™ game or application with the micro-browser:  > Web Access > Browser , highlight the application, press SELECT (◊), press DOWNLOAD (◊). 
Download Game or Application (Computer)	Download a Java game or application from a computer: Press  > Settings > Java Settings > Java App Loader , connect your phone to the computer when prompted. 
Launch Game or Application	Launch a Java game or application:  > Games & Apps , highlight the application, press SELECT (◊). 
Create Ring Tones	Create ring tones that you can use with your phone:  > Multimedia > Sounds > (New iMelody)



Specific Absorption Rate Data

The model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.¹ Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when

tested for use at the ear is ____ W/kg, and when worn on the body, as described in this user guide, is ____ W/kg. The SAR value for this product in its data transmission mode (body-worn use) is ____ W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

Index

A

accessories 9, 53, 80

active line, changing 76

alarm clock 94

alert

creating 98

defined 59

downloading 3

setting 15, 52, 59, 60

turning off 15, 67

animation

downloading 3, 81, 97

screen saver 62

viewing 97

wallpaper 61

answering a call 16, 64

application, locking and

unlocking 96

automatic redial 69

B

backlight 65

barring calls 80

battery

charging 13

extending battery life 10,
29, 32, 62, 65

installing 12

level indicator 35

Bluetooth 3, 28, 83, 92, 93,
94, 95

brightness, setting 65

browser. *See* micro-browser

C

calculator 95

call

adding digits after phone
number 68

alert, setting 60

alert, turning off 15, 67

answer options 64

answering 16

barring 80

barring password,
changing 54

call waiting 72

costs 90

deleting 67

dialed calls list 67

dialing 15

emergency number 73

ending 15, 16

forwarding 80

handsfree speaker 53

- call (continued)
 - hold 71
 - international access code
 - 73
 - making 15
 - received calls list 67
 - receiving 16
 - recent calls 67
 - ring style 15, 52, 59
 - speakerphone 90
 - storing 67
 - talk then fax 69
 - timers 90
 - transferring 79
 - unanswered call 52, 70
 - Call Failed, Number Busy
 - message 69
 - call status indicator 34
 - call waiting 72
 - caller ID 3, 22, 58, 68, 72, 79, 82
 - calling line identification.
 - See caller ID
 - camera
 - self portrait 22
 - taking a photo 2, 21
 - car kit 90
 - center select key 36
 - certificate management 96
 - character chart 48
 - chat 86
 - clock
 - illustration 31
 - selecting analog or digital
 - 84
 - setting 60
 - codes
 - changing 54
 - default 54, 55, 56
 - forgetting 56
 - conference call 79
 - cursor 40
 - customizing the menu 85
- ## D
- data call 92
 - date, setting 60
 - datebook 94, 95
 - deleting a call 67
 - dialed calls list 67
 - dialing a number 15, 88, 89
 - display
 - backlight 65
 - brightness 65
 - description 31
 - home screen 31
 - language 87
 - personalizing 85
 - skin 63
 - timeout 65
 - distinctive ringer alert 84
 - drafts folder 27

DTMF tones
 activating 89
 sending 69, 89

E

earpiece volume 15
email 84, 87
emergency number 73
end key 15, 16
ending a call 15, 16
Enter Unlock Code
 message 55, 56
event alert 60
external display 52

F

fax call 69, 92
5-way navigation key 36
fixed dial 88
flashing cursor 40
flip
 external display 52
 open to answer 16, 64
 screen saver 62
forwarding calls 80

G

games 98
GPRS indicator 34
groove tunes 97

H

handsfree speaker 53
handsfree use 90
headset
 accessory, using 90
 using with external
 display 53
Hide ID feature 68
hold a call 71
home keys, personalizing
 85
home screen
 defined 31
 selecting clock view 84

I

IM 85
incoming call
 answering 16
 forwarding 80
Incoming Call message 72
indicators
 battery level 35
 call status 34
 GPRS 34
 Java midlet 35
 location 36
 loud ring style 35
 message 35
 message waiting 27
 messaging presence 35

indicators (continued)
missed call 70
ring style 35
roam 34
signal strength 34
silent alert 35
soft ring style 35
text case 42
text entry mode 35, 42
transmission 33
vibrate alert 35
vibrate and ring style 35
voicemail message 35,

75

instant messaging. See IM

international access code

73

iTAP software 42

J

Java applications 98

Java midlet indicator 35

K

key

center select 36

end 15, 16

5-way navigation 36

left soft key 32, 85

menu 9

power 14

right soft key 32, 85

send 15, 16, 67

smart 51, 52

volume control 15

keypad

answering calls 64

volume, setting 84

L

language, setting 87

left soft key

functions 32

personalizing 85

line, changing 76

location indicator 36

lock

application 96

phone 54

SIM card 96

Low Battery message 35

M

making a call 15

master clear 88

master reset 87

menu

entering text 39

icons, changing in home
screen 85

icons, converting to text
85

- icons, described 31
 - icons, showing or hiding 85
 - language, setting 87
 - lists 38
 - navigating 37
 - personalizing 85
 - rearranging features 85
 - using features 38
 - view, changing 85
 - menu key 9
 - message
 - chat 86
 - draft 27
 - menu feature icon 31
 - MMS template 81
 - MMS, defined 23
 - multimedia letter 80
 - multimedia message 80
 - reading 81
 - reminders, turning on/off 84
 - text 80, 81
 - message indicator 35
 - message waiting indicator 27
 - messages menu feature icon 31
 - messaging presence indicator 35
 - micro-browser
 - browser setup 97
 - Java applications 98
 - menu feature icon 31
 - using 97
 - Web sessions 97
 - missed call indicator 70
 - Missed Calls message 52, 70
 - MMS template 81
 - MMS. *See* message
 - More Here* guide 8
 - MotoMixer 97
 - multimedia letter, sending 80
 - multimedia message
 - reading 81
 - receiving 3, 27
 - sending 3, 23, 80
 - multimedia messaging service. *See* message
 - music
 - downloading 81, 97
 - managing 97
 - my telephone number 16, 66
- ## N
- network settings 94
 - notepad 70

number
 storing your number 66
 viewing your number 16
numbers, entering 49

O

object exchange 30
1-touch dial
 using 74
open to answer 64
optional accessory, defined
 9
optional feature, defined 9

P

passwords. *See* codes

phone

 active line, changing 76
 alert, setting 60
 alert, turning off 15, 67
 answer options 64
 call status indicator 34
 clear stored information
 88
 codes 54
 date, setting 60
 flip 16
 keypad, answering calls
 64
 language, setting 87
 locking 54

 network settings 94
 reset all options 87
 ring style 15, 52, 59
 security code 54
 skin 63
 time, setting 60
 turning on/off 14
 unlock code 54
 unlocking 14, 54, 55, 56

phone number

 active line, changing 76
 adding digits after 68
 attaching 2 numbers 68
 attaching to prefix 79
 call status indicator 34
 international access code
 73
 redialing 69
 storing in phonebook 81
 storing your number 66
 viewing your number 16

phone theme 63

phonebook

 adding an entry 81
 attaching 2 numbers 68
 attaching a number 79
 category views 58, 83
 copying entries 83
 dialing a number 82
 entry category 83
 group mailing list 84
 1-touch dial 74

- picture ID 3, 22, 58, 72, 82
 - primary number, setting 83
 - ringer ID 82, 84
 - sending entries 83
 - sorting entries 58, 83
 - speed dial number 79
 - voice dialing 82
 - photo
 - downloading 3, 81, 97
 - picture ID 3, 22, 58, 72, 82
 - self portrait 22
 - sending 3, 21
 - taking 2, 21
 - picture
 - downloading 3, 81, 97
 - screen saver 62
 - viewing 97
 - wallpaper 61
 - picture ID 3, 22, 58, 72, 82
 - PIN code
 - changing 54
 - entering 96
 - PIN2 code, changing 54
 - power key 14
 - predictive text entry 42
 - primary text entry mode 40
- Q**
- quick dial 89
- R**
- received calls list 67
 - recent calls 67
 - redial
 - automatic redial 69
 - busy number 69
 - reference guide 8
 - reminders
 - turning on/off 84
 - right soft key
 - functions 32
 - personalizing 85
 - ring style indicators 35
 - ring style, setting 15, 52, 59
 - ring tone
 - creating 98
 - downloading 3, 81, 97
 - editing with MotoMixer 97
 - managing 97
 - ringer ID
 - setting 82
 - turning on/off 84
 - ringer volume, setting 15, 84
 - roam indicator 34

S

- screen saver 62
- secondary text entry mode 40
- security code
 - changing 54
 - default 54
 - forgetting 56
- send key 15, 16, 67
- service dial 88
- shortcuts 85
- Show ID feature 68
- signal strength indicator 34
- silent alert indicator 35
- silent alert, setting 15, 52, 59, 60
- SIM Blocked message 14, 96
- SIM card
 - defined 9
 - installing 9
 - locking 96
 - PIN code entry 14
 - PIN code, changing 54
 - PIN2 code, changing 54
 - precautions 10
 - SIM Blocked message 14, 96
- SIM PIN code
 - changing 54
 - entering 96
 - SIM PIN2 code, changing 54
- skin 63
- smart key 51, 52
- soft keys
 - functions 32
 - personalizing 85
- song
 - downloading 81, 97
 - managing 97
- sound
 - creating 98
 - downloading 3, 81, 97
 - managing 97
- Speaker On message 53
- speakerphone
 - activating 90
 - automatic answer 91
- speed dial 79
- standby time, increasing 62, 65
- storing a call 67
- symbol chart 50
- symbols, entering 49

T

- talk then fax call 69
- tap mode text entry 45
- telephone number
 - storing your number 66
 - viewing your number 16

text

- capitalization, changing 41
- character chart 48
- entering 39
- entry mode, selecting 40
- entry mode, setup 41
- flashing cursor 40
- iTAP software predictive text entry 42
- numeric mode 49
- symbol chart 50
- symbol mode 49
- tap mode 45
- text case indicator 42
- text entry mode
 - selecting 40
 - setup 41
- text entry mode indicator 35, 42
- theme 63
- time, setting 60
- timers 90
- transfer a call 79
- transmission indicator 33
- travel charger 13
- TTY device 80

U

- unlock
 - application 96
 - phone 54
- unlock code
 - bypassing 56
 - changing 54
 - default 54, 55, 56
 - entering 14, 55
 - forgetting 56

V

- vibrate alert
 - setting 15, 52, 59
 - turning off 15, 67
- video clip
 - downloading 3, 81, 97
 - managing 97
 - playing 2, 18
 - recording 2, 17
- vObject, defined 28
- voice dial 82, 91
- voice key
 - dialing a number 82
- voice record 95
- voicemail 74
- voicemail message indicator 35, 75

volume

earpiece 15

keypad 84

ringer 15, 84

volume keys 15

W

wallpaper 61

Web pages 97

Web sessions 97