

Nokia 6021 User's Guide

DECLARATION OF CONFORMITY

We, NOKIA CORPORATION declare under our sole responsibility that the product RM-94 is in conformity with the provisions of the following Council Directive: 1999/5/EC. A copy of the Declaration of Conformity can be found from http://www.nokia.com/phones/declaration_of_conformity/.

CE 168

Copyright © 2005 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia, Nokia Connecting People, Xpress-on and Pop-Port are trademarks or registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Nokia tune is a sound mark of Nokia Corporation.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.

US Patent No 5818437 and other pending patents. T9 text input software Copyright (C) 1997-2004. Tegic Communications, Inc. All rights reserved.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.



Java is a trademark of Sun Microsystems, Inc.

USE OF THIS PRODUCT IN ANY MANNER THAT COMPLIES WITH THE MPEG-4 VISUAL STANDARD IS PROHIBITED, EXCEPT FOR USE DIRECTLY RELATED TO (A) DATA OR INFORMATION (i) GENERATED BY AND OBTAINED WITHOUT CHARGE FROM A CONSUMER NOT THEREBY ENGAGED IN A BUSINESS ENTERPRISE, AND (ii) FOR PERSONAL USE ONLY; AND (B) OTHER USES SPECIFICALLY AND SEPARATELY LICENSED BY MPEG LA, L.L.C.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region. Please check with the Nokia dealer nearest to you.

Export Controls

This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

Issue 1

Content

FOR YOUR SAFETY	vi
General information	viii
About your device.....	viii
Overview of the functions of the phone	viii
Shared memory	ix
Nokia PC Suite software.....	ix
Access codes	ix
Security code (5 to 10 digits).....	ix
PIN and PIN2 codes (4 to 8 digits), module PIN, and signing PIN.....	x
PUK and PUK2 codes (8 digits)	x
Barring password (4 digits).....	x
Wallet code (4 to 10 digits).....	x
Network services.....	x
Configuration settings service	xi
Downloading content and applications.....	xi
Nokia support on the Web.....	xii
1. Getting started	1
Installing the SIM card and the battery	1
Charging the battery	2
Switching the phone on and off ...	3
Normal operating position.....	3
Putting on a wrist strap.....	3
2. Your phone	4
Keys and connectors.....	4
Standby mode.....	5
Wallpaper	6
Screen saver	6
Power saving	6
Essential indicators	6
Keypad lock (Keyguard)	7
3. Call functions	8
Making a call	8
Speed dialling a phone number.....	8
Answering or rejecting an incoming call	8
Call waiting	9
Options during a call	9
Writing text.....	9
Setting predictive text input on or off.....	9
Using predictive text input	10
Using traditional text input.....	10
Tips for writing text	11
4. Using the menu	12
Accessing a menu function	12
List of menu functions.....	13
5. Menu functions	17
Messages.....	17
Text messages (SMS)	17
Multimedia messages (MMS).....	20
Flash messages	23
Instant messages (Chat).....	24
E-mail application	29
Voice messages.....	30
Info messages	31
Service commands.....	31
Deleting all messages from a folder	31
Message settings.....	31
Message counter.....	34

Call register	34	Gallery.....	55
Recent calls lists	34	Media.....	56
Counters and timers for calls, data and messages.....	35	Voice recorder.....	56
Positioning information	35	Push to talk	57
Contacts	35	Push to talk menu.....	58
Selecting settings for contacts.....	36	Connecting to and disconnecting from the push to talk service	58
Saving names and phone numbers (Add contact)	36	Callback requests.....	59
Saving multiple numbers or items per name	36	Making and receiving a push to talk call	60
Adding an image to a name or number in contacts	37	Adding one-to-one contacts	61
Searching for a contact	37	Creating and setting up groups.....	61
Editing or deleting details.....	38	Settings for push to talk.....	63
My presence	38	Organiser.....	64
Subscribed names.....	40	Alarm clock.....	64
Copying contacts	42	Calendar.....	64
Sending and receiving a business card	42	To-do list	65
Speed dials.....	42	Notes	66
Voice dialling.....	43	Wallet.....	66
Service numbers.....	44	Synchronisation.....	69
My numbers.....	44	Applications	70
Caller groups.....	44	Games and applications.....	70
Settings.....	45	Calculator.....	72
Profiles	45	Countdown timer.....	72
Themes	45	Stopwatch.....	72
Tone settings.....	45	Web	73
Personal shortcuts.....	46	Basic steps for accessing and using services.....	74
Display settings	47	Setting up the phone for a service ..	74
Time and date settings.....	47	Making a connection to a service ...	74
Call settings.....	47	Browsing the pages of a service.....	75
Phone settings.....	48	Disconnect from a service	76
Connectivity	49	Appearance settings of the browser	76
Enhancement settings.....	52	Cookies.....	76
Configuration settings.....	53	Bookmarks.....	77
Security settings	54	Downloading	77
Restore factory settings.....	55	Service inbox	77
Operator menu	55	Cache memory	78
		Browser security.....	78

SIM services	81
6. PC Connectivity	82
PC Suite	82
(E)GPRS, HSCSD and CSD	83
Using data communication applications.....	83
7. Battery information	84
Charging and Discharging.....	84
Nokia battery authentication guidelines.....	85
8. Genuine Enhancements	88
Power	88
Standard Charger (ACP-7).....	88
Travel Charger (ACP-12)	89
Audio	89
HS-5 Headset.....	89
9. Care and Maintenance	90
10. Additional safety information	91
Index	95

FOR YOUR SAFETY

Read these simple guidelines. Not following them may be dangerous or illegal. Read the complete user guide for further information.



SWITCH ON SAFELY

Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.



ROAD SAFETY COMES FIRST

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.



INTERFERENCE

All wireless phones may be susceptible to interference, which could affect performance.



SWITCH OFF IN HOSPITALS

Follow any restrictions. Switch the phone off near medical equipment.



SWITCH OFF IN AIRCRAFT

Follow any restrictions. Wireless devices can cause interference in aircraft.



SWITCH OFF WHEN REFUELLING

Don't use the phone at a refuelling point. Don't use near fuel or chemicals.



SWITCH OFF NEAR BLASTING

Follow any restrictions. Don't use the phone where blasting is in progress.



USE SENSIBLY

Use only in the normal position as explained in the product documentation. Don't touch the antenna unnecessarily.



QUALIFIED SERVICE

Only qualified personnel may install or repair this product.



ENHANCEMENTS AND BATTERIES

Use only approved enhancements and batteries. Do not connect incompatible products.



WATER-RESISTANCE

Your phone is not water-resistant. Keep it dry.



BACK-UP COPIES

Remember to make back-up copies or keep a written record of all important information stored in your phone.





CONNECTING TO OTHER DEVICES

When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.



EMERGENCY CALLS

Ensure the phone is switched on and in service. Press  as many times as needed to clear the display and return to the start screen. Key in the emergency number, then press . Give your location. Do not end the call until given permission to do so.

General information

■ About your device

The wireless device described in this guide is approved for use on the EGSM 900, GSM 1800 and GSM 1900 network. Contact your service provider for more information about networks.

When using the features in this device, obey all laws and respect privacy and legitimate rights of others.



Warning: To use any features in this device, other than the alarm clock, the device must be switched on. Do not switch the device on when wireless device use may cause interference or danger.

Your device and its enhancements may contain small parts. Keep them out of the reach of small children.

For availability of approved enhancements, please check with your dealer. When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.

■ Overview of the functions of the phone

The Nokia 6021 phone provides many functions that are practical for daily use, such as a calendar, a clock, and an alarm clock. Your phone supports:

- Multimedia messaging, see "[Multimedia messages \(MMS\)](#)" on page 20.
- Instant messages, see "[Instant messages \(Chat\)](#)" on page 24.
- Bluetooth technology, see "[Bluetooth wireless technology](#)", page 49.
- Polyphonic sound (MIDI) that consists of several sound components played at the same time. The phone supports Scalable Polyphonic MIDI (SP-MIDI) format.
- E-mail, see "[E-mail application](#)" on page 29.
- *Audible alerts* to check the battery status and the network status via acoustic signals, see "[Voice commands](#)" on page 46.
- Presence-enhanced contacts, see "[My presence](#)" on page 38.

- EDGE (Enhanced Data rates for GSM Evolution), see "[\(E\)GPRS](#)" on page [51](#).
- Push to talk, see "[Push to talk](#)" on page [57](#).
- Java 2 Micro Edition, J2ME™, see "[Applications](#)" on page [70](#).
- XHTML browser, see "[Web](#)" on page [73](#).

Shared memory

The following features in this device may share memory: contacts, text messages, instant messages and SMS e-mail, voice tags, calendar and notes. Use of one or more of these features may reduce the memory available for the remaining features sharing memory. For example, saving many SMS e-mail may use all of the available memory. Your device may display a message that the memory is full when you try to use a shared memory feature. In this case, delete some of the information or entries stored in the shared memory features before continuing. Some of the features, such as contacts, text messages, instant messages and SMS e-mail may have a certain amount of memory specially allotted to them in addition to the memory shared with other features.

■ Nokia PC Suite software

With the Nokia PC Suite software you can, for example, handle ringing tones and wallpapers. Nokia PC Suite is available on Nokia's Web site at www.nokia-asia.com.

■ Access codes

Security code (5 to 10 digits)

The security code helps to protect your phone against unauthorised use. The pre-set code is 12345. Change the code, and keep the new code secret and in a safe place separate from your phone. To change the code, and to set the phone to request the code, see "[Security settings](#)" on page [54](#).

If you key in an incorrect security code five times in succession, the phone ignores further entries of the code. Wait for 5 minutes and key in the code again.

PIN and PIN2 codes (4 to 8 digits), module PIN, and signing PIN

- The PIN (Personal Identification Number) code, supplied with your SIM card, helps to protect your SIM card against unauthorised use. See "Security settings" on page 54.
- The PIN2 code may be supplied with the SIM card and is required to access some functions, such as call counters.
- The module PIN is required to access the information in the security module of your SIM card. See "Security module" on page 79.
- The signing PIN is required for the digital signature. See "Digital signature" on page 80.

PUK and PUK2 codes (8 digits)

The PUK (Personal Unblocking Key) code is required to change a blocked PIN code. The PUK2 code is required to change a blocked PIN2 code.

Barring password (4 digits)

The barring password is required when using the *Call barring service*. See "Security settings" on page 54.

Wallet code (4 to 10 digits)

The wallet code is required to access the wallet services. For further information, see "Wallet" on page 66.



Note: If the codes or passwords are not supplied with the SIM card, contact your local service provider.

Network services

To use the phone you must have service from a wireless service provider. Many of the features in this device depend on features in the wireless network to function. These Network Services may not be available on all networks or you may have to make specific arrangements with your service provider before you can utilize Network Services. Your service provider may need to give you additional instructions for their use and explain what charges will apply. Some networks may have limitations that affect how you can use Network Services. For instance, some networks may not support all language-dependent characters and services.

Your service provider may have requested that certain features be disabled or not activated in your device. If so, they will not appear on your device menu. Your device may also have been specially configured for your network provider. This configuration may include changes in menu names, menu order and icons. Contact your service provider for more information.

This device supports WAP 2.0 protocols (HTTP and SSL) that run on TCP/IP protocols. Some features of this device, such as multimedia messages, e-mail application, instant messages, presence service, Java games and applications and Internet services require network support for these technologies.

Configuration settings service

To use some of the network services, such as mobile Internet services, MMS, Instant messages, E-Mail application, or Synchronisation, your phone needs the correct configuration settings. You may receive the settings directly as a configuration message and you need to save the settings on your phone. The service provider may provide a PIN that is needed to save the

settings. For more information on the availability of the settings, contact your network operator, service provider, nearest authorised Nokia dealer or visit the support area on the Nokia Web site, www.nokia-asia.com.

When you have received a configuration message *Configuration sett. received* is displayed. To view the received settings, press **Show**.

- To save the received settings, press **Save**. If the phone asks *Enter settings' PIN;*, key in the PIN code for the settings and press **OK**. Set these settings as the default or not. For availability of the PIN code, contact the service provider that supplies the settings.
- To discard the received settings, press **Discard**.

To view and edit the settings see "Configuration settings" on page 53.

■ Downloading content and applications

You may be able to download new content (for example images and video clips) and applications into the phone (network service).

1. Select the download function for example in the *Collection* and *Gallery* menus. To access the download function, see the respective menu descriptions.

A list of bookmarks is shown. Select *More bookmarks* if you want to view the bookmarks available in the *Web* menu.

2. Select the bookmark of the browser page that you want to access. If the connection fails, change the active set of connection settings in the *Web* menu and try the connection again. Follow the instructions provided by the service.

For the availability of different services, pricing and tariffs, contact your network operator and/or the service provider.

Your device may have some bookmarks loaded for sites not affiliated with Nokia. Nokia does not warrant or endorse these sites. If you choose to access them, you should take the same precautions, for security or content, as you would with any Internet site.

■ Nokia support on the Web

Check www.nokia-asia.com/support or your local Nokia Web site for the latest version of this guide, additional information, downloads, and services related to your Nokia product.

1. Getting started


■ Installing the SIM card and the battery

Keep all SIM cards out of the reach of small children. For availability and information on using SIM card services, contact your SIM card vendor. This may be the service provider, network operator, or other vendor.




Note: Always switch off the power and disconnect the charger and any other device before removing the cover. Avoid touching electronic components while changing the cover. Always store and use the device with the covers attached.

1. To remove the back cover of the phone:

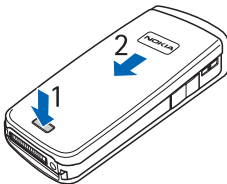


Push the back cover release button (1) and slide the back cover towards the bottom of the phone (2). When the back cover is released, take it off the phone.


2. Remove the battery by lifting it as shown. Insert the SIM card into the SIM card holder until it snaps into position. Make sure that the SIM card is properly inserted and that the golden contact area on the card is facing downwards.

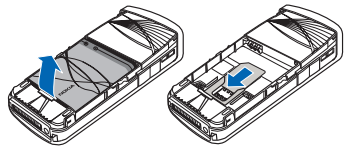


3. To remove the SIM card press the SIM card release (1) and slide the SIM card towards the top of the phone (2).

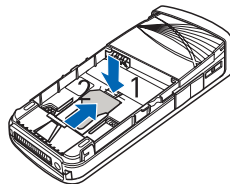

4. Position the battery with the contacts aligned to the golden contacts of the phone. Insert the battery into the battery slot.

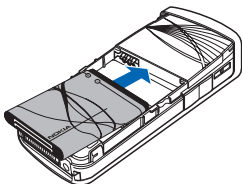

5. Align the back cover on the back of the phone (1) with a gap above the top of the back cover of approximately 3 mm. Push the back cover up to the top of the phone to lock it (2).

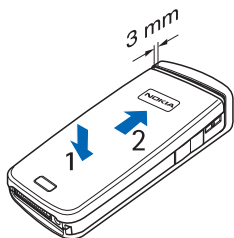


■ Charging the battery



Warning: Use only batteries, chargers, and enhancements approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous.

Check the model number of any charger before use with this device. This device is intended for use when supplied with power from ACP-7 and ACP-12 chargers.

1. Connect the lead from the charger to the socket on the bottom of your phone.

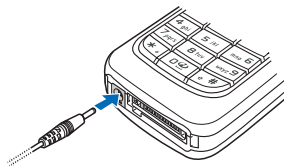


2. Connect the charger to an AC wall socket. If the battery is completely empty, it may take a few minutes before the charging indicator appears on the display or before any calls can be made.

The charging time depends on the charger and the battery used. For example, charging a battery with the ACP-12 charger takes approximately 1 hour and 20 minutes while the phone is in standby mode.

■ Switching the phone on and off




Warning: Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Press and hold the power key  as shown.

Note that if the phone displays *Insert SIM card* even though the SIM card is properly inserted, or *SIM card not supported*, contact your network operator or service provider. Your phone does not support 5-Volt SIM cards and the card may need to be changed.


If the phone asks for a PIN or security code, enter the code supplied with your SIM card (displayed as ****), and press **OK**.

See also "Access codes" on page ix.

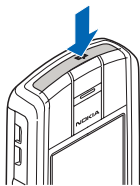

■ Normal operating position

Your phone has an internal antenna. Use the phone only in its normal operating position as shown.

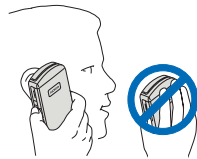


Note: As with any other radio transmitting device, do not touch the antenna unnecessarily when the device is switched on. Contact with the antenna affects call quality and may cause the device to operate at a higher power level than otherwise needed. Avoiding contact with the antenna area when operating the device optimises the antenna performance and the battery life.

■ Putting on a wrist strap

The upper left edge of the phone contains an eyelet for the wrist strap.

Thread the strap as


shown in the picture and tighten it.

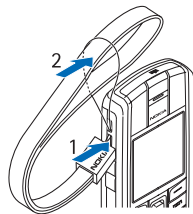

2. Your phone

■ Keys and connectors

1. Power key

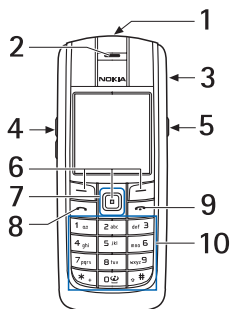

2. Earpiece

3. Loudspeaker

4. Volume keys

5. Push to talk (PTT) key

To activate push to talk (if available) or voice recorder. See ["Push to talk"](#) on page 57 and ["Voice recorder"](#) on page 56.

6. Left and right Selection keys and , middle selection key

The function of these keys depends on the guiding text shown on the display above the keys. See ["Standby mode"](#) on page 5.

7. 5-way joystick

Enables scrolling through names, phone numbers, menus or settings.


The 5-way joystick is also used to move the cursor up and down, and left and right when writing text, using the calendar, and in some game applications. Pressing the joystick also functions as the middle selection key, and pressing it briefly selects the function shown on the display above the joystick.

In standby mode, the joystick functions as a shortcut. Move the joystick right to access push to talk (if available) or the calendar, left to start writing an SMS message, up and down to access the list of contacts.

8. dials a phone number, and answers a call. In standby mode, it shows the list of the most recently called numbers.

9. ends an active call. Exits from any function.

10. - wxyz enter numbers and characters.


* + and  # are used for various purposes in different functions.

11. Charger connector

12. Pop-Port™ connector

used, for example, for headsets and the data cable.

13. PTT key to make a push to talk call (only if available) or to activate the voice recorder.

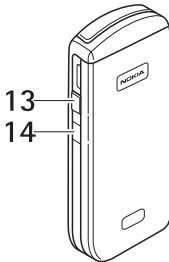


14. Infrared (IR) port

■ Standby mode

When the phone is ready for use, and you have not keyed in any characters, the phone is in standby mode.

1. Shows the name of the network or the operator logo.

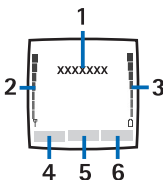

2. Shows the signal strength of the cellular network at your current location.

3. Shows the battery charge level.

4. The left selection key in standby mode is **Go to**.

Press **Go to** to view the functions in your personal shortcut list.

Select a function to activate it.

Press **Options** and select **Select 'Go to' options** to view the list of available functions that you can add. Scroll to the desired function and press **Mark** to add it to the shortcut list. To remove a function from the list, press **Unmark**. Select **Organise 'Go to' options** to rearrange the functions on your personal shortcut list. Select the desired function and press **Move**, then select where you want to move the function. See also "**Go to options**" on page 46.

5. The middle selection key in standby mode is **Menu**.

6. The right selection key in standby mode is **Names** to access the **Contacts** menu or another shortcut to a function you can select. See "**Personal shortcuts**" on page 46. Or the key has an operator-specific name to access an operator-specific web site.

Wallpaper

You can set your phone to display a background picture, wallpaper, when the phone is in standby mode. See "Display settings" on page 47.

Screen saver

You can set your phone to display a screen saver, when the phone is in standby mode. See "Display settings" on page 47.

Power saving

For power saving, a digital clock view overwrites the display when no phone function has been used for a certain period of time. Press any key to deactivate the screen saver. If you have not set the time, 00:00 is displayed.



Essential indicators



You have received one or several text, picture or multimedia messages. See "Reading and replying to an SMS message or an SMS e-mail" on page 19 or "Reading and replying to a multimedia message" on page 22.



The phone has registered a missed call. See "Call register" on page 34.



Your phone is connected to the instant messaging service and the availability status is online or offline, respectively. See "Connecting to and disconnect from the instant messaging service" on page 25.



You have received one or several instant messages and you are connected to the instant messaging service. See "Connecting to and disconnect from the instant messaging service" on page 25.




The phone's keypad is locked. See "Keypad lock (Keyguard)" on page 7.





The phone does not ring for an incoming call or text message when *Incoming call alert* is set to *Off* and *Message alert tone* is set to *Off*. See "Tone settings" on page 45.





The alarm clock is set to *On*. See "Alarm clock" on page 64.


 When the (E)GPRS connection mode *Always online* is selected and the (E)GPRS service is available, the indicator is shown on the top left of the display. See "(E)GPRS connection" on page 52.


 When the (E)GPRS connection is established, the indicator is shown on the top left of the display. See "(E)GPRS connection" on page 52 and "Browsing the pages of a service" on page 75.


 The (E)GPRS connection is suspended (on hold), for example if there is an incoming or outgoing call during the (E)GPRS dial-up connection.

 The loudspeaker has been activated, see "Options during a call" on page 9.

 Calls are limited to a closed user group. See "Security settings" on page 54.

 A headset, handsfree, loopset or music stand is connected.

 Push to talk connection is active or suspended.

 Bluetooth connection indicator. See "Bluetooth wireless technology", page 49.

■ Keypad lock (Keyguard)

You can lock the keypad to prevent the keys from being accidentally pressed. Press **Menu** or **Unlock** and then * + within 1.5 seconds to lock or unlock the keypad. To answer a call when the keyguard is on, press **↵**. During a call, the phone can be operated normally. When you end or reject the call, the keypad will automatically be locked. For *Automatic keyguard*, see "Phone settings" on page 48.

When the keypad lock is on, calls still may be possible to the official emergency number programmed into your device.

3. Call functions

■ Making a call

1. Key in the phone number, including the area code. If you key in an incorrect character, press **Clear** to delete it.

For international calls, press * + twice for the international prefix (the + character replaces the international access code) and then key in the country code, the area code without the leading 0, if necessary, and the phone number.

2. Press **Call** to call the number.
3. Press **End call** to end the call or to cancel the call attempt.

Making a call using the contacts

To search for a name or phone number that you have saved in **Contacts**, see "[Searching for a contact](#)" on page 37. Press **Call** to call the number.

Last number redialling

In standby mode, press **Call** once to access the list of up to 20 numbers you last called or attempted to call. Scroll to the number or name that you want, and press **Call** to call the number.

Calling your voice mailbox

In standby mode, press and hold **1** **voicemail**, or press **1** **voicemail** and **Call**.

If the phone asks for the voice mailbox number, key it in and press **OK**. See also "[Voice messages](#)" on page 30.

Speed dialling a phone number

Assign a phone number to one of the speed-dialling keys, from **2** **abc** to **wxyz** **9**, see "[Speed dials](#)" on page 42. Call the number in either of the following ways:



- Press the speed-dialling key that you want and then press **Call**.
- If *Speed dialling* is set to on, press and hold a speed-dialling key until the call is started. See "[Call settings](#)" on page 47.

■ Answering or rejecting an incoming call

Press **Call** to answer an incoming call and press **End call** to end the call.

Press **Call** to reject an incoming call. If you press **Silence**, only the ringing tone is muted. Then either answer or reject the call.

Call waiting

During a call, press  to answer the waiting call. The first call is put on hold. Press  to end the active call. To activate the *Call waiting* function, see "Call settings" on page 47.

Options during a call

Many of the options that you can use during a call are network services. For availability, contact your network operator or service provider.

Press **Options** during a call for some of the following options:



Mute or *Unmute*, *Contacts*, *Menu*, *Record*, *Lock keypad*, *Auto volume on* or *Auto volume off*, *Loudspeaker* or *Handset*, and the network services *Answer* and *Reject*, *Hold* or *Unhold*, *New call*, *Send DTMF* (to send tone strings), *Swap* (to switch between the active call and the call on hold), *Transfer* (to connect a call on hold to an active call and disconnect yourself), *Conference* (to set up a conference call), *Private call* (to discuss privately in a conference call), *End call*, and *End all calls*.

 
 


Warning: Do not hold the device near your ear when the loudspeaker is in use, because the volume may be extremely loud.

Writing text

You can key in text using traditional or predictive text input.

When you are writing text, predictive text input is indicated by  and traditional text input by  at the top left of the display.

The character case is indicated by **Abc**, **abc**, or **ABC**. You can change the character case by pressing  **#**. The number mode is indicated by **123**, and you can change between the letter and number mode by pressing and holding  **#**.

Setting predictive text input on or off

When writing text, press **Options** and select *Dictionary*.

- To set predictive text input on, select a language in the dictionary options list. Predictive text input is only available for the languages on the list.
- To revert to traditional text input, select *Dictionary off*.

Using predictive text input

You can key in any letter with a single key press. Predictive text input is based on a built-in dictionary to which you can also add new words.

1. Start writing a word using the keys **2** abc to **9** wxyz. Press each key only once for a single letter. The word changes after each keystroke.

Example: To write **Nokia** when the English dictionary is selected, press **mno 6**, **mno 6**, **5** jkl, **4** ghi and **2** abc.

For more instructions on writing text, see "[Tips for writing text](#)" on page 11.

2. When you have finished writing the word and it is correct, confirm it by adding a space with **0** or by moving the joystick up, down, left or right. Moving the joystick also moves the cursor.

If the word is not correct, press *** +** repeatedly or press **Options** and select **Matches**. When the word that you want appears, confirm it.

If the **?** character is displayed after the word, the word you intended to write is not in the dictionary. To add the word to the dictionary, press **Spell**, key in the

word (traditional text input is used) and press **Save**. When the dictionary becomes full, the new word replaces the oldest one that was added.

3. Start writing the next word.

Writing compound words

Key in the first part of the word and move the joystick to the right, then write the last part of the word.

Using traditional text input


Press a number key, **2** abc to **9** wxyz, repeatedly until the desired character appears. Not all characters available under a number key are printed on the key. The characters available depend on the language selected in the *Phone language* menu, see "[Phone settings](#)" on page 48.

- If the next letter you want is located on the same key as the present one, wait until the cursor appears, or move the joystick up, down, left or right and then key in the letter.
- The most common punctuation marks and special characters are available under the number key *** +**.

For more instructions on writing text, see "[Tips for writing text](#)" on page 11.

Tips for writing text

The following functions may also be available for writing text:

- To insert a space, press **□** .
- Move the cursor to the left, right, down or up with the joystick.
- To insert a number while in letter mode, press and hold the desired number key.
- To delete a character to the left of the cursor, press **Clear**. Press and hold **Clear** to delete the characters more quickly. To delete all the characters at once when writing a message, press **Options** and select **Clear text**.
- To quickly set predictive text input on or off when writing text, press and hold **Options**.
- To insert a word when using predictive text input, press **Options** and select **Insert word**. Write the word using traditional text input and press **Save**. The word is also added to the dictionary.
- To insert a special character when using traditional text input, press * +, or when using predictive text input, press and hold * +, or press **Options** and select **Insert symbol**. Select the character and press **Use**.

- To insert a smiley when using traditional text input, press * + twice, or when using predictive text input, press and hold * + and press * + again, or press **Options** and select **Insert smiley**. Select a smiley and press **Use**.

The following options are available when writing text messages:

- To insert a number while in letter mode, press **Options** and select **Insert number**. Key in the phone number or search for it in **Contacts** and press **OK**.
- To insert a name from **Contacts**, press **Options** and select **Insert contact**. To insert a phone number or a text item attached to the name, press **Options** and select **View details**.

4. Using the menu

The phone offers you an extensive range of functions, which are grouped into menus.

■ Accessing a menu function

1. To access the menu, press **Menu**.
2. Use the joystick to scroll through the menu and select, for example, *Settings* by pressing **Select**. To change the menu view, see *Menu view* in "Display settings" on page 47.
3. If the menu contains submenus, select the one that you want, for example *Call settings*.
4. If the selected submenu contains further submenus, repeat step 3. Select the next submenu, for example *Anykey answer*.
5. Select the setting of your choice.
6. Press **Back** to return to the previous menu level, and **Exit** to exit the menu.

List of menu functions

• Messages

1. Create message
 1. Text message
 2. Multimedia msg.
 3. Flash message
2. Inbox
3. Outbox
4. Sent items
5. Saved items
 1. Text messages
 2. Multimedia msg.
6. Instant messages
 1. Login
 2. Saved convers.
 3. Connect. settings
7. E-mail¹
 1. Create e-mail
 2. Retrieve
 3. Disconnect
 4. Inbox
 5. Other folders
8. Voice messages
 1. Listen to voice messages
 2. Voice mailbox number
9. Info messages
 1. Info service
 2. Topics
 3. Language
 4. Info topics saved on SIM card
 5. Read²
10. Service commands
11. Delete messages

12. Message settings

1. Text messages
2. Multimedia msg.
3. E-mail messages
4. Other settings

13. Message counter

• Call register

1. Missed calls
2. Received calls
3. Dialed numbers
4. Delete recent call lists
 1. All
 2. Missed
 3. Received
 4. Dialed
5. Call duration
 1. Last call duration
 2. Received calls' duration
 3. Dialed calls' duration
 4. All calls' duration
 5. Clear timers
6. GPRS data counter
 1. Data sent in last session
 2. Data received in last session
 3. All sent data
 4. All received data
 5. Clear counters
7. GPRS connection timer
 1. Duration of last session
 2. Duration of all sessions
 3. Clear timers
8. Positioning

1. In some countries this function may not be available.

2. This menu is shown only if any info messages are received.

- **Contacts**



1. Search
2. Add new contact
3. Delete
4. My presence
5. Subscribed names
6. Copy
7. Settings
 1. Memory in use
 2. Contacts view
 3. Memory status
8. Speed dials
9. Voice tags
10. Service numbers¹
11. My numbers²
12. Caller groups²

- **Operator menu³**

- **Settings**



1. Profiles
 1. General
 2. Silent
 3. Meeting
 4. Outdoor
 5. My style 1
 6. My style 2

2. Themes

1. Select theme
2. Theme downloads

3. Tone settings

1. Incoming call alert
2. Ringing tone
3. Ringing volume
4. Vibrating alert
5. Message alert tone
6. Instant message alert tone
7. Keypad tones
8. Warning tones
9. Alert for
10. Push to talk settings

4. Personal shortcuts

1. Right selection key
2. Select 'Go to' options
3. Organise 'Go to' options
4. Voice commands




5. Display settings

1. Wallpaper
2. Colour schemes
3. Menu view
4. Operator logo
5. Screen saver

6. Time and date settings

1. Clock
2. Date
3. Auto-update of date & time

-
1. Shown if supported by your SIM card. For availability, contact your network operator or service provider.
 2. If Info numbers, Service numbers or both are not supported, the number of this menu item changes accordingly.
 3. If this menu is not shown the subsequent menu numbers change accordingly. The name depends on the network operator.

7. Call settings
 1. Automatic volume control
 2. Call divert
 3. Anykey answer
 4. Automatic redial
 5. Speed dialling
 6. Call waiting
 7. Summary after call
 8. Send my caller ID
 9. Line for outgoing calls¹
 8. Phone settings
 1. Phone language
 2. Memory status
 3. Automatic keyguard
 4. Cell info display
 5. Welcome note
 6. Operator selection
 7. Confirm SIM service actions
 8. Help text activation
 9. Start-up tone
 9. Connectivity
 1. Bluetooth
 2. Infrared
 3. GPRS
 10. Enhancement settings²
 1. Headset
 2. Handsfree
 3. Loopset
 11. Configuration settings
 1. Default configuration settings
 2. Activate default in all applications
 3. Preferred access point
 4. Personal configuration settings
 12. Security settings
 1. PIN code request
 2. Call barring service
 3. Fixed dialling
 4. Closed user group
 5. Security level
 6. Access codes
 7. Code in use
 13. Restore factory settings
- **Gallery** 
 1. Recordings
 2. Tones
 3. Themes
 4. Graphics
 5. Images
 - **Media** 
 1. Voice recorder
 - **Push to talk**¹ 
 1. Switch PTT on
 2. Callback inbox
 3. Group list
 4. Contacts list
 5. Add group
 6. PTT Settings
 7. Config. Settings
 8. Web

1. For availability, contact your network operator or service provider.

2. This menu is shown only if the phone is or has been connected to a compatible enhancement available for the phone.

- **Organiser**



1. Alarm clock
 1. Alarm time
 2. Repeat alarm
 3. Alarm tone
2. Calendar
3. To-do list
4. Notes
5. Wallet
6. Synchronisation

- **Applications**



1. Games
 1. Select game
 2. Game downloads
 3. Memory
 4. App. settings
2. Collection
 1. Select application
 2. App. downloads
 3. Memory
3. Extras
 1. Calculator
 2. Countdown timer
 3. Stopwatch

- **Web**



1. Nokia.com
2. Home
3. Bookmarks
4. Download links
 1. Tone downloads
 2. Graphic downloads
 3. Game downloads
 4. Video downloads
 5. Theme downloads
 6. App. downloads
5. Last web addr.
6. Service inbox
7. Settings
 1. Configuration settings
 2. Appearance settings
 3. Security settings
 4. Service inbox settings
8. Go to address
9. Clear the cache

- **SIM services¹**



1. Only shown if supported by your SIM card. The name and contents vary depending on the SIM card.

5. Menu functions

■ Messages



The message services can only be used if they are supported by your network or your service provider and you have subscribed to them. Also appropriate settings need to be in place.

To select the font size for reading and writing messages, press **Menu**, and select *Messages*, *Message settings*, *Other settings* and *Font size*.



Note: When sending messages, your phone may display the words *Message sent*. This is an indication that the message has been sent by your device to the message centre number programmed into your device. This is not an indication that the message has been received at the intended destination. For more details about messaging services, check with your service provider. Only devices that offer

compatible features can receive and display messages. The appearance of a message may vary depending on the receiving device.



Important: Exercise caution opening messages. Messages may contain malicious software or otherwise be harmful to your device or PC.

Text messages (SMS)

Using the short message service (SMS) your phone can send and receive multi-part messages, which consist of several ordinary text messages (network service). Invoicing may be based on the number of ordinary messages that are required for a multi-part message.



Before you can send a message, you need to save some message settings. See "[Settings for text and SMS e-mail messages](#)" on page 31.

You can also send and receive text messages that contain pictures. A picture message can be a multi-part message.

The text messages function uses shared memory, see "[Shared memory](#)" on page ix.

Writing and sending messages


Your device supports the sending of text messages beyond the character limit for a single message. Longer messages will be sent as a series of two or more messages. Your service provider may charge accordingly. Characters that use accents or other marks, and characters from some language options like Chinese, take up more space limiting the number of characters that can be sent in a single message.


1. Press **Menu**, and select *Messages*, *Create message* and *Text message*.
2. Key in a message. See "[Writing text](#)" on page 9. To insert text templates or a picture into the message, see "[Templates](#)" on page 20.
3. To send the message, press **Send** or . The messages that you have sent will be saved in the *Sent items* folder if the setting *Save sent messages* is set to *Yes*. See "[Settings for text and SMS e-mail messages](#)" on page 31. Text messages are indicated with .
4. Enter the recipient's phone number or search for the phone number in *Contacts*. Press **OK** to send the message.

Options for sending a message


After you have written a message, press **Options** and select *Sending options*. With *Send to many* you can send the message to several recipients and to send a message as an SMS e-mail (network service), select *Send as e-mail*. With *Sending profile* you can use a predefined message profile to send the message. To define a message profile, see "[Settings for text and SMS e-mail messages](#)" on page 31.

Reading and replying to an SMS message or an SMS e-mail

When you have received a message or an SMS e-mail, the indicator  and the number of new messages followed by *messages received* are shown.

The blinking  indicates that the message memory is full. Before you can receive new messages, delete some of your old messages in the *Inbox* folder.

1. Press **Show** to view the new message, or press **Exit** to view it later.

If more than one message has been received, select the one that you want to read. An unread text message or SMS e-mail is indicated by .

2. While reading a message, press **Options** and select an option, for example, to delete, forward or edit the message as a text message or an SMS e-mail, rename the message you are reading or to move it to another folder. Select *Copy to calendar* to copy text at the beginning of the message to your phone's calendar as a reminder note for the current

day. Select *Message details* to view, if available, the sender's name and phone number, the message centre used, and the date and time of receipt. Select *Use detail* to extract numbers, e-mail addresses and Web site addresses from the current message.

When reading a picture message, select *Save picture* to save the picture in the *Templates* folder.

3. Select **Reply** and the message type to reply to a message.



When replying to an SMS e-mail, confirm or edit the e-mail address and subject first. Then write your reply message.

4. To send the message, press **Send**, and press **OK** to send the message to the displayed number.


Inbox and sent items folders

The phone saves incoming text and multimedia messages in the *Inbox* folder. Sent text messages are saved in the *Sent items* folder, if saving is activated, see "[Settings for text and SMS e-mail messages](#)" on page 31.

Templates

Your phone includes text templates, indicated by , and picture templates, indicated by .

To access the template list, press **Menu**, and select *Messages, Saved items, Text messages* and *Templates*.

- To insert a text template into the message or the SMS e-mail that you are writing or replying to, press **Options**. Select *Use template* and select the template that you want to insert.
- To insert a picture into the text message that you are writing or replying to, press **Options**. Select *Insert picture* and select a picture to view it. Press **Insert** to insert the picture into your message. The  indicator in the header of the message indicates that a picture has been attached. The number of characters that you can enter in a message depends on the size of the picture.

To view the text and the picture together before sending the message, press **Options** and select *Preview*.

Saved items folder and My folders

To organise your messages, you can move some of them to the *Saved items* folder, or add new folders for your messages. While reading a message, press **Options**. Select *Move*, scroll to the folder that you want to move the message to and press **Select**.

To add or delete a folder, press **Menu**, and select *Messages, Saved items, Text messages* and *My folders*.

To add a folder if you have not saved any folder, press **Add**. Otherwise, press **Options** and select *Add folder*. To delete a folder, scroll to the folder that you want to delete, press **Options** and select *Delete folder*.

Multimedia messages (MMS)

A multimedia message can contain text, sound and a picture or a video clip. The phone supports multimedia messages that are up to 100 KB in size. If the message contains a picture, the phone scales it down to fit the display area. The wireless network may limit the size of MMS messages. If the inserted picture exceeds this limit, the device may make it smaller so that it can be sent by MMS.

The multimedia message function uses shared memory, see "[Shared memory](#)" on page [ix](#).

If *Allow multimedia reception* is set to *Yes* or *In home network*, your operator or service provider may charge you for every message you receive. The default setting to receive multimedia messages is generally on. See "[Settings for multimedia messages](#)" on page [32](#).

Multimedia messaging supports the following formats:

- Picture: JPEG, GIF, WBMP, BMP and PNG.
- Sound: Scalable Polyphonic MIDI (SP-MIDI), AMR audio and monophonic ringing tones.
- Video clips in 3gp format with SubQCIF and QCIF resolution and AMR audio.

The phone does not necessarily support all variations of the aforementioned file formats. If a received message contains any unsupported elements, they may be replaced with the file name and the text *Object format not supported*.

Note that you are not able to receive any multimedia messages if you have a call in progress, or a game or another Java application running.

Because delivery of multimedia messages can fail for a variety of reasons, do not rely solely upon them for essential communications.

Writing and sending a multimedia message

To set the settings for multimedia messaging, see "[Settings for multimedia messages](#)" on page [32](#).


To check availability and to subscribe to the multimedia messaging service, contact your network operator or service provider.

Copyright protections may prevent some images, ringing tones and other content from being copied, modified, transferred or forwarded.


1. Press **Menu**, and select *Messages, Create message and Multimedia msg..*
 2. Key in a message. See "[Writing text](#)" on page [9](#).
 - To insert a file in the message, press **Options**, select *Insert* and select the desired option from the Gallery or select *Calendar note* or *Business card*.
- To move the text component to the top or bottom of the message, press **Options** and select *Place text first* or *Place text last*.

- Your phone supports the sending and receiving of multimedia messages that contain several pages (slides). To insert a slide in the message, press **Options**, and select *Insert* and *Slide*. Each slide can contain text, one image and one sound clip. If the message contains several slides, you can open the desired one by pressing **Options** and selecting *Previous slide*, *Next slide* or *Slide list*. To set the interval between the slides, select *Slide timing*.
 - The following options may also be available: *Delete* to delete an image, slide or sound clip from the message, *Preview* or *Save message*. In *More options* the following options may be available: *Insert contact*, *Insert number*, *Message details* and *Edit subject*.
3. To send the message, press **Send** and select *Phone number*, *E-mail address* or *Many*.



4. Enter the recipient's phone number or e-mail address or search for it in *Contacts*.

While the multimedia message is being sent,  is displayed and you can use other functions on the phone. If there is an interruption while the message is being sent, the phone tries to resend it a few times. If this fails, the message will remain in the *Outbox* folder and you can try to resend it later.


The messages that you have sent will be saved in the *Sent items* folder if the setting *Save sent messages* is set to *Yes*. See "*Settings for multimedia messages*" on page 32.

Multimedia messages are indicated with .

Reading and replying to a multimedia message

When your phone is receiving a multimedia message,  is displayed. When the message has been received,  and *Multimedia message received* are shown.

1. Press **Show** to view the message, or press **Exit** to view it later.

If more than one message has been received, select the one that you want to read. An unread multimedia message is indicated by .


2. Scroll to view the message. Press **Options** and some of the following options may be available: *Play presentation, View text, Open image, Open sound clip, Open video clip, Save image, Save sound clip, Save video clip, Details, Delete message, Reply, Reply to all, Forward, Edit, Message details.*

See also options in *Gallery*, see "Gallery" on page 55.

Inbox, Outbox, Saved and Sent items folders

The phone saves the received multimedia messages in the *Inbox* folder. Multimedia messages that have not yet been sent are moved to the *Outbox* folder. The multimedia messages that you wish to send later can be saved in the *Saved items* folder. The multimedia messages that have been sent are saved in the *Sent items* folder of the *Multimedia msgs.* submenu if the setting *Save sent messages* is set to *Yes*. See "Settings for multimedia messages" on page 32.

Multimedia messages memory full

When you have a new multimedia message waiting and the memory for the messages is full,  blinks and *Multimedia memory full, view waiting msg.* is shown. To view the waiting message, press **Show**. To save the message, press **Options**, select *Save message* and delete old messages by first selecting the folder and then the old message to be deleted. To discard the waiting message, press **Exit** and **Yes**. If you press **No**, you can view the message.

Flash messages

Flash messages are text messages that are instantly displayed upon reception.

Writing a flash message

Press **Menu**, and select *Messages, Create message* and *Flash message*. Write your message. The maximum length of a flash message is 70 characters. To insert a blinking text into the message, select *Insert blink char.* from the options list to set a marker. The text behind the marker blinks until a second marker is inserted.

Receiving a flash message



Note: Only devices that offer compatible flash message features can receive and display blinking flash messages.

A received flash message is not automatically saved. To read the message, press **Read**. Press **Options** and select *Use detail* to extract phone numbers, e-mail addresses and website addresses from the current message. To save the message, press **Save** and select the folder in which you want to save the message.

Instant messages (Chat)

Instant messaging (Chat) is a way of sending short, simple text messages that are delivered over TCP/IP protocols to online users (network service). Your contact list shows you when the contacts on the list are online and available to participate in an instant messaging conversation.

Before you can use instant messaging, you need to subscribe to the service. For availability, charging and subscription to the service, contact your service provider, from whom you also receive your unique ID and password and the settings for

instant messaging. For required settings, see "[Instant messaging settings](#)" on page 28. The icons and texts on the display may vary depending on the instant messaging service.

You can use the other functions of the phone while you have an active instant messaging session in the background.

Instant messaging uses shared memory, see "[Shared memory](#)" on page ix.

Basic steps for instant messaging

- To enter the instant messaging menu (offline), see "[Entering the instant messaging menu](#)" on page 25.
- To connect to the service (online), see "[Connecting to and disconnect from the instant messaging service](#)" on page 25.
- To start a conversation with a contact, see *IM contacts* in "[Starting an instant messaging conversation](#)" on page 26.

To create your own contact lists, see "[Contacts for instant messaging](#)" on page 27.

- To join a public group, see *Groups* in "[Starting an instant messaging conversation](#)" on page 26.

To join an instant messaging group via an invitation message, see "Accepting or rejecting an invitation" on page 26.

To create your own group, or to join or delete a public group, see "Groups" on page 28.

- To edit your own information, see "Editing your own settings" on page 27.
- To search users and groups, see *Search* in "Starting an instant messaging conversation" on page 26.
- To read a message, see "Reading an instant message" on page 27.
- To write and send messages during an active session, see "Participating in a conversation" on page 27.
- To view, rename or delete saved conversations, select *Saved convers.* when you have entered the *Instant messages* menu.
- To block or unblock contacts, see "Blocking and unblocking messages" on page 28.
- To disconnect from the service, see "Connecting to and disconnect from the instant messaging service" on page 25.

Entering the instant messaging menu

To enter the *Instant messages* menu while still offline, press **Menu**, and select *Messages* and *Instant messages*. Activate a service and select *Login* to connect to the service; *Saved convers.* to view, erase or rename the conversations that you have saved during a session, or *Connect. settings* to access the settings needed for a connection.

Connecting to and disconnect from the instant messaging service

To connect to the service, enter the *Instant messages* menu, activate a service and select *Login*. Select one of the available sets. If necessary key in the *User ID:* and the *Password:*. When the phone has successfully connected, *Logged in* is displayed.





Tip: To set the phone to automatically connect to the instant messaging service when you enter the *Instant messages* menu, connect to the service, select *My settings, Automatic login* and *On IM start-up*.



To disconnect from the service, select *Logout*.


Starting an instant messaging conversation

Enter the *Instant messages* menu and connect to a service. You can select:


- *Conversations* to view the list of new and read messages or invitations to instant messaging during the active session. Scroll to the message or invitation that you want and press **Open** to read the message.




 indicates new and  read instant messages.

 indicates new and  read group messages.

 indicates invitations.

- *IM contacts* includes the contacts that you have added. Scroll to the contact to whom you would like to send instant messages and press **Chat** or press **Open** if a new message is shown in the list.

If you have received a new message from a contact, it is indicated with .

 indicates the online and  the offline contacts in the phone's contacts memory. 

 indicates a blocked contact, see "[Blocking and unblocking messages](#)" on page 28.

- *Groups* and *Public groups*. The list of bookmarks to public groups provided by the service provider is displayed. To start a conversation, scroll to a group and press **Join**. Enter the screen name that you want to use in the conversation. When you have successfully joined in the group conversation, the phone shows *Joined group*: and the group name. To create a private group, see "[Groups](#)" on page 28.
- *Search* and select *Users* or *Groups* to search for other users or public groups on the network. To start the session when you have found the user or the group that you want, press **Options** and select *Chat* or *Join group*.

To start a session from Contacts, see "[Viewing the subscribed names](#)" on page 41.

Accepting or rejecting an invitation

When you have connected to the service and you receive a new invitation, *New invitation received* is displayed. Press **Read** to read it. If more than one invitation is received, the number of messages followed by *new invitations received* is displayed.


Press **Read**, scroll to an invitation that you want and press **Open**. Press **Accept**, to join the private group conversation, or press **Options** and select *Reject* or *Delete* to reject or delete the invitation.

Reading an instant message



When you have connected to the service and you receive a message from a person who is not taking part in the conversation, *New instant message* is displayed. Press **Read** to read it. If more than one message is received, the number of messages followed by *new instant messages* is displayed. Press **Read**, scroll to a message and press **Open**.

New messages received during an active session are held in the *Conversations* of the *Instant messages* menu. If the message is from a person whose contact information is missing from the contact list in *IM contacts*, the sender's ID is shown. If the contact information can be found in the phone's memory for contacts and the phone recognises it, the sender's name is shown. To save a new contact in the phone's memory, press **Options** and select *Save to contacts* and enter the name of the person, or *Add to contact*.

Participating in a conversation

Join or start a session by pressing **Write**. Write your message and press **Send** or  to send it. If you press **Options**, some of the following options are available: *View conversation*, *Save to contacts*, *Add to contact*, *Group members*, *End conversation*, *Dictionary*.

Editing your own settings

Enter the *Instant messages* menu and connect to the service. Select *My settings* to view and edit your own availability information or screen name. Select *Availability* and *Available for all* or *Avail. for contacts* (or *Appear offline*) to allow all the other users or only the contacts on your contact list to see that you are online when you have connected to the service. When you are connected to the service,  indicates that you are online and  that you are not visible to others.

Contacts for instant messaging

To add contacts to the instant messaging contacts list, connect to the service and select *IM contacts*. If the contacts list is empty the phone displays *Contact list empty. Copy contacts from server?* to retrieve available contacts from the server. Otherwise press **Options** and select

Add contact, or if you have no contacts added, press **Add**. Select *Enter ID manually*, *Search from serv.*, *From contacts*, or *Copy from server* to add a new contact. When the contact is added, the phone displays *Added to IM contacts*: and the contact name.

Scroll to a contact, and press **Chat** to start a session or press **Options** and select *Contact info*, *Edit name*, *Block contact* (or *Unblock contact*), *Add contact*, *Remove contact*, *Copy to server*, or *Availability alerts*.

Blocking and unblocking messages

Connect to the service and select *Conversations* or *IM contacts*.

Highlight the contact in the contacts list from whom you want to block incoming messages. Press **Options**, select *Block contact* and press **OK**.

To unblock the messages, connect to the service and select *Blocked list*. Scroll to the contact from whom you want to unblock the messages and press **Unblock**.

Groups

You can create your own private groups for a session, or use the public groups provided by the service provider. The private groups exist only during an active session. You can add to a private group only the

contacts that are in your contact list and thus in the phone's contacts memory. If the server you are logged onto does not support group services all group-related menus are dimmed.

Public groups

You can bookmark public groups that your service provider may maintain. Connect to the service, select *Groups* and *Public groups*. Scroll to a group that you want to chat with and press **Join**. If you are not in the group, key in your screen name as your nickname for the group. If you press **Options**, you can select *Delete group* to delete a group from your group list.

Creating a private group

Connect to the service, select *Groups* and *Create group*. Key in the name for the group and the screen name that you want to use for the group. You can use another screen name in another group. Mark your private group members from the contacts list and key in an invitation to newly added members.

Instant messaging settings

You may receive the settings as a configuration message from the service provider. See "[Configuration settings service](#)" on page [xi](#). To key in the settings manually, see

"[Configuration settings](#)" on page 53. For instant messaging and presence settings, contact your service provider.

To enter the *Instant messages* menu while still offline, press **Menu**, and select *Messages* and *Instant messages*. Activate a service and select *Connect.settings*. Select *Configuration* and select the set you would like to activate. Select *Account* and choose the account you want to use. Select *User ID* to view or to edit the user ID. Select *Password* to enter the password.

E-mail application

The e-mail application allows you to access the compatible e-mail account that you use in the office or at home, via the phone (network service). You can write, send, and read e-mail with your phone. Your phone supports POP3 and IMAP4 e-mail servers.

The e-mail application uses shared memory, see "[Shared memory](#)" on page ix.

Before you can send and retrieve any e-mail, you may need to do the following:

- Obtain a new e-mail account or use the current one. For availability of your e-mail account contact your e-mail service provider.
- For the settings required for the e-mail application, contact your e-mail service provider. To receive the e-mail settings as a configuration message, see "[Configuration settings service](#)" on page xi.
- To set the e-mail settings on your phone, press **Menu** and select *Messages*, *Message settings* and *E-mail messages*. See "[Settings for e-mail application](#)" on page 33.


Writing and sending an e-mail

1. Press **Menu** and select *Messages*, *E-mail*, and *Create e-mail*.
2. Key in the recipient's e-mail address, a subject and the e-mail message.
3. Press **Send** and select *Send now*.

Downloading e-mail from your e-mail account

1. Press **Menu** and select *Messages*, *E-mail* and *Retrieve* to download e-mail that have been sent to your e-mail account. Or:

Press **Menu** and select *Messages* and *E-mail*, press **Options** and select *Retrieve and send* to download new e-mail and to send e-mail that have been saved in the *Outbox* folder.

2. Your phone attempts to make a connection to the e-mail service. A status bar is shown while your phone is downloading e-mail to your phone.
3. Press **Select** to view the new message in the *Inbox*, or press **Back** to view it later. An unread text message is indicated by .

Reading and replying to an e-mail

Press **Menu**, select *Messages*, *E-mail* and *Inbox*. While reading the message, press **Options** to see the options available for this message.

To reply to an e-mail, press **Reply** and select *Original text* or *Empty screen*. Confirm or edit the e-mail address and subject, then write your reply. To send the message, press **Send** and select *Send now*.

Inbox and Other folders (Drafts, Archive, Outbox and Sent items)

Your phone saves e-mail that you have downloaded from your e-mail account in the *Inbox* folder. *Other folders* contains the folders: *Drafts* for saving unfinished e-mail, *Archive* for organising and saving your e-mail, *Outbox* for saving e-mail that have not been sent, and *Sent items* for saving e-mail that have been sent.


Deleting e-mail

To delete e-mail, press **Menu** and select *Messages* and *E-mail*, press **Options** and select *Delete messages*. To delete all messages from a folder, select the folder from which you want to delete the messages and press **Yes**. To delete all messages from all folders, select *All messages* and press **Yes**. Note that deleting an e-mail from your phone does not delete it from the e-mail server.

 
Voice messages

The voice mailbox is a network service and you may need to subscribe to it. For more information and for the voice mailbox number, contact your service provider.

Press **Menu**, and select *Messages* and *Voice messages*. To call your voice mailbox, select *Listen to voice messages*. To key in, search for or edit your voice mailbox number, select *Voice mailbox number*.

If supported by the network, the indicator  will show new voice messages. Press **Listen** to call your voice mailbox number.



Tip: Pressing and holding **1**  calls your voice mailbox if you have the number set.

Info messages

With the info message network service you may be able to receive messages on various topics. For details, contact your service provider.

Service commands

Press **Menu**, and select *Messages* and *Service commands*. Key in and send service requests (also known as USSD commands), such as activation commands for network services, to your service provider.

Deleting all messages from a folder

To delete all messages from a folder, press **Menu**, and select *Messages* and *Delete messages*. Select the folder from which you want to delete the messages and press **OK** to confirm the query.

If the folder contains unread messages, the phone will ask whether you want to delete them also.

Message settings

The message settings affect the sending, receiving and viewing of messages.

Settings for text and SMS e-mail messages

Press **Menu**, and select *Messages*, *Message settings*, *Text messages*. Select *Sending profile*. If more than one message profile set is supported by your SIM card, select the set that you want to change. Each setting has the following settings: *Message centre number* (delivered by your service provider), *Messages sent via*, *Message validity*, *Default recipient number* (text messages) or *E-mail server* (e-mail), *Delivery reports*, *Use GPRS*, *Reply via same centre* (network service) and *Rename sending profile*.

Select *Save sent messages*. Select *Yes* to set the phone to save sent multimedia messages in the *Sent items* folder. If you select *No*, the sent messages are not saved.

Settings for multimedia messages

If *Allow multimedia reception* is set to *Yes* or *In home network*, your operator or service provider may charge you for every message you receive. The default setting to receive multimedia messages is generally on.

Press **Menu**, and select *Messages*, *Message settings* and *Multimedia msgs..* Select

- *Save sent messages*. Select *Yes* to set the phone to save sent multimedia messages in the *Sent items* folder. If you select *No*, the sent messages are not saved.
- *Delivery reports* to ask the network to send delivery reports about your messages (network service).
- *Scale image down* to define the image size when you insert the image into the multimedia message.
- *Default slide timing* to define the default time for slides in multimedia messages.

- *Allow multimedia reception*. Choose *No*, *Yes* or *In home network* to use the multimedia service. If *Allow multimedia reception* is set to *Yes* or *In home network*, your operator or service provider may charge you for every message you receive. The default setting to receive multimedia messages is generally on.
- *Incoming multimedia messages*. Select *Retrieve* to automatically allow the reception of multimedia messages, *Retrieve manually* to allow the reception of multimedia message only after being prompted or *Reject* to prevent the reception of multimedia messages.
- *Configuration settings*. Select *Configuration* and select the default service provider for retrieving multimedia messages. Select *Account* to see the accounts provided by the service provider. If more than one account is displayed choose the one that you want to use. You may receive the settings as a configuration message from the service provider. See "[Configuration settings service](#)" on page [xi](#). To key in the settings manually see "[Configuration settings](#)" on page [53](#).

- *Allow adverts* to choose if you allow the reception of messages defined as advertisements. This setting is not shown if *Allow multimedia reception* is set to *No*.

Settings for e-mail application

You may receive the e-mail application settings as a configuration message from the service provider. See "Configuration settings service" on page xi. To key in the settings manually see "Configuration settings" on page 53.

Select each of the settings individually and key in all the required settings. Contact your e-mail service provider for the settings.

Press **Menu** and select *Messages*, *Message settings*, and *E-mail messages*. Select

- *Configuration* and select the set that you would like to activate.
- *Account* to see the accounts provided by the service provider. If more than one account is displayed choose the one that you want to use.
- *My name*. Key in your name or nickname.

- *E-mail address*. Key in e-mail address.
- *Include signature*. You can define a signature that is automatically added to the end of your e-mail, when you write your message.
- *Reply-to address*. Key in the e-mail address to which you want the replies to be sent.
- *SMTP user name*. Key in the name that you want to use for outgoing mails.
- *SMTP password*. Key in the password that you want to use for outgoing mails.
- *Display terminal window*. Select *Yes* to perform manual user authentication for Intranet connections.
- *Incoming server type*. Select either *POP3* or *IMAP4* depending on the type of e-mail system that you are using. If both types are supported, select *IMAP4*.
- *Incoming mail settings*
If you have selected *POP3* as the incoming server type, the following options are shown: *Retrieve e-mails*, *POP3 user name*, *POP3 password* and *Display terminal window*.

If you have selected *IMAP4* as the incoming server type, the following options are shown: *Retrieve e-mails*, *Retrieval method*, *IMAP4 user name*, *IMAP4 password* and *Display terminal window*.

Common settings

Press **Menu** and select *Messages*, *Message settings*, *Other settings* and *Font size* to select the font size for reading and writing messages.

Message counter

To view how many messages you have sent and received, press **Menu** and select *Messages*, *Message counter*. Select *Sent messages* or *Received messages* or select *Clear counters* to clear the counters.

Call register



The phone registers the phone numbers of missed, received and dialled calls, push to talk addresses of one-to-one push to talk calls and the approximate length of your calls.

The phone registers these items only if the network supports these functions, and the phone is switched on and within the network service area.

When you press **Options** in the *Missed calls*, *Received calls* and *Dialled numbers* menus, you can view the date and the time of the call, edit or delete the phone number from the list, save the number in *Contacts*, or send a message to the number. Select *Delete recent call lists* to delete the recent calls lists.

Recent calls lists

Press **Menu**, and select *Call register* and then select



- *Missed calls* to view the list of up to 20 phone numbers from which somebody has tried to call you (network service). The number in front of the (name or) phone number indicates the amount of call attempts from that caller.



Tip: When a note about missed calls is displayed, press **List** to access the list of phone numbers. Scroll to the number that you would like to call back and press **↩**.

- *Received calls* to view the list of up to 20 phone numbers from which you have most recently accepted or rejected calls (network service).
- *Dialled numbers* to view the list of up to 20 phone numbers that you have most recently called or attempted to call.



Tip: In standby mode, press  once to access the list of dialled numbers. Scroll to the number or name that you want, and press  to call the number.

- *Delete recent call lists* to delete the recent calls lists. Select whether you want to delete all the phone numbers in the recent calls lists, or only those numbers in the missed calls, received calls or dialled numbers lists. You cannot undo this operation.

Counters and timers for calls, data and messages



Note: The actual invoice for calls and services from your service provider may vary, depending upon network features, rounding off for billing, taxes and so forth. Some timers may be reset during service or software upgrades.

Press **Menu**, and select *Call register* and then select *Call duration*, *GPRS data counter* or *GPRS connection timer* for approximate information on your recent communications.

Positioning information

Some networks allow position requests (network service).


Positioning allows you to view the received position requests from the network operator. Contact your network operator or service provider to subscribe to and agree upon the delivery of location information.

Press **Menu**, and select *Call register*, *Positioning* and then *Position log* to see a list of received position requests.

■ Contacts



You can save names and phone numbers (Contacts) in the phone's memory and in the SIM card's memory.

- The phone's memory may save names with numbers and text notes about each name. You can also save an image for a certain number of names. Contacts use shared memory, see "*Shared memory*" on page ix.
- Names and numbers saved in the SIM card's memory, are indicated by .

In dynamic contacts you can publish your current availability status to communicate to anyone who has access to this service and who is requesting this information. See "My presence" on page 38.

Selecting settings for contacts

Press **Menu** and select *Contacts* and *Settings*. Select

- *Memory in use* to select the SIM card or phone memory to use for your contacts. To recall names and numbers from both memories for contacts, select *Phone and SIM*. In that case, the names and numbers will be saved in the phone memory.
- *Contacts view* to select how the names, numbers and images in contacts are displayed.
- *Memory status* to view how much memory is available in the selected memory for contacts.

Saving names and phone numbers (Add contact)


Press **Menu** and select *Contacts* and *Add new contact*. Key in the name and the phone number. When the name and number are saved, press **Done**.



Tip: Quick save In standby mode, key in the phone number and press **Save**. Key in the name, press **OK** and **Done**.

Saving multiple numbers or items per name

You can save different types of phone numbers and short text items per name in the phone's internal memory for contacts.

The first number saved is automatically set as the default number and it is indicated with a frame around the number type indicator, for example . When you select a name from contacts, for example to make a call, the default number is used unless you select another number.

1. Make sure that the memory in use is either *Phone* or *Phone and SIM*.
2. Scroll to the name saved in the phone's internal memory for the contact to which you want to add a new number or text item, and press **Details**.
3. Press **Options** and select *Add number*, *Add detail* or *Add image*.

4. To add a number or detail, select one of the number types or text types, respectively, or select an image from *Gallery*.

If you select the text type *User ID*: select *Search* to search for an ID by a mobile phone number or an e-mail address in the server of the operator or service provider if you have connected to the presence service. See "*My presence*" on page 38. If only one ID is found, it is automatically saved. Otherwise, to save the ID, press **Options**, and select *Save*. To key in the ID, select *Enter ID manually*. Key in the ID and press **OK** to save it.

To change the number or text type, select *Change type* in the options list. Note that you cannot change the type of an ID when it is on the *IM contacts* or in the *Subscribed names* list.

To set the selected number as the default number, select *Set as default*.

5. Key in the number or text item and press **OK** to save it.
6. Press **Back** and then **Exit** to return to standby mode.

Adding an image to a name or number in contacts

You can add an image in supported format to a name or number saved in the phone's internal memory.

Move the joystick down in standby mode, scroll to the contact that you want to add an image to and press **Details**. Press **Options** and select *Add image*. The phone opens the list of folders in the *Gallery*. Scroll to the desired image, press **Options** and select *Save to contacts*. A copy of the image is added to the contact.

Searching for a contact

Press **Menu** and select *Contacts* and *Search*, or to quickly find a contact name, move the joystick down in standby mode. You can key in the first characters of the name you are searching for in the pop-up window.

In addition the following options in the *Contacts* menu may also be available:

- *Add new contact* and *Delete*.
- *Copy* to copy names and phone numbers from the phone's contact directory to the SIM card's memory, or vice versa.

- *Settings* to select how the names and numbers in contacts are displayed. Select *Memory status* to view the free and used memory capacity.
- *Speed dials* to assign a number to a speed dialling key. To activate speed dialling see "*Call settings*" on page 47.
- *Service numbers* to call the service numbers of your service provider if the numbers are included on your SIM card (network service).
- *My numbers* to view the phone numbers assigned to your SIM card. Only shown, if the numbers are included on your SIM card.
- *Caller groups* to arrange the names and phone numbers saved in the memory into caller groups with different ringing tone.

Editing or deleting details

Search for the contact that you want to edit or delete and press **Details**. Scroll to the name, number, text item or image that you want to edit or delete and press **Options**.

- To edit a name, number or text item or to change image, select *Edit name*, *Edit number*, *Edit detail* or *Change image*.

Note that you cannot edit or delete an ID when it is in *IM contacts* or in the *Subscribed names* list.




- To delete a number or text item, select *Delete number* or *Delete detail*.
- To delete an image attached to the contact, select *Delete image*. Deleting an image from contacts does not delete it from *Gallery*.

My presence

With the presence service (network service) you can share your presence status with other users, for example your family, friends and colleagues with compatible devices and access to the service. Presence status includes your availability, status message and personal logo. Other users who have access to the service and who are requesting your information are able to see your status. The requested information is shown in *Subscribed names* in the viewer's *Contacts* menu. You can personalise the information that you want to share with others and control who can see your status.

Before you can use presence, you need to subscribe to the service. To check the availability, for charging details and to subscribe to the service, contact your service provider, from whom you also receive your unique ID and password and the settings for the service. To set the required settings for the presence service, see "[Instant messaging settings](#)" on page 28. While you have connected to the presence service, you can use the other functions of the phone, and the presence service is active in the background.

Press **Menu** and select *Contacts* and *My presence*. Select

- *Connect to 'My presence' service* (or *Disconnect*).
- *My current presence* to change your presence status. Select
 - *View current presence* and select *Private pres.* or *Public presence*.
 - *My availability* to set your availability status to *Available* indicated by , or to *Busy* indicated by , or to *Not available* indicated by .

- *My presence message* and key in the text to be shown to other persons or press **Options** and select *Previous msgs.* and select an old message as the status message.
- *My presence logo* to select your personal logo from the *Graphics* folder in the gallery. If you select the *Default*, the logo is not published.
- *Show to* to select the groups to whom you want to show your presence status or if not to show it at all.

Select *Private and public* and contacts in your private list are able to see all your presence information: availability, status message and logo. Other contacts can see only your availability.

Select *Private viewers* and the contacts in your private list can see all your presence information (availability, status message and logo). Other users will not see any information.

If you select *No one*, no one can see your presence information.

- **Viewers** and select
 - **Current viewers** to view all the persons who have subscribed to your presence information.
 - **Private list** is a list of the persons who are allowed to view all your presence information, including availability, status message and logo. You can manage your own private list. Other persons who are not in the private list, can see only your availability.
 - **Blocked list** to view all the persons you have blocked from viewing your presence information.
- **Settings** and select
 - **Show current presence in idle** to show the current status indicator in standby mode.
 - **Synchronise with profiles** to select whether you want to update your **My presence message** and **My availability** manually or automatically by linking them to the currently active profile. See also "**Profiles**" on page 45. Note that you cannot link a personalised status logo to a Profile.
 - **Connection type** to select if the phone connects automatically to the service when the phone is switched on.
 - **IM and my presence settings**, see "**Instant messaging settings**" on page 28.

Subscribed names

You can create a list of contacts whose presence status information you want to be aware of. You can view the information if the contacts allow you to view it and if it is not prevented by the contact or network. You can view these subscribed names either by scrolling through the contacts or via the **Subscribed names** menu.

Ensure that the memory in use is either **Phone** or **Phone and SIM**.

To connect to the Presence service, press **Menu** and select **Contacts**, **My presence** and **Connect to 'My presence' service**.

Adding contacts to the subscribed names

1. Press **Menu** and select **Contacts** and **Subscribed names**. If you have not connected to the Presence service, the phone asks if you want to connect now.




2. If you have no contacts on your list, press **Add**. Otherwise, press **Options** and select *Subscribe new*. The list of your contacts is shown.
 3. Select a contact from the list and if the contact has a user ID saved, the contact is added to the subscribed names list. If there is more than one ID, select one of them. After subscription of the contact, *Subscription activated* is shown.
2. Press **Details** to view the details of the selected contact, or press **Options** and select
 - *Subscribe new* to add a new contact to the list of subscribed names.
 - *Chat* to start a conversation.
 - *Send message* to send a text message to the selected contact.
 - *Send SMS e-mail* to send an e-mail to the selected contact.
 - *Send bus. card* to send a business card to the selected contact.
 - *Unsubscribe* to remove the selected contact from the list of subscribed names.


Viewing the subscribed names

See also "Searching for a contact" on page 37 to view the presence information.

1. Press **Menu** and select *Contacts* and *Subscribed names*.

The status information of the first contact on the subscribed names list is displayed. The information that the person wants to give to others may include text and some of the following icons:

,  or  indicate that the person is either available, discreet or not available.

 indicates that the person's presence information is not available.

Unsubscribing a contact

- To unsubscribe a contact from the *Contacts* list, move the joystick down in standby mode and scroll to the contact that you want to unsubscribe. Press **Details** and **Details** again, select the ID and press **Options**. To unsubscribe, select *Unsubscribe* and press **Yes** to confirm.
- To unsubscribe via the *Subscribed names* menu, see "Viewing the subscribed names" on page 41.

Copying contacts

You can copy names and phone numbers from the phone's memory to your SIM card's memory and vice versa. Note that any text items saved in the phone's internal memory, such as e-mail addresses, will not be copied to the SIM card.

Press **Menu** and select *Contacts* and *Copy*. Select the copying direction, *From phone to SIM card* or *From SIM card to phone*.

If you select *One by one*, scroll to the name that you want to copy and press **Copy**.

Default numbers is shown if you copy from the phone to the SIM card. Only the default numbers will be copied.

To choose whether you want to keep or delete the original names and numbers, select *Keep original* or *Move original*.

If you select *All* or *Default numbers*, press **Yes** when *Copy contacts?* or *Move contacts?* is displayed.

Sending and receiving a business card

You can send and receive a person's contact information from a compatible device as a business card. When you have received a (MMS) business card, press **Show**

(**Play**) and **Save** to save the business card in the phone's memory. To discard the business card, press **Exit** and then **Yes**.

To send a business card, search for the name and phone number you want to send from contacts, press **Details** and **Options** and select *Send bus. card*. Select *Via infrared*, *Via Bluetooth*, *Via text message* (network service) or *Via multimedia* (network service).

Speed dials

To assign a number to a speed-dialling key, press **Menu** and select *Contacts* and *Speed dials* and scroll to the speed-dialling key number that you want.

Press **Assign**, or if a number has already been assigned to the key, press **Options** and select *Change*. Press **Search**, and select first the name and then the number that you want to assign. If the *Speed dialling* function is off, the phone asks whether you want to activate it. See also *Speed dialling* in "Call settings" on page 47.

To make a call using the speed-dialling keys, see "Speed dialling a phone number" on page 8.

Voice dialling

You can make a phone call by saying a voice tag that has been added to a phone number. Any spoken word(s), such as a person's name(s), can be a voice tag. You can add up to ten voice tags.

Before using voice tags, note that:

- Voice tags are not language-dependent. They are dependent on the speaker's voice.
- You must say the name exactly as you said it when you recorded it.
- Voice tags are sensitive to background noise. Record voice tags and use them in a quiet environment.
- Very short names are not accepted. Use long names and avoid similar names for different numbers.




Note: Using voice tags may be difficult in a noisy environment or during an emergency, so you should not rely solely upon voice dialling in all circumstances.

Adding and managing voice tags

Save or copy in the phone's memory the contacts to which you want to add a voice tag. You can also add voice tags to the names in the SIM card, but if you replace your SIM card with a new one, you first need to delete the old voice tags before you can add new ones.

Voice tags use shared memory, see "[Shared memory](#)" on page [ix](#).

1. In standby mode, move the joystick down.
2. Scroll to the contact to which you want to add a voice tag and press **Details**. Scroll to the phone number you want and press **Options**.
3. Select **Add voice tag**.
4. Press **Start**, and say clearly the word(s) you want to record as a voice tag. After recording, the phone plays the recorded tag. A symbol  appears after the phone number with a voice tag.

To check the voice tags, press **Menu** and select **Contacts** and **Voice tags**. Scroll to the contact with the voice tag that you want, and press **Select** to see the options to listen to, delete or change the recorded voice tag.

Making a call by using a voice tag

In standby mode, press and hold the right selection key. A short tone is heard and *Speak now* is displayed. Say the voice tag clearly. The phone plays the recognised voice tag and then dials the phone number of the voice tag after 1.5 seconds.

Service numbers

Your service provider may have included service numbers in your SIM card. These menus are only shown if supported by your SIM card.

My numbers

The phone numbers assigned to your SIM card are saved in *My numbers* if this is allowed by the card. To view the numbers, press **Menu** and select *Contacts* and *My numbers*. Scroll to the desired name or number, and press **View**.

Caller groups

You can arrange the names and phone numbers saved in *Contacts* into caller groups. For each caller group, you can set the phone to sound a specific ringing tone and show a selected graphic on the display when the phone recognises a

call from a phone number in the group. To set the phone to ring only upon calls from phone numbers belonging to a selected caller group, see *Alert for* in "Tone settings" on page 45.

Press **Menu** and select *Contacts* and *Caller groups* and select the desired caller group. Select:

- *Group name*, key in a new name for the caller group and press **OK**.
- *Group ringing tone* and select the ringing tone for the group.
- *Group logo* and select *On* to set the phone to display the group logo, *Off* not to display it, or *View* to view the logo.
- *Group members* to add a name to the caller group, press **Add**. Scroll to the name you want to add to the group and press **Add**. To remove a name from a caller group, scroll to the name that you want to remove, and press **Options** and select *Remove contact*.

■ Settings




Profiles

Your phone has various setting groups, profiles, for which you can customise the phone tones for different events and environments. Personalise the profiles to your own liking and activate a profile to use it. Available profiles are *General*, *Silent*, *Meeting*, *Outdoor*, *Mystyle 1*, and *Mystyle 2*.

Press **Menu**, and select *Settings* and *Profiles*. Scroll to a profile and press **Select**.

- To activate the selected profile, select *Activate*.
- To personalise the profile, select *Personalise*. Select the setting you want to change and make the changes.
- To set the profile to be active until a certain time up to 24 hours, select *Timed* and set the time for the profile setting to end. When the time set for the profile expires, the previous profile that was not timed becomes active.



Tip: To change the profile quickly in standby mode, press the power key , scroll to the profile that you want to activate and press **Select**.

Themes

A theme is a package that may include a screen saver, a wallpaper image, a ringing tone and a colour scheme to customise your phone for different events and environments. Themes are stored in *Gallery*.

Press **Menu**, and select *Settings* and *Themes*. To activate a theme, select *Select theme* to view the *Themes* folder in *Gallery*. Open the folder and scroll to a theme. Press **Options** and select *Apply theme*. See also "Gallery" on page 55. To download new themes, select *Theme downloads*. See "Downloading" on page 77.

Tone settings

You can change the settings of the selected active profile.

Press **Menu**, and select *Settings* and *Tone settings*. Select and change *Incoming call alert*, *Ringing tone*, *Ringing volume*, *Vibrating alert*, *Message alert tone*, *Instant message*

alert tone, Keypad tones and Warning tones. You can find the same settings in the *Profiles* menu, see "Profiles" on page 45.

Select *Alert for* to set the phone to ring only upon calls from phone numbers that belong to a selected caller group. Scroll to the caller group you want to select or choose *All calls* and press **Mark**.

Personal shortcuts

With personal shortcuts you get quick access to frequently used phone functions.

Right selection key

Press **Menu**, and select *Settings, Personal shortcuts* and *Right selection key* to allocate one phone function from a predefined list to the right selection key. See also "Standby mode" on page 5. This menu is not shown in some operator variants.

Go to options


You can allocate phone functions from a predefined list to the left selection key.

Press **Menu**, and select *Settings* and *Personal shortcuts*. Select *Select 'Go to' options* to choose the functions that you want to appear in the

shortcut list. Select *Organise 'Go to' options* to rearrange the functions on your personal shortcut list. See also "Standby mode" on page 5.

Voice commands

You can have phone functions which can be activated by saying a voice tag. Up to five functions can be selected for voice tag.

Press **Menu**, and select *Settings, Personal shortcuts* and *Voice commands*. Select the function folder that you want, scroll to the function to which you want to add a voice tag and press **Add**. A voice tag is indicated with .

To add a voice command, refer to the instructions in section "Adding and managing voice tags" on page 43.

To activate a voice command, refer to the instructions in section "Making a call by using a voice tag" on page 44.

Among the functions you can activate by *Voice commands* are *Audible alerts* to check the battery status or the network status via acoustic signals (beeps):
one beep → low
two beeps → rather low
three beeps → rather strong
four beeps → strong
different tone → no network coverage

Display settings

Press **Menu**, and select *Settings* and *Display settings*.

- Select *Wallpaper* to set your phone to display a background image, known as wallpaper, when the phone is in standby mode.
- Select *Colour schemes* to change the colour in some display components and the background image that appears when using a menu function.
- Select *Menu view* to set the way the phone displays the main menu.
- Select *Operator logo* to set your phone to display or hide the operator logo.
- Select *Screen saver* and *Select s. saver* to choose an animation or a still image as screen saver from *Gallery*. Select in *Time-out* the time after which the screen saver will be activated. Select *On* to activate the screen saver.

Independent of the screen saver settings, for power saving purposes, a digital clock view will be activated when no function of the phone has been used for a certain time. See "[Power saving](#)" on page 6.

Time and date settings

Press **Menu**, and select *Settings* and *Time and date settings*.


 


Select *Clock* to set the phone to show the clock in standby mode, adjust the clock and select the time zone and the time format.

Select *Date* to set the phone to show the date in standby mode, set the date, and select the date format and date separator.

Select *Auto-update of date & time* (network service) to set the phone to automatically update the time and date according to the current time zone.

Call settings

Press **Menu**, and select *Settings* and *Call settings*. Select

- *Automatic volume control* and the phone will automatically adjust the speaker volume according to the background noise.
- *Call divert* (network service) to divert your incoming calls. For details, contact your service provider.
- *Anykey answer* and *On* and you can answer an incoming call by briefly pressing any key, except , selection keys  and , the PTT key and .

- *Automatic redial* and *On* and your phone will make a maximum of ten attempts to connect the call after an unsuccessful call attempt.
- *Speed dialling* and *On* and the names and phone numbers assigned to the speed-dialling keys, from **2** abc to **9** wxyz, can be dialled by pressing and holding the corresponding number key.
- *Call waiting* and *Activate* and the network will notify you of an incoming call while you have a call in progress (network service). See "*Call waiting*" on page 9.
- *Summary after call* and *On* and the phone will briefly display the approximate duration and cost (network service) of the call after each call.
- *Send my caller ID* (network service) and select *Yes* or *Set by network*.
- *Line for outgoing calls* (network service) to select phone line 1 or 2 for making calls. This option is only shown if supported by your SIM card.

Phone settings

Press **Menu**, and select *Settings*, *Phone settings*. Select

- *Phone language* to set the display language of your phone. If you select *Automatic* the phone selects the language according to the information on the SIM card.
- *Memory status* to view how much memory is available in the phone's memory.
- *Automatic keypad* to set the keypad of your phone to lock automatically after a pre-set time delay when the phone is in standby mode and no function of the phone has been used. Select *On* and you can set the time from 5 seconds to 60 minutes.
When the keypad is on, calls still may be possible to the official emergency number.
- *Cell info display* and *On* to receive information from the network depending on the network cell used (network service).
- *Welcome note* and key in the note you would like to be shown briefly when the phone is switched on. To save the note, press **Save**.

- *Operator selection* and *Automatic* and the phone automatically selects one of the cellular networks available in your area. With *Manual*, you can select a network that has a roaming agreement with your home network operator.
- *Confirm SIM service actions*. See "*SIM services*" on page 81.
- *Help text activation* to set the phone to show or hide the help texts.
- *Start-up tone* to set the phone to play or not to play a start-up tone when the phone is switched on.

Connectivity

You can connect the phone to a compatible device via infrared or Bluetooth wireless technology connection. You can also define the settings for (E)GPRS dial-up connections.

Bluetooth wireless technology

This device is compliant with Bluetooth Specification 1.2 supporting the following profiles: Hands-free, headset profile, object push profile, file transfer profile, dial-up networking profile, SIM access profile, service discovery profile, Generic Access Profile, serial port profile, and Generic Object

Exchange Profile. To ensure interoperability between other devices supporting Bluetooth technology, use Nokia approved enhancements for this model. Check with the manufacturers of other devices to determine their compatibility with this device.


There may be restrictions on using Bluetooth technology in some locations. Check with your local authorities or service provider.

Features using Bluetooth technology, or allowing such features to run in the background while using other features, increase the demand on battery power and reduces the battery life.

Bluetooth technology allows you to connect the phone to a compatible Bluetooth device up to 10 meters. Since devices using Bluetooth technology communicate using radio waves, your phone and the other devices do not need to be in direct line-of sight, although the connection can be subject to interference from obstructions such as walls or from other electronic devices.

Set up a Bluetooth connection

Press **Menu** and select *Settings, Connectivity, Bluetooth*. Select from the following options:

- *Bluetooth > On or Off* – to activate or deactivate the Bluetooth function.  indicates an active Bluetooth connection.
- *Search for audio enhancements* – to search for compatible Bluetooth audio devices. Select the device that you want to connect to the phone.
- *Paired devices* – to search for any Bluetooth device in range. Select *New* to list any Bluetooth device in range. Scroll to a device, and select *Pair*. Enter the Bluetooth passcode of the device to associate (pair) the device to your phone. You only must give this passcode when you connect to the device for the first time. Your phone connects to the device, and you can start data transfer.

Bluetooth wireless connection

Press **Menu** and select *Settings, Connectivity, Bluetooth*. To check which Bluetooth connection is currently active, select *Active device*. To view a list of Bluetooth devices that are currently paired with the phone, select *Paired devices*.

Select **Options** to access some of the following functions depending on the status of the device and the Bluetooth connection. Select *Assign short name*, or *Auto-conn. without confirmation > Yes* – to set the phone automatically to connect to a paired Bluetooth device.

Bluetooth settings

To define how your phone is shown to other Bluetooth devices, press **Menu** and select *Settings, Connectivity, Bluetooth, Bluetooth settings* and *My phone's visibility* or *My phone's name*.

We recommend to use the setting **Hidden** in **My phone's visibility**. Always accept only Bluetooth communication from others that you agree with.

Infrared

You can set up the phone to receive data through its infrared (IR) port. To use an IR connection, the device with which you want to establish a connection must be IrDA compliant. You can send or receive data such as business cards, graphics, images, sound clips, videos and calendar notes to or from a compatible phone or data device (for example, a computer) via the IR port of your phone.



Do not point the IR (infrared) beam at anyone's eye or allow it to interfere with other IR devices. This device is a Class 1 Laser product.

Sending and receiving data via IR

1. Ensure that the IR ports of the sending and receiving devices are pointing at each other and that there are no obstructions between the devices.
2. To activate the IR port of your phone to receive data via IR, press **Menu**, and select *Settings*, *Connectivity* and *Infrared*.
3. The user of the sending phone selects the desired IR function to start data transfer.

If data transfer is not started within two minutes after the activation of the IR port, the connection is cancelled and has to be started again.

IR connection indicator

- When  is shown continuously, the IR connection is activated and your phone is ready to send or receive data via its IR port.
- When  blinks, your phone is trying to connect to the other device or a connection has been lost.

(E)GPRS

General Packet Radio Service (GPRS) is a network service that allows mobile phones to be used for sending and receiving data over an Internet Protocol (IP)-based network. GPRS is a data bearer that enables wireless access to data networks such as the Internet.

EGPRS (Enhanced GPRS), also known as EDGE (Enhanced Data Rates for Global Evolution), is similar to GPRS. EDGE is a radio interface modulation technique which increases GPRS data rates. For more information on the availability of EGPRS and data transfer speed, contact your network operator or service provider.

The applications that may use (E)GPRS are MMS, Instant messaging, browsing sessions, e-mail, remote SyncML, Java application downloading, push to talk and the PC dial-up (for example, Internet and e-mail).

Before you can use (E)GPRS technology, contact your network operator or service provider for availability of and subscription to the (E)GPRS service and save the (E)GPRS settings for each of the applications used over (E)GPRS. For information on pricing, contact your network operator or service provider.

Note that when you have selected GPRS as a data bearer, the phone uses EGPRS instead of GPRS if this is available in the network. You cannot select between EGPRS and GPRS but for some applications you may be able to select either GPRS or *GSM data* (CSD, circuit switched data).

(E)GPRS connection

Press **Menu**, and select *Settings, Connectivity, GPRS* and *GPRS connection*.

- Select *Always online* to set the phone to automatically register to an (E)GPRS network when you switch the phone on.
- Select *When needed* and the (E)GPRS registration and connection are established when an application using (E)GPRS needs it and closed when you end the application.

(E)GPRS modem settings

You can connect the phone via Bluetooth wireless technology, via infrared or a data cable connection to a compatible PC and use the phone as a modem to enable (E)GPRS connectivity from the PC.

To define the settings for (E)GPRS connections from your PC, press **Menu**, and select *Settings, Connectivity, GPRS* and *GPRS modem settings*.

- Select *Active access point* and activate the access point that you want to use.
- Select *Edit active access point* to change the access point settings.
 - Select *Alias for access point*. Enter the name that you would like for the activated access point and press **OK**.
 - Select *GPRS access point*. Key in the access point name (APN) to establish a connection to an (E)GPRS network and press **OK**. Contact your network operator or service provider for the APN.

You can also set the (E)GPRS dial-up service settings (access point name) on your PC using the Nokia Modem Options software, see "*PC Suite*" on page 82. If you have set the settings both on your PC and on your phone, note that the PC's settings will be used.

Enhancement settings

The enhancement settings menu is shown only if the phone is or has been connected to a compatible mobile enhancement, such as chargers and handsfree units.

Press **Menu**, and select *Settings* and *Enhancement settings*. You can select an enhancement menu if the corresponding enhancement is or has been connected to the phone. Depending on the enhancement, you can select some of the following options:

- *Default profile* to select the profile that you want to be automatically activated when you connect to the selected enhancement. You can select another profile while the enhancement is connected.
- *Automatic answer* to set the phone to answer an incoming call automatically after 5 seconds. If the *Incoming call alert* is set to *Beep once* or *Off*, automatic answer will not be in use.
- *Lights* to set the lights permanently *On*. Select *Automatic* to set the lights on for 15 seconds after a keypress.
- When the phone is connected to the full car kit, select *Ignition detector* and *On* to automatically switch off the phone approximately 20 seconds after you have switched off the car's ignition.

Configuration settings

Some of the network services need to have the correct configuration settings on your phone. Get the settings from your SIM-card, a service provider as a configuration message or key in your personal settings manually. Configuration settings from up to ten different service providers can be stored in the phone and can be managed within this menu.

To save the configuration settings received by a configuration message sent by a service provider, see "[Configuration settings service](#)" on page [xi](#).

Press **Menu**, and select *Settings*, *Configuration settings*. Select

- *Default configuration settings* to view the list of service providers stored on the phone (the default service provider is highlighted) and to select another service provider as default. Scroll to a provider and press **Details** to view the list with supported applications. To delete a service provider from the list, press **Options** and select *Delete*.

- *Activate default in all applications* to set the applications to use the settings from the default service provider.
- *Preferred access point* to select another access point. Normally the access point from your preferred network operator is to be used.

Keying in the settings manually

To enter, view and edit the settings manually, press **Menu**, and select *Settings*, *Configuration settings* and *Personal configuration settings*.

To add a new configuration, press **Add new** or press **Options** and select *Add new*. Choose one of the application types from the list and key in all the necessary settings. To activate the settings, press **Back** and **Options** and select *Activate*.

To view or to edit the user-defined settings select the application that you want to view and select the setting to edit.

Security settings

When calls are restricted, calls still may be possible to the official emergency number programmed into your device.

Press **Menu**, and select *Settings* and *Security settings*. Select

- *PIN code request* to set the phone to request your PIN code every time the phone is switched on. Some SIM cards do not allow the PIN code request to be turned off.
- *Call barring service* (network service) to restrict incoming calls to and outgoing calls from your phone. A barring password is required.
- *Fixed dialling* to restrict your outgoing calls to selected phone numbers if this function is supported by your SIM card.
- *Closed user group* (network service) to specify the group of people whom you can call and who can call you.
- *Security level*. Select *Phone* and the phone will request the security code whenever a new SIM card is inserted into the phone.

Select *Memory* and the phone will request the security code when the SIM card's memory is selected and you want to change the memory in use.

- **Access codes** to change the security code, PIN code, PIN2 code or barring password.
- **Code in use** to specify whether the UPIN or PIN code should be active.

Restore factory settings

To reset some of the menu settings to their original values, press **Menu**, and select **Settings** and **Restore factory settings**.

Operator menu

This menu lets you access a portal to services provided by your network operator. This menu is operator specific. The name and the icon depend on the operator. For more information, contact your network operator.

The operator can update this menu with a service message. For more information, see "Service inbox" on page 77.

Gallery

In this menu, you can manage graphics, images, video clips, recordings and tones. These files are arranged in folders.



Your phone supports a digital rights management (DRM) system to protect acquired content. A piece of content, for example a ringing tone, can be protected and associated with certain usage rules, for example number of usage times and a certain usage period. The rules are defined in the content's activation key which can be delivered either together with the content or independently depending on the service provider. You may be able to update these activation keys. Always check the delivery terms of any content and activation key before acquiring them, as they may be subject to a fee.

Copyright protections may prevent some images, ringing tones, and other content from being copied, modified, transferred or forwarded.

1. Press **Menu** and select **Gallery**. A list of folders is shown. **Images**, **Video clips**, **Themes**, **Graphics**, **Tones** and **Recordings** are the original folders on the phone.
2. Scroll to the desired folder and press **Open** to view a list of files in the folder or press **Options** and one of the options may be available:

Delete folder, Move, Rename folder, Downloads, Details, Type of view, Sort, Add folder, Memory status and Activation key list.

3. If you have opened a folder, select the file that you want to view and press **Open**. If *Themes* was selected before, scroll to a theme and press **View** to open the theme package.

Select and open a file, or press **Options** and use one of the following functions that may be available for the selected file:

Delete, Send, Edit image, Move, Rename, Set as wallpaper, Set as ring tone, Apply theme, Details, Type of view, Sort, Delete all, Open in sequence, Mute audio (Unmute audio), Set contrast, Add folder, Memory status, Activate content and Activation key list.

Send — to send the selected file using MMS, infrared or Bluetooth wireless technology.

Delete all — to delete all the files and folders in the selected folder.

Edit image — to insert text, a frame or clip-art into the selected picture, or to crop the image.

Open in sequence — to view the files in the folder one by one.

Play — to listen to, or to view a sound, or image file that is contained in the message.

Zoom — to increase the size of the image that is contained in the message.

Mute audio (Unmute audio) — to mute (unmute) the sound file.

Set contrast — to adjust the contrast level of the image.

Activate content — to update the activation key of the selected file. The option is only shown if the activation key updating is supported by the file.

Activation key list — to view the list of all available activation keys. You can delete the activation keys, for example, delete the expired ones.

Media



Voice recorder

You can record pieces of speech, sound or an active call for up to 5 minutes. For example, this is useful when recording a name and phone number for writing down later.

The recorder cannot be used when a data call or GPRS connection is active.

Recording

1. Press **Menu**, select *Media* and *Voice recorder*.



Note: If push to talk is not available on your phone, you can also press the PTT key to activate the *Voice recorder*.

2. To start the recording, select *Record*. To start the recording during a call, press **Options**, and select *Record*. While recording a call, all parties to the call will hear a faint beeping sound every 5 seconds.
3. To end the recording, press **Stop**. The recording will be saved in the *Recordings* folder of the *Gallery* menu.
4. To listen to the latest recording, select *Play last recorded*.
5. To send the latest recording, select *Send last recorded*. The recording can be sent via IR or MMS or Bluetooth wireless technology.

List of recordings

Press **Menu**, and select *Media*, *Voice recorder* and *Recordings list*. The list of folders in the *Gallery* is shown. Open *Recordings* to see the list with recordings.

Push to talk



Push to talk over cellular is a two-way radio service available over a GSM/GPRS cellular network (network service). Push to talk provides direct voice communication connected with the push of the PTT key.

You can use push to talk to have a conversation with one person or with a group of people having compatible devices. When your call is connected, the person or group you are calling does not have to answer the phone. Besides the GPRS counters, the phone registers only one-to-one calls in the recent call lists in *Call register*. The participants should confirm the reception of any communications where appropriate as there is no other confirmation whether the recipient(s) have heard the call.

To check availability and costs, and to subscribe to the service, contact your network operator or service provider. Roaming services may be more limited than for normal calls.

If the push to talk service is not available from your provider, the PTT key of your phone will activate the *Voice recorder*.

Before you can use the push to talk service, you must define the required push to talk service settings.



While you are connected to the push to talk service, you can use the other functions of the phone. The push to talk over cellular service is not connected to traditional voice communication, and therefore many of the services available for traditional voice calls (for example, voice mailbox) are not available for push to talk over cellular communications.

Push to talk menu

Press **Menu**, and select *Push to talk*. The push to talk menu selection list is shown.

- To connect to or disconnect from the push to talk service, select *Switch PTT on* or *Switch PTT off*.
- To view the received callback requests, select *Callback inbox*.
- To view the list of push to talk groups, select *Group list*.
- To view the list of contacts to which you have added the push to talk address, select *Contacts list*.
- To add a new push to talk group to the phone, select *Add group*.
- To set the push to talk settings for use, select *PTT settings*.
- To set the required settings for the push to talk connection, select *Configuration settings*.
- To open the browser and to connect to the push to talk network portal provided by the service provider, select *Web*.

Connecting to and disconnecting from the push to talk service

- To connect to the push to talk service, press **Menu**, and select *Push to talk*, and *Switch PTT on*.  indicates the push to talk connection.  indicates that the service is temporarily unavailable. The phone automatically tries to reconnect to the service until you disconnect from the push to talk service. If you have added group(s) to the phone, you are automatically joined to the active (*Default* or *Listened*) groups, and the name of the default group is displayed in standby mode.
- To disconnect from the push to talk service, select *Switch PTT off*.

Callback requests

If you make a one-to-one call and do not get a response, you can send a request for the person to call you back.

When someone sends you a callback request, *Callback request received* is displayed in standby mode. When you receive a callback request from someone who is not in your contacts list, you can save the name to your contacts.

Sending a callback request

- To send a callback request from the contacts list in the *Push to talk* menu, select *Contacts list*. Scroll to a contact, press **Options**, and select *Send callback*.
- To send a callback request from the *Contacts*, move the joystick down in standby mode, and scroll to the desired contact. Press **Details**, scroll to the push to talk address, press **Options**, and select *Send callback*.
- To send a callback request from the group list in the *Push to talk* menu, select *Group list*, and scroll to the desired group. Press **Options**, select *Active members*, scroll to the desired contact, press **Options**, and select *Send callback*.

- To send a callback request from the callback request list in the *Push to talk* menu, select *Callback inbox*. Scroll to a contact, press **Options**, and select *Send callback*.

Responding to a callback request

1. To open the *Callback inbox*, press **View**. The list of nicknames of the persons who have sent you callback requests is shown.
2. To make a one-to-one call, press the PTT key.
3. To send a call request back to the sender, press **Options**, and select *Send callback*.

To delete the request, press **Delete**.

Saving the callback request sender

1. To open the *Callback inbox*, press **View**. The list of nicknames of the persons who have sent you callback requests is shown.
2. To view the sender's push to talk address, press **Options**, and select *View PTT address*.

To save a new contact or to add the push to talk address to a contact, press **Options**, and select *Save as* or *Add to contact*.

Making and receiving a push to talk call

Set the phone to use either loudspeaker or earpiece for push to talk communication. When the earpiece is selected, you can use the phone normally by holding it to your ear.



Warning: Do not hold the device near your ear when the loudspeaker is in use, because the volume may be extremely loud.

When connected to the push to talk service, you can make or receive group calls or one-to-one calls. One-to-one calls are calls you make to only one person.

Making a group call

- To make a call to the default group, press the PTT key. A tone sounds indicating that the access is granted, and the phone displays your nickname and group name.

To make a call to a non-default group, select *Group list* in the push to talk menu, scroll to the desired group, and press the PTT key.

- Press and hold the PTT key the entire time you are talking, and hold the phone in front of you so that you can see the display. When you have finished, release the PTT key. Talking is allowed on a first-come, first-served basis. When someone stops talking, the first person to press the PTT key can talk next.

Making a one-to-one call

- To start a one-to-one call from the list of contacts to which you have added the push to talk address received from the service provider, select *Contacts list*. Scroll to a contact, and press the PTT key.

You can also select the contact from the *Contacts* list.

- To start a one-to-one call from the list of push to talk groups, select *Group list*, and scroll to the desired group. Press **Options**, select *Active members*, scroll to the desired contact, and press the PTT key.
- To start a one-to-one call from the list of callback requests you have received, select *Callback inbox*. Scroll to the desired nickname, and press the PTT key.

Receiving a group or a one-to-one call

- A short tone notifies you of an incoming group and one-to-one call. When receiving a group call, the group name and the nickname of the caller are displayed. When receiving a one-to-one call from a person whose information you have saved in *Contacts*, the saved name is displayed if identified; otherwise, only the nickname of the caller is displayed.
- You can either accept or reject an incoming one-to-one call if you have set the phone to first notify you of the one-to-one calls.
- If you press the PTT key to try to respond to a group while another member is talking, you hear a queuing tone and *Queuing* is displayed as long as you press the PTT key. Press and hold the PTT key, and wait for the other person to finish, then you can talk.
- To add a push to talk address to a name in the *Contacts*:
Move the joystick down in standby mode, scroll to the desired contact, and press **Details**. Press **Options** and select *Add detail* and *PTT address*.
- To add a contact to the push to talk contacts list:
To add the push to talk contact, open the push to talk menu, and select *Contacts list*. Press **Options**, and select *Add contact*.
- To add a contact from the group list:
When connected to the push to talk service, select *Group list*, scroll to the desired group, and press **Options**. Select *Active members*, scroll to the member whose contact information you want to save, and press **Options**. Select *Save as* to add a new contact, or *Add to contact* to add a push to talk address to a name in the *Contacts*.

Adding one-to-one contacts

You can save the names of persons to whom you often make one-to-one calls.

Creating and setting up groups

When you call a group, all members joined to the group hear the call simultaneously.

Each member in the groups is identified by a nickname, which is shown as a caller identification. Group members can choose a nickname for themselves in each group.

Groups are registered with a URL address. One user registers the group URL in the network by joining the group session the first time.

There are three types of push to talk groups:

- Provisioned groups are closed groups that allow only selected participants provisioned by the service provider to join in the groups.
- Ad hoc groups are groups that the users can create. You can create your own group, and invite members to the group.
- Ad hoc pro groups; you can create your own group from members in a provisioned group. For example, a business can have a closed group, plus separate groups created for certain business functions.

Adding a group

1. Press **Menu**, and select *push to talk*, *Add group*, and *Guided*.
2. To set the security level for the group, select *Open group* or *Secured group*.

If you select *Secured group*, the phone automatically creates a scrambled part to the group address that the members cannot view when they receive the invitation to the group. Only the person who creates the secured group, can invite more members to the group.

3. Key in the name for the group, and press **OK**.
4. Select the status for the group: *Default*, *Listened*, or *Inactive*. The phone indicates that the group is saved and its status. *Default* and *Listened* are active groups. When you press the PTT key to make a group call, the default group is called if you have not scrolled to any other group or contact.
5. To send an invitation to the group, press **Yes** when the phone requests for sending an invitation. You can send the invitation using a text message, infrared or Bluetooth wireless technology.

The members you invite to the open groups can also invite more members to the group.

Receiving an invitation

1. When you receive a text message invitation to a group, *Group invitation received*: is displayed.
2. To view the nickname of the person who sent the invitation and the group address if the group is not a secured group, press **View**.
3. To add the group to your phone, press **Save**, and to set the status for the group, select *Default*, *Listened*, or *Inactive*.

To reject the invitation, press **Exit** and **Yes**, or press **View**, **Discard**, and **Yes**.

Settings for push to talk

There are two kinds of push to talk settings: settings for use and for connecting to the service.

You may receive the settings for connecting to the service as a configuration message from your network operator or service provider, see "Configuration settings service" on page xi. To key in the settings manually, see "Configuration settings" on page 53.

To access the settings for connecting to the service, press **Menu**, and select *Push to talk*, *Config. settings*. Select from following:

- *Configuration*. Only the configurations that support the push to talk service are shown. Select a service provider, or *Default*, or *Personal config*. for push to talk service. You may receive the push to talk settings as a configuration message, see "Configuration settings service" on page xi. To key in the configuration settings manually, see "Configuration settings" on page 53.
- *Account* and select a push to talk service account contained in the active configuration settings.
- Select one by one to set the following: *PTT user name*, *Default nickname*, *PTT password*, *Domain* and *Server address*.

To access the push to talk settings for use, press **Menu**, select *Push to talk* and *PTT settings*. Select from following:

- *1 to 1 calls* and *On* to select the phone to allow the reception of incoming one-to-one calls. If you select *Off*, you can make but not

receive one-to-one calls. The service provider may offer some services that override these settings.

1 to 1 calls and *Notify* to set the phone to first notify you of incoming one-to-one calls with a ringing tone.

- *Listened groups* and *On* to activate the listened groups.
- *PTT status in startup* and *Yes* to set the phone to automatically connect to the push to talk service when you switch the phone on.
- *Send my PTT address* and *No* to hide your push to talk address from group and one-to-one calls.

■ Organiser



Alarm clock

You can set the phone to alarm at a desired time. Press **Menu**, and select *Organiser* and *Alarm clock*.

To set the alarm, select *Alarm time*, and enter the alarm time. To change the alarm time when the alarm time is set, select *On*. Select *Repeat alarm* to set the phone to alert you on selected days of the week.

Select *Alarm tone* and select the default alarm tone, personalise the alarm tone by selecting one from the ringing tone list or from Gallery.

When the alarm time expires

The phone will sound an alert tone, and flash *Alarm!* and the current time on the display, even if the phone was switched off. Press **Stop** to stop the alarm. If you let the phone continue to sound the alarm for a minute or press **Snooze**, the alarm stops for about 10 minutes and then resumes.

If the alarm time is reached while the device is switched off, the device switches itself on and starts sounding the alarm tone. If you press **Stop**, the device asks whether you want to activate the device for calls. Press **No** to switch off the device or **Yes** to make and receive calls. Do not press **Yes** when wireless phone use may cause interference or danger.

Calendar

The calendar uses shared memory, see "*Shared memory*" on page ix.






Press **Menu**, and select *Organiser* and *Calendar*.

The current day is indicated by a frame. If there are any notes set for the day, the day is in bold type. To view the day notes, press **View**. To view a week, press **Options** and select *Week view*. To view a single note, press **View**.



Other options for the calendar day view can be make a note; delete, edit, move, or repeat a note; copy a note to another day; send a note with Bluetooth technology; or send a note to the calendar of another compatible phone as a text message or multimedia message. In *Settings* you can set the date, time, time zone, date or time format, or the first day of the week. In the *Auto-delete notes* option you can set the phone to delete old notes automatically after a specified time.

To delete all notes in the calendar, select the month or week view, press **Options** and select *Delete all notes*.

Making a calendar note

Press **Menu**, and select *Organiser* and *Calendar*. Scroll to the date you want, press **Options** and select *Make a note*. Select one of the following note types:  *Meeting*,  *Call*,  *Birthday*,  *Memo* or  *Reminder*.

When the phone sounds an alarm for a note

The phone beeps, and displays the note. With a call note  on the display, you can call the displayed number by pressing . To stop the alarm and to view the note, press **View**. Press **Snooze** and the phone sounds an alarm again after 10 minutes. To stop the alarm without viewing the note, press **Exit**.

To-do list

You can save a note for a task that you have to do, select a priority level for the note and mark it as done when you have completed it. You can sort the notes by priority or by date. The to-do list uses shared memory, see "[Shared memory](#)" on page [ix](#).

Press **Menu**, and select *Organiser* and *To-do list*.

Press **Add note** to make a note. Key in the note and press **Save**. Select the priority for the note. The phone automatically sets the deadline without an alarm for the note. To change the deadline, view the note and select the deadline option.

Or scroll to a note and press **View** or press **Options**. To add a new note, select **Add**. For example, you can also view and delete the selected note and delete all the notes that you have marked as done. You can sort the notes by priority or by deadline, send a note to another phone, save a note as a calendar note, or access the calendar. While viewing a note, you can also, for example, select an option to edit the selected note, edit the deadline or priority for the note, or mark the note as done.

Notes

You can use this application for writing and sending notes to compatible devices via MMS. The Notes application uses shared memory, see "[Shared memory](#)" on page [ix](#).

Press **Menu** and select **Organiser** and **Notes**. The phone will ask you to set the date and time, if they have not already been set when you start to write a note. To add a note, press **Add note** or press **Options** and select **Make a note**. Key in the note and select **Save**. Or scroll to a note press **View** or press **Options** to see the options for notes.

Options for **Notes** include deleting, and editing a note. While editing a note, you can also exit the text editor without saving the changes. You can send the note to compatible devices using a text message, a multimedia message, Infrared or Bluetooth wireless technology. If the note is too long to be sent as a text message, the phone asks you to delete the appropriate number of characters from your note.

Wallet

In **Wallet** you can save personal information, for example, credit card numbers and addresses. The data that are saved in the wallet can easily be retrieved while browsing to automatically fill in data fields, for example, when making purchases and the service supports wallet functionality. You can also save access codes to mobile services that request a user name and password.

The data in the wallet are protected with a wallet code that you can define when you access wallet for the first time. At **Create wallet code:** key in the code and press **OK** to confirm it and at **Verify wallet code:** key in the code again and press **OK**. See also "[Wallet code \(4 to 10 digits\)](#)" on page [x](#).

If you want to delete all the content of the wallet and the wallet code, key in *#7370925538# (*#res wallet# in letters) in standby mode. You also need the phone's security code, see "Access codes" on page ix.

To add the content into the wallet menu, and to edit it, access the wallet menu. To use the content of the wallet in a mobile service, access the wallet via the browser, see "Web" on page 73.

Accessing the wallet menu

To access the wallet menu, press **Menu**, select *Organiser* and *Wallet*. Key in your wallet code and press **OK**, see "Wallet settings" on page 68.

Select *Wallet profiles* to create card combinations, *Cards* to save personal card information, *Tickets* to save the notifications of e-tickets that you have bought via a mobile service, *Receipts* to save receipts of mobile purchases, *Personal notes* to save all kinds of personal information that you want to keep protected by the wallet PIN code, or *Settings*, see "Wallet settings" on page 68.

Saving card details

Access the wallet and select *Cards*. Select the card type to save details: *Payment cards*, *Loyalty cards*, *Access cards*, *User info cards*, or *Address cards*. If no card is added, press **Add new**, otherwise, press **Options** and select *Add new*. Fill in the fields for the details and press **Done**.

If supported by your service provider, you can also receive card information to your phone as a configuration message. You will be notified as to which category the card belongs to. For availability of receiving card information as configuration settings, contact the card issuer or service provider.

Personal notes

You can save personal notes, for example, account numbers, passwords, codes or notations.

Access the wallet and select *Personal notes*. Press **Options** and you can view, add, edit a selected note and sort notes either by name or date or delete notes. When viewing a note, you can edit or delete the selected note. The option *Send via text msg.* is for copying the

note as a text message and *Copy to calendar* is for copying the note to the calendar as a memo. *Use detail* is for extracting numbers, e-mail addresses and web addresses from a note.

Creating a wallet profile

When you have saved your personal card details, you can combine them together into a wallet profile. You can use the profile to retrieve wallet data from different cards while browsing.

1. Access the wallet and select *Wallet profiles*.
2. To create a new wallet profile if no profile is added, press **Add new**. Otherwise, press **Options** and select *Add new*.
3. Fill in the following fields and press **Done**. Select *Select payment card next*, *Select loyalty card next*, *Select access card next*, *Select user info card next*, *Select billing address next*, *Select shipping address next*, *Select receipt delivery address next*, *Select receipt delivery method next* and *Wallet profile name*.

Wallet settings

Access the wallet and select *Settings*. Select *Change code* to change the wallet code. Select *RFID* to set the RFID ID with the *RFID code* and *RFID type*. (RFID = Radio Frequency Identification, technology to conduct commercial transactions using your phone).

Guidelines for paying for your purchases with the wallet

- To do your shopping, access the desired service site that supports the wallet. The service needs to support the Electronic Commerce Modelling Language specification. See "**Making a connection to a service**" on page 74.

Choose the product that you want to buy and carefully read all information provided before your purchase.

The text may not fit within a single screen. Therefore, make sure to scroll through and read all of the text before your purchase.

- To pay for the items that you wish to buy, the phone asks whether you want to use wallet or not. The phone also asks for your wallet PIN code.

- Select the card that you want to pay with from the Payment cards list. Provided that the data form you receive from the service provider supports the Electronic Commerce Modelling Language specification, the phone automatically fills in the credit card information or the wallet profile from the wallet.
- Approve the purchase, and the information is forwarded.
- You may receive an acknowledgement or a digital receipt of the purchase.
- To close the wallet, select *Close wallet*. If you do not use the wallet for 5 minutes, it will be automatically closed.

A cache is a memory location that is used to store data temporarily. If you have tried to access or have accessed confidential information requiring passwords, empty the cache after each use. The information or services you have accessed is stored in the cache.

To empty the cache, see "[Cache memory](#)" on page 78.

Synchronisation

Synchronisation allows you to save your calendar and contacts data on a remote Internet server (network service) or on a compatible PC. If you have saved data on the remote Internet server, you can synchronise your phone by starting the synchronisation from your phone. You can also synchronise the data in your phone's contacts, calendar and notes to correspond to the data of your compatible PC by starting the synchronisation from your PC.

The contact data in your SIM card will not be synchronised.

Synchronising from your phone

Before synchronising from your phone via internet, you need to subscribe to a synchronisation service and get the configuration settings from your provider. For more information on availability and the synchronisation service settings, contact your service provider.

To start the synchronisation from your phone:

1. Activate the connection settings you need for the synchronisation. See "[Settings for the synchronisation from your phone](#)" on page 70.

2. Press **Menu**, select *Organiser*, *Synchronisation*, *Server sync*. Select *Data to be synchronised* and mark the data to be synchronised and press **Done**. Then select *Synchronise*. The marked data of the active set will be synchronised after confirmation.

Settings for the synchronisation from your phone

You may receive the synchronisation settings as a configuration message from the service provider. For more information on availability and the synchronisation service settings, contact your service provider. For receiving the settings as a configuration message, see "Configuration settings service" on page xi. To key in the settings manually, see "Configuration settings" on page 53.

Press **Menu**, select *Organiser*, *Synchronisation* and *Serversync* and *Sync settings*. Select *Configuration* and scroll to the service provider whose settings you would like to activate and press **Select**. Select *Account* to see the accounts provided by the service provider. If more than one account is displayed choose the one you want to use.

Synchronising from your compatible PC

To synchronise contacts, the calendar and the notes from your PC, use Bluetooth wireless technology or a data cable. You also need the PC Suite software of your phone installed on the PC. Start the synchronisation from the PC using PC suite. Ensure that the phone is in standby mode and that the time and date are set.

■ Applications



Games and applications

Your phone software may include some games and Java applications specially designed for this Nokia phone.

Launching a game or an application

Press **Menu**, and select *Applications*, then *Games* and *Select game*, or *Collection* and *Select application*. Scroll to a game or an application and press **Open** or press **↵**.

The following options may be available for games and applications:

- *Delete* to delete the game or application from the phone.

- *Details* to give additional information about the game or application.
- *Update version* to check if a new version is available for download from the services (network service).
- *Web page* to provide further information or additional data from an Internet page. This feature needs to be supported by the network.
- *App. access* to restrict the game or application from accessing the network to prevent you from accruing unexpected costs. Select *Communication* and *Network access, Messaging*, or select *Auto-start*. Select in each category, if available, one of the following permissions: *Ask every time*, *Ask first time only*, *Always allowed*, *Not allowed*.

Game and application downloads

Your phone supports J2ME™ Java applications. Make sure that the application is compatible with your phone before downloading it.

Press **Menu**, and select *Applications, Games* and *Game downloads* or *Collection* and *App. downloads*. The list of available bookmarks is shown.

Select *More bookmarks* to access the list of bookmarks in the *Web* menu, see "*Bookmarks*" on page 77.

Select a bookmark to connect to the desired service. For the availability of different services, pricing and tariffs, contact your service provider.



Important: Only install and use applications and other software from sources that offer adequate security and protection against harmful software.

Note that when downloading an application, it may be saved in the *Games* menu instead of the *Applications* menu.

Game settings

Press **Menu**, and select *Applications, Games* and *App. settings* to set sounds, lights and shakes for games.

Memory status for games and applications

To view the amount of memory available for game and application installations (third shared memory), press **Menu**, and select *Applications, Games* or *Collection* and then *Memory*.

The games and applications use shared memory, see "*Shared memory*" on page ix.

Calculator

The calculator in your phone adds, subtracts, multiplies, divides, calculates the square and the square root and converts currency values.



Note: This calculator has limited accuracy and is designed for simple calculations.

Press **Menu**, and select *Applications*, *Extras* and *Calculator*. When '0' is displayed on the screen, key in the first number in the calculation, press \diamond **#** for a decimal point. Press **Options** and select *Add*, *Subtract*, *Multiply*, *Divide*, *Square*, *Square root* or *Change sign*. Key in the second number. To get the answer, press **Equals**. To start a new calculation, first press and hold **Clear**.

Performing a currency conversion

Press **Menu**, and select *Applications*, *Extras* and *Calculator*. To save the exchange rate, press **Options** and select *Exchange rate*. Select either of the displayed options. Key in the exchange rate, press \diamond **#** for a decimal point, and press **OK**. The exchange rate remains in the memory until you replace it with another one. To perform the currency conversion, key in the amount to be converted, press **Options** and select *In domestic* or *In foreign*.

Countdown timer

Press **Menu**, and select *Applications*, *Extras* and *Countdown timer*. Key in the alarm time in hours, minutes and seconds and press **OK**. If you wish, write your own note text which is displayed when the time expires, and press **Start** to start the countdown timer.

To change the countdown time, select *Change time*. To stop the timer, select *Stop timer*.

If the alarm time is reached when the phone is in standby mode, the phone sounds a tone and flashes the note text if it is set or else *Countdown time up*. Stop the alarm by pressing any key. If no key is pressed, the alarm automatically stops within 30 seconds. To stop the alarm and to delete the note text, press **Exit**.

Stopwatch

You can measure time, take intermediate times or lap times using the stopwatch. During timing, the other functions of the phone can be used. To set the stopwatch timing in the background, press **⏏**.

Using the stopwatch or allowing it to run in the background when using other features increases the demand on battery power and reduces the battery life.

Time observation and time splitting

1. Press **Menu**, and select *Applications, Extras, Stopwatch* and *Split timing*. You can select *Continue* if you have set the timing in the background.
2. Press **Start** to start the time observation. Press **Split** every time you want to take an intermediate time. The intermediate times are listed below the running time on the display. Scroll to view the times.
3. Press **Stop** to stop the time observation.
4. To save the times, press **Save**. Or press **Options** and you can start the time observation again or reset the times without saving it.

Lap times

Press **Menu**, and select *Applications, Extras, Stopwatch* and *Lap timing*.

Press **Start** to start the time observation and **Lap** to take a lap time. Press **Stop** to stop the lap timing. To save the times, press **Save** and enter a name. Or press **Options** and you can save or reset the lap times.

Viewing and deleting times

Press **Menu**, and select *Applications, Extras* and *Stopwatch*.

If the stopwatch is not reset, you can select *Show last* to view the most recent measured time. Select *View times* and select the time set that you want to view.

To delete the saved times, select *Delete times*. Select *Delete all* and press **OK**, or select *One by one*, scroll to the times you want to delete, press **Delete** and press **OK**.

Web



You can access various mobile Internet services with your phone's browser.

Check the availability of these services, pricing and tariffs with your network operator and/or the service provider.

With your phone's browser you can view the services that use Wireless Mark-Up Language (WML) or extensible HyperText Mark-up Language (XHTML) on their pages. Appearance may vary due to screen size. Note that you may not be able to view all the details of the Internet pages.



Important: Use only services that you trust and that offer adequate security and protection against harmful software.

Basic steps for accessing and using services

1. Save the service settings that are required to access the service that you want to use. See "[Setting up the phone for a service](#)" on page 74.
2. Make a connection to the given service. See "[Making a connection to a service](#)" on page 74.
3. Start browsing the pages of the service. See "[Browsing the pages of a service](#)" on page 75.
4. Once you are finished browsing, end the connection to the service. See "[Disconnect from a service](#)" on page 76.

Setting up the phone for a service

Your phone may have stored some service settings. Additional settings may be received as a configuration message from the service provider that offers the service that you want


to use. To receive the service settings as a configuration message, see "[Configuration settings service](#)" on page xi and "[Configuration settings](#)" on page 53.

For more information and for the appropriate settings, contact your service provider.

Making a connection to a service

Make sure that the service settings of the service you want to use are activated. To activate the settings, press **Menu**, and select *Web*, *Settings* and *Configuration settings*. Select *Configuration* and select the configuration set you want to activate.

Make a connection to the service. There are several ways to connect:

- Open the start page, for example, the home page of the service provider: press **Menu**, and select *Web* and *Home*, or in standby mode press and hold .
- Select a bookmark of the service: press **Menu**, and select *Web*, *Bookmarks*, and select a bookmark. If the bookmark does not work with the current active service settings, activate another set of service settings and try again.

- Select the last URL: press **Menu**, and select *Web, Last web addr.*
- Key in the address of the service: press **Menu**, and select *Web* and then *Go to address*. Key in the address of the service and press **OK**.
- To select a highlighted item, press **↵**, or press **Options** to select the option for opening the link.
- To enter letters and numbers, press the keys **0-9** - **wxyz** and to enter special characters, press the key *** .**

Browsing the pages of a service

After you have made a connection to the service, you can start browsing its pages. The function of the phone keys may vary in different services. Follow the text guides on the phone display. For more information, contact your service provider.

Note that if GPRS is selected as the data bearer, the indicator **G** is shown on the top left of the display during browsing. If you receive a call or a text message, or make a call during an (E)GPRS connection, the indicator **E** will be shown on the top left of the display to indicate that the (E)GPRS connection is suspended (on hold). After a call, for example, the phone tries to reconnect the (E)GPRS connection.

Using the phone keys while browsing

- Use the joystick to browse through the page.

Options while browsing

Press **Options** and the following options may be available. The service provider may also offer other options. Select *Shortcuts, Home, Add bookmark, Bookmarks, History, Page options, Download links, Save to folder, Other options, Reload, Quit*.

A cache is a memory location that is used to store data temporarily. If you have tried to access or have accessed confidential information requiring passwords, empty the cache after each use. The information or services you have accessed is stored in the cache. To empty the cache, see "Cache memory" on page 78.

Direct calling

The browser supports functions that you can access while browsing. You can make a voice call, send DTMF tones while a voice call is in progress, and save a name and a phone number from a page.

Disconnect from a service

To quit browsing and to end the connection, press **Options** and select *Quit*. When *Quit browsing?* is shown, press **Yes**.

Alternatively, press **⏏** twice, or press and hold **⏏**.

Appearance settings of the browser

While browsing, press **Options** and select *Other options* and *Appearance settings*, or in standby mode, press **Menu**, and select *Web, Settings* and *Appearance settings*. Select

- *Text wrapping*. Select *On* and the text continues on the next line. If you select *Off*, the text will be abbreviated.
- Select *Font size* and choose a size.
- *Show images*. Select *No* and any pictures appearing on the page are not shown.
- *Alerts* and select *Alert for unsecure connection* and *Yes* to set the phone to alert when a secure connection changes to an insecure one during browsing. Select *Alert for unsecure items* and *Yes* to set the phone to alert

when a secure page contains an insecure item. Note that these alerts do not guarantee a secure connection. For more information, see "[Browser security](#)" on page 78.

- *Character encoding* to select the character set that the phone uses for showing browser pages that do not include that information or to select whether to always use UTF-8 encoding when sending a Web address to a compatible phone.

Cookies

A cookie is data that a site saves in your phone's browser cache memory. The data can be, for example, your user information or your browsing preferences. Cookies will be saved until you clear the cache memory, see "[Cache memory](#)" on page 78.

While browsing, press **Options** and select *Other options, Security* and *Cookie settings*, or in standby mode, press **Menu**, and select *Web, Settings, Security settings* and *Cookies*. Select *Allow* or *Reject* to allow the phone to or prevent the phone from receiving cookies.

Bookmarks

You can save page addresses as bookmarks in the phone's memory.

1. While browsing, press **Options** and select *Bookmarks*, or in standby mode, press **Menu**, and select *Web* and *Bookmarks*.
2. Scroll to the bookmark that you want to use and press **Select** to make a connection to the page associated with the bookmark. Or select **Options** to view the title and the address of the selected bookmark, edit or delete the selected bookmark, or send it directly to another phone as a bookmark, or as a text message, or create a new bookmark.

Your device may have some bookmarks loaded for sites not affiliated to Nokia. Nokia does not warrant or endorse these sites. If you choose to access them, you should take the same precautions, for security or content, as you would with any Internet site.

Receiving a bookmark

When you have received a bookmark (sent as a bookmark) *1 bookmark received* is displayed. Press **Show** to view the bookmark. To save the bookmark, press **Save**, or press **Options** and select *View* to see the details or *Delete* to discard it.

Downloading

To download more tones, graphics, games, videos, themes or applications to your phone (network service), press **Menu**, and select *Web* and *Download links*. Select *Tone downloads*, *Graphic downloads*, *Game downloads*, *Video downloads*, *Theme downloads* or *App downloads*.



Important: Only install and use applications and other software from sources that offer adequate security and protection against harmful software.

For the availability of different services, pricing and tariffs, contact your network operator and/or service provider.

Service inbox

The phone is able to receive service messages (pushed messages) sent by your service provider (network service). Service messages are notifications of, for example, news headlines, and they may contain a text message or an address of a service.

To access the *Service inbox* in standby mode, when you have received a service message, press **Show**. If you press **Exit** the message is moved to the *Service inbox*. To access the *Service inbox* later, press **Menu**, and select *Web* and *Service inbox*.

To access the *Service inbox* while browsing, press **Options** and select *Other options* and *Service inbox*. Scroll to the message that you want, press **Retrieve** to activate the browser and download the marked content or press **Options** and select *Details* to display detailed information on the service notification, or select *Delete* to delete it.

Service inbox settings

Press **Menu**, and select *Web*, *Settings* and *Service inbox settings*. Select *Service messages* and *On* (or *Off*) to set the phone to receive (or not to receive) service messages.

Select *Message filter* and *On* to set the phone to receive service messages only from content authors approved by the service provider. To view the list of the approved content authors, select *Trusted channels*.

Select *Automatic connection*. If you have set the phone to receive service messages and select *On*, the phone will automatically activate the browser from standby mode when the phone has received a service message. If you select *Off*, the phone will activate the browser only after you have selected *Retrieve* when the phone has received a service message.

Cache memory

The information or services that you have accessed are stored in the cache of your phone. A cache is a buffer memory, which is used to store data temporarily. To empty the cache while browsing, press **Options** and select *Other options* and *Clear the cache*, or in standby mode, press **Menu**, and select *Web*, and *Clear the cache*.

Browser security

Security features may be required for some services, such as banking services or online shopping. For such connections you need security certificates and possibly a security module which may be available on your SIM card. For more information, contact your service provider.

Security module

The security module can contain certificates as well as private and public keys. The purpose of the security module is to improve security services for applications requiring browser connection, and it allows you to use a digital signature. The certificates are saved in the security module by the service provider.

Press **Menu** and select *Web, Settings, Security settings* and *Security module settings*. Select from following options:


- *Security module details* to show the security module title, its status, manufacturer and serial number.
- *Module PIN request* to set the phone to request the module PIN when using services provided by the security module. Key in the code and select *On*. To disable the module PIN request, select *Off*.
- *Change module PIN* to change the module PIN, if allowed by the security module. Enter the current module PIN code, then enter the new code twice.
- *Change signing PIN*. Select the signing PIN that you want to change. Enter the current PIN code, then enter the new code twice.

See also "[Access codes](#)" on page ix.

Certificates

There are three kinds of certificates: server certificates, authority certificates and user certificates.

- The phone uses a server certificate to create a connection with improved security to the content server. The phone receives the server certificate from the service provider before the connection is established and its validity is checked using the authority certificates saved in the phone. Server certificates are not saved.

The security indicator  is displayed during a connection if the data transmission between the phone and the content server is encrypted.

The security icon does not indicate that the data transmission between the gateway and the content server (or place where the requested resource is stored) is secure. The service provider secures the data transmission between the gateway and the content server.

- Authority certificates are used by some services, such as banking services, for checking the validity of other certificates. Authority certificates can either be saved in the security module by the service provider, or they can be downloaded from the network, if the service supports the use of authority certificates.
- User certificates are issued to users by a Certifying Authority. User certificates are required, for example, to create a digital signature and they associate the user with a specific private key in a security module.



Important: Note that even if the use of certificates makes the risks involved in remote connections and software installation considerably smaller, they must be used correctly in order to benefit from increased security. The existence of a certificate does not offer any protection by itself; the certificate manager must contain correct, authentic, or trusted certificates for increased security to be available. Certificates have a restricted lifetime. If Expired certificate or


Certificate not valid yet is shown even if the certificate should be valid, check that the current date and time in your device are correct.

Before changing any certificate settings, you must make sure that you really trust the owner of the certificate and that the certificate really belongs to the listed owner.

Digital signature

You can make digital signatures with your phone if your SIM card has a security module. The signature can be traced back to you via the private key on the security module and the user certificate that was used to perform the signature. Using the digital signature can be the same as signing your name to a paper bill, contract or other document.

To make a digital signature, select a link on a page, for example, the title of the book that you want to buy and its price. The text to sign (possibly including amount, date, etc.) will be shown.

Check that the header text is *Read* and that the digital signature icon  is shown.



Note: If the digital signature icon does not appear, there is a security breach, and you should not enter any personal data such as your signing PIN.

To sign the text, read all of the text first and select **Sign**.

The text may not fit within a single screen. Make sure to scroll through and read all of the text before signing.

Select the user certificate you want to use. Key in the signing PIN (see "General information" on page viii) and press **OK**. The digital signature icon will disappear, and the service may display a confirmation of your purchase.

■ SIM services

In addition to the functions available on the phone, your SIM card may provide additional services that you can access in this menu which is shown only if it is supported by your SIM card. The name and contents of the menu depend on the SIM card.



For availability, rates and information on using SIM services, contact your SIM card vendor, network operator, service provider or other vendor.

Depending on the operator you can set the phone to show you the confirmation messages sent between your phone and the network when you are using the SIM services by selecting the option **Yes** within the menu **Confirm SIM service actions**, in **Phone settings**.

Note that accessing these services may involve sending messages or making a phone call for which you may be charged.

6. PC Connectivity

You can send and receive e-mail, and access the Internet when your phone is connected to a compatible PC via an IR connection or a data cable connection. You can use your phone with a variety of PC connectivity and data communications applications. With PC Suite you can, for example, synchronise contacts, calendar and notes between your phone and the compatible PC or a remote Internet server (network service).

You may find more information and downloadable files, for example PC suite, in the support area on the Nokia website, www.nokia-asia.com.

■ PC Suite

PC Suite contains the following applications (in alphabetical order):

- **HTML Help** to support the application usage.
- **Nokia 6021 data modem drivers** enable you to use your phone as a modem.
- **Nokia Application Installer** to install J2ME Java applications from a compatible PC to the phone, for example games and dictionaries.
- **Nokia Connection Manager** to select the connection type between the PC and phone.
- **Nokia Contacts Editor** to edit contacts in your phone.
- **Nokia Content Copier** to back up and restore personal data between your phone and a compatible PC. Supports also content transfer to another compatible Nokia phone.
- **Nokia Image Converter** to make images in supported formats usable for multimedia messages or wallpaper and to transfer them to your phone.
- **Nokia Modem Options** contains settings for HSCSD and GPRS connections.
- **Nokia Multimedia Player** to for playing sounds, images, videos and multimedia messages on the PC. Multimedia Player allows you to view multimedia received on your phone or via e-mail.
- **Nokia PC Sync** to synchronise contacts, calendar and to-do notes between your phone and a compatible PC.

- **Nokia Phone Browser** to view the contents of the Gallery folder of your phone on a compatible PC. You can browse picture and audio files and also modify files in the phone's memory and transfer files between your phone and PC.
- **Nokia Phone Editor** to send text messages and edit the contacts in your phone.
- **Nokia Settings Manager** to edit and send your browser bookmarks or update the connection sets to your phone.
- **Nokia Sound Converter** to optimise polyphonic ringing tones in supported formats to be compatible with your phone and to transfer them to your phone.
- **Nokia Text Message Editor** to read, write and send SMS directly from a PC.

Copyright protections may prevent some images, ringing tones, and other content from being copied, modified, transferred or forwarded.

(E)GPRS, HSCSD and CSD

With your phone you can use the (E)GPRS (Enhanced GPRS), GPRS (General Packet Radio Service), HSCSD (High Speed Circuit Switched Data) and CSD (Circuit Switched Data, *GSM data*) data services.

For availability and subscription to data services, contact your network operator or service provider.

Note that the use of HSCSD services consumes the phone's battery faster than normal voice or data calls. You may need to connect the phone to a charger for the duration of the data transfer.

See "(E)GPRS modem settings" on page 52.

■ Using data communication applications

For information on using a data communication application, refer to the documentation provided with it.

Note that making or answering phone calls during a computer connection is not recommended as it might disrupt the operation.

For better performance during data calls, place the phone on a stationary surface with the keypad facing downward. Do not move the phone by holding it in your hand during a data call.

7. Battery information

■ Charging and Discharging

Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, buy a new battery. Use only Nokia approved batteries, and recharge your battery only with Nokia approved chargers designated for this device.

Unplug the charger from the electrical plug and the device when not in use. Do not leave the battery connected to a charger. Overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time. Temperature extremes can affect the ability of your battery to charge.

Use the battery only for its intended purpose. Never use any charger or battery that is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire! Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

■ Nokia battery authentication guidelines

Always use Nokia Original Enhancements for your safety. To check that you are getting a Nokia original battery, purchase it from an authorised Nokia dealer, look for the Nokia Original Enhancement logo on the packaging and inspect the battery's security features as explained below. These security features are only available for Nokia original batteries with the hologram labels.

The following steps are provided to help you confirm that your battery is an authentic Nokia Original Enhancement. Successful completion of all steps, however, is not a guarantee of the authenticity of the battery. If you have any reason to believe that your battery is not an authentic Nokia Original Enhancement, you should refrain from using it immediately and take it to the nearest authorised Nokia service centre or dealer for assistance.

How do you check the security features on your battery?

Step One:




When looking at the hologram label, you should see the Nokia Connecting Hands from one angle and the Nokia Original Enhancements logo when looking from another angle.

Step Two:



When you angle the hologram to the left, right, down and up sides of the logo, you should see 1, 2, 3 and 4 dots on each side respectively.

Step Three:

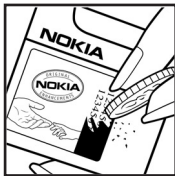

Scratch the side of the label to reveal a 20-digit battery code. The 20-digit battery code reads starting from the number at the top row followed by the bottom row eg 12345678919876543210.

Step Four:



Confirm that the 20-digit battery code is valid by verifying it at the Nokia website or via a text message.

2 ways to verify the 20-digit battery code

- Go to www.nokiaoriginals.com/check and follow the instructions; or

- Go to Messages, then to Create Messages.

For countries in Asia Pacific excluding India:

Key in the 20-digit battery code eg 12345678919876543210 and send to +61 427 151515.

Operator SMS charges will apply. If you are verifying from a location outside Australia, international SMS charges will apply.

For India only:

Key in "Battery" followed by the 20-digit battery code eg Battery 12345678919876543210 and send to 5555. 5555 is only applicable for users of GSM network. Operator SMS charges will apply. For users of CDMA network, please check your battery via the website.

After completing all the steps, you will receive a message indicating whether the battery code is valid.

If you need assistance confirming the battery code, contact your local Nokia Care Centres listed at www.nokia-asia.com/carecentrelocator.

What if your battery is not authentic?

- If you cannot confirm the authenticity of your battery at any of the four steps, please stop using the battery. The use of a battery that is not approved by the manufacturer may be dangerous and may result in poor performance and damage to your device and its enhancements. It may also invalidate any approval or warranty applying to the device.
- Contact the retailer who sold you the battery for further action.

To find out more about Nokia Original Enhancements, visit www.nokiaoriginals.com.

8. Genuine Enhancements

A new extensive range of enhancements is available for your phone. Select the enhancements which accommodate your specific communication needs. Some of the enhancements are described in detail below.



For availability of the enhancements, please check with your local dealer. A few practical rules for enhancements operation:

- Keep the enhancements out of small children's reach.
- When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.
- Check regularly that all mobile phone equipment in a vehicle is mounted and operating properly.

Use only batteries, chargers and enhancements approved by the phone manufacturer. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.


■ Power

Type	Tech	Talktime*	Standby*
BL-5B	Li-ion	Min 2.5 hrs up to 3 hrs	Min 150 hrs up to 350 hrs

* Variation in operation times may occur depending on SIM card, network and usage settings, usage style and environments. Use of FM radio and integrated hands-free will affect talktime and standby.

Standard Charger (ACP-7)


Small, lightweight and durable charger ACP-7 provides an easy and convenient way to charge the phone. It is easy to connect to phone or desktop stand.

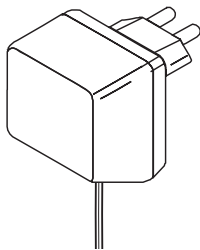

Note: The plug types vary according to different markets.

Travel Charger (ACP-12)

Small, lightweight travel charger with multivoltage (100 - 240V) switcher technology. Provides easy and convenient way to charge the phone.

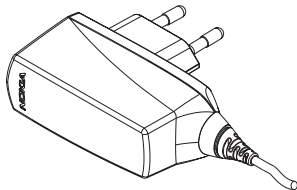

Note: The plug types vary according to different markets.

■ Audio

HS-5 Headset

The compact and functional personal Handsfree Kit with Remote Control. By using the remote control option, you can answer and end calls by pressing the button on the microphone part of the Personal Handsfree.



9. Care and Maintenance

Your device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.
- Use chargers indoors.
- Always create a backup of data you want to keep (such as contacts and calendar notes) before sending your device to a service facility.

All of the above suggestions apply equally to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service.

10. Additional safety information

Your device and its enhancements may contain small parts. Keep them out of the reach of small children.

■ Traffic Safety

Do not use a hand-held telephone while driving a vehicle. Always secure the phone in its holder; do not place the phone on the passenger seat or where it can break loose in a collision or sudden stop.

Remember road safety always comes first!

■ Operating environment

Remember to follow any special regulations in force in any area and always switch off your device when its use is prohibited or when it may cause interference or danger. Use the device only in its normal operating positions. This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 2.2 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the device the above-stated distance from your body.

Parts of the device are magnetic. Metallic materials may be attracted to the device, and persons with a hearing aid should not hold the device to the ear with the hearing aid. Always secure the device in its holder, because metallic materials

may be attracted by the earpiece. Do not place credit cards or other magnetic storage media near the device, because information stored on them may be erased.

In order to transmit data files or messages, this device requires a good quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

■ Medical devices

Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your device in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 6 in. (15.3 cm) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers should:

- always keep the device more than 6 in. (15.3 cm) from their pacemaker when the device is switched on;
- not carry the device in a breast pocket; and
- hold the device to the ear opposite the pacemaker to minimise the potential for interference.

If you have any reason to suspect that interference is taking place, switch off your device immediately.

Hearing aids

Some digital wireless devices may interfere with some hearing aids. If interference occurs, consult your service provider.

■ Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection systems, electronic antiskid (antilock) braking systems, electronic speed control

systems, air bag systems. For more information, check with the manufacturer or its representative of your vehicle or any equipment that has been added.

Only qualified personnel should service the device, or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty that may apply to the device. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or enhancements. For vehicles equipped with an air bag, remember that air bags inflate with great force. Do not place objects, including installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

■ Aircrafts

Using your device while flying may be prohibited. Switch off your device before boarding an aircraft. The use of wireless teledevices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal.

■ Potentially explosive environments



Switch off your device when in any area with a potentially explosive atmosphere and obey all signs and instructions. Potentially explosive atmospheres include areas where you would normally be advised to turn off your vehicle engine. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Switch off the device at refuelling points such as near gas pumps at service stations. Observe restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, chemical plants or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), and areas where the air contains chemicals or particles such as grain, dust or metal powders.

■ Emergency calls



Important: Wireless phones, including this device, operate using radio signals, wireless networks, landline networks, and user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. You should never rely solely on any wireless device for essential communications like medical emergencies.

To make an emergency call:

1. If the device is not on, switch it on. Check for adequate signal strength. Some networks may require that a valid SIM card is properly inserted in the device.
2. Press  as many times as needed to clear the display and ready the device for calls.
3. Key in the official emergency number for your present location. Emergency numbers vary by location.
4. Press the  key.

If certain features are in use, you may first need to turn those features off before you can make an emergency call. If the device is in offline or flight mode you must change the profile to activate the phone function before you can make an emergency call. Consult this guide or your service provider for more information.

When making an emergency call, give all the necessary information as accurately as possible. Your wireless device may be the only means of communication at the scene of an accident. Do not end the call until given permission to do so.

■ Certification information (SAR)

THIS MODEL PHONE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) recommended by international guidelines (ICNIRP). These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 W/kg*. Tests for SAR are conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

The highest SAR value for this model phone when tested for use at the ear is 0.72 W/kg. While there may be differences between the SAR levels of various phones and at various positions, they all meet the relevant international guidelines for RF exposure.

This product meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 2.2 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 2.2 cm away from your body.

* The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The guidelines incorporate a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band. For SAR information in other regions please look under product information at www.nokia-asia.com.

Index

SYMBOLS

(E)GPRS, HSCSD and CSD 83

A

About your device viii
Access codes ix
Accessing a menu function 12
Adding an image to a name or number in contacts 37
Adding one-to-one contacts 61
Additional safety information 91
Aircrafts 92
Alarm clock 64
Answering or rejecting an incoming call 8
Appearance settings of the browser 76
Applications 70

B

Barring password (4 digits) x
Basic steps for accessing and using services 74
Battery 88
Battery information 84
 type 88
Bookmarks 77
Browser security 78
browser security
 security module for WAP applications 79
Browsing the pages of a service 75

C

Cache memory 78
Calculator 72
Calendar 64
Call functions 8
Call register 34
Call settings 47
Call waiting 9
Callback requests 59
Caller groups 44
Care and Maintenance 90

Certification information (SAR) 94
Charging and Discharging 84
Charging the battery 2
Configuration settings 53
Configuration settings service xi
Connecting to and disconnecting from the push to talk service 58
Connectivity 49
Contacts 35
Cookies 76
Copying contacts 42
Countdown timer 72
Counters and timers for calls, data and messages 35
Creating and setting up groups 61

D

Deleting all messages from a folder 31
digital signature 80
Disconnect from a service 76
Display settings 47
Downloading 77
Downloading content and applications xi

E

Editing or deleting details 38
E-mail application 29
Emergency calls 93
Enhancement settings 52
Essential indicators 6

F

Flash messages 23
FOR YOUR SAFETY vi

G

Gallery 55
Games and applications 70
General information viii
Genuine Enhancements 88
Getting started 1

H

Hearing aids 92
HS-5 Headset 89

I

Info messages 31
Installing the SIM card and the battery 1
Instant messages (Chat) 24

K

Keypad lock (Keyguard) 7
Keys and connectors 4

M

Making a call 8
Making a connection to a service 74
Making and receiving a push to talk call 60
Media 56
Medical devices 91
menu
 list of functions 13
Menu functions 17
Message counter 34
Message settings 31
Messages 17
Multimedia messages (MMS) 20
My numbers 44
My presence 38

N

Network services x
Nokia battery authentication guidelines 85
Nokia PC Suite software ix
Nokia support on the Web xii
Normal operating position 3
Notes 66

O

Operating environment 91
Operator menu 55
Options during a call 9
Organiser 64

Overview of the functions of the phone viii

P

Pacemakers 92
PC Connectivity 82
PC Suite 82
Personal shortcuts 46
Phone settings 48
PIN and PIN2 codes (4 to 8 digits), module PIN, and signing PIN x
Positioning information 35
Potentially explosive environments 93
Power saving 6
Profiles 45
PUK and PUK2 codes (8 digits) x
Push to talk 57
Push to talk menu 58
Putting on a wrist strap 3

R

Recent calls lists 34
Restore factory settings 55

S

SAR value 94
Saving multiple numbers or items per name 36
Saving names and phone numbers (Add contact) 36
Screen saver 6
Searching for a contact 37
Security code (5 to 10 digits) ix
Security settings 54
security settings
 digital signature 80
Selecting settings for contacts 36
Sending and receiving a business card 42
Service commands 31
Service inbox 77
Service numbers 44
Setting predictive text input on or off 9
Setting up the phone for a service 74
Settings 45
Settings for push to talk 63
Shared memory ix

- SIM services 81
- Speed dialling a phone number 8
- Speed dials 42
- Standby mode 5
- Stopwatch 72
- Subscribed names 40
- Switching the phone on and off 3
- Synchronisation 69

T

- Text messages (SMS) 17
- Themes 45
- Time and date settings 47
- Tips for writing text 11
- To-do list 65
- Tone settings 45
- Traffic Safety 91

U

- Using data communication applications 83
- Using predictive text input 10
- Using the menu 12
- Using traditional text input 10

V

- Vehicles 92
- Voice dialling 43
- Voice messages 30
- Voice recorder 56

W

- Wallet 66
 - wallet
 - signing documents via WAP 80
- Wallet code (4 to 10 digits) x
- Wallpaper 6
- WAP services
 - security module in SIM 79
 - signing documents 80
- Web 73
- Writing text 9

Y

- Your phone 4