

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

SAMSUNG ELECTRONICS



World Wide Web
<http://www.samsungmobile.com>

Printed in Korea
Code No.:GH68-21468A
English (EU). 01/2009. Rev. 1.0

Samsung S8300V
user manual



using this manual

This user manual has been specially designed to guide you through the functions and features of your mobile phone. To get started quickly, refer to “introducing your mobile phone,” “assembling and preparing your mobile phone,” and “using basic functions.”

Instructional icons

Before you start, familiarise yourself with the icons you will see in this manual:



WARNING

Warning—situations that could cause injury to yourself or others



CAUTION


Caution—situations that could cause damage to your phone or other equipment



Note—notes, usage tips, or additional information



Refer to—pages with related information; for example: ► p.12 (represents “see page 12”)

- **Followed by**—the order of options or menus you must select to perform a step; for example: In Menu mode, touch **Messages** → **Create message** (represents **Messages**, followed by **Create message**)
- [] **Square brackets**—phone keys; for example: [] (represents the Power/Menu exit key)

Copyright information

Rights to all technologies and products that comprise this device are the property of their respective owners:

- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide—Bluetooth QD ID: B014869.
- Java™ is a trademark of Sun Microsystems, Inc.
- Windows Media Player® is a registered trademark of Microsoft Corporation.
- DivX® is a registered trademark of DivX, Inc., and is used under licence.




CE 0168

ABOUT DIVX VIDEO

DivX[®] is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Plays DivX[®] video up to 320x240. May play DivX[®] video up to 720x480.

ABOUT DIVX VIDEO-ON-DEMAND

 This DivX[®] Certified device must be registered with DivX in order to play DivX Video-on-Demand (VOD) content. First generate the DivX VOD registration code for your device and submit it during the registration process. [Important: DivX VOD content is protected by a DivX DRM (Digital Rights Management) system that restricts playback to registered DivX Certified devices. If you try to play DivX VOD content not authorised for your device, the message "Authorization Error" will be displayed and your content will not play.] Learn more at www.divx.com/vod.

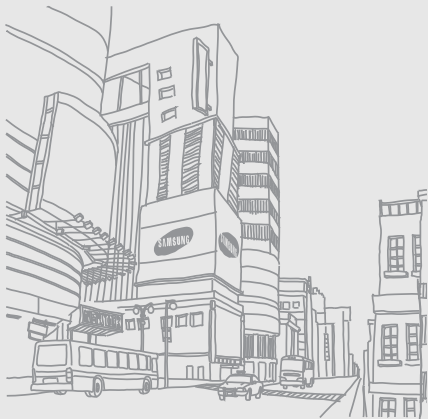

contents

safety and usage information	2
Safety warnings	2
Safety precautions	4
Important usage information	7
introducing your mobile phone	11
Unpack	11
Phone layout	12
Keys	13
Display	14
Icons	14
assembling and preparing your mobile phone	17
Install the SIM or USIM card and battery ...	17
Charge the battery	19
Insert a memory card (optional)	20

using basic functions	21
Turn your phone on and off	21
Use the touch screen	22
Access menus	23
Switch applications	23
Use widgets	24
Access help information	25
Customise your phone	25
Use basic call functions	26
Send and view messages	28
Add and find contacts	30
Use basic camera functions	31
Listen to music	32
Browse the web	34
Use the Google services	34

using advanced functions	36
Use advanced call functions	36
Use advanced phonebook functions	38
Use advanced messaging functions	40
Use advanced camera functions	41
Use advanced music functions	45
using tools and applications	49
Use the Bluetooth wireless feature	49
Activate and send an SOS message	51
Activate the mobile tracker	52
Make fake calls	52
Record and play voice memos	53
Edit images	54
Print images	56

Edit videos	57
Upload photos and videos to the web	60
Use Java-powered games and applications	61
Synchronise data	61
Use RSS reader	62
View your current position	63
Create and view world clocks	63
Set and use alarms	64
Use the calculator	64
Convert currencies or measurements	65
Set a countdown timer	65
Use the stopwatch	65

Create a new task	65
Create a text memo	66
Manage your calendar	66
troubleshooting	a
index	d

safety and usage information

Comply with the following precautions to avoid dangerous or illegal situations and ensure peak performance of your mobile phone.



Safety warnings

Keep your phone away from small children and pets

Keep your phone and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

Protect your hearing



Listening to a headset at high volumes can damage your hearing. Use only the minimum volume setting necessary to hear your conversation or music.

Install mobile phones and equipment with caution

Ensure that any mobile phones or related equipment installed in your vehicle are securely mounted. Avoid placing your phone and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your phone. Incompatible batteries and chargers can cause serious injuries or damage to your phone.
- Never dispose of batteries or phones in a fire. Follow all local regulations when disposing used batteries or phones.

- Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Avoid interference with pacemakers

Maintain a minimum of 15 cm (6 inches) between mobile phones and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research. If you have any reason to suspect that your phone is interfering with a pacemaker or other medical device, turn off the phone immediately and contact the manufacturer of the pacemaker or medical device for guidance.

Turn off the phone in potentially explosive environments

Do not use your phone at refuelling points (service stations) or near fuels or chemicals. Turn off your phone whenever directed by warning signs or instructions. Your phone could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

Reduce the risk of repetitive motion injuries

When sending text messages or playing games on your phone, hold the phone with a relaxed grip, press the keys lightly, use special features that reduce the number of keys you have to press (such as templates and predictive text), and take frequent breaks.



CAUTION

Safety precautions

Drive safely at all times

Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands-free accessories to increase your safety when possible.

Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a mobile phone in a certain area.

Use only Samsung-approved accessories

Using incompatible accessories may damage your phone or cause injury.

Turn off the phone near medical equipment

Your phone can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

Turn off the phone or disable the wireless functions when in an aircraft

Your phone can cause interference with aircraft equipment. Follow all airline regulations and turn off your phone or switch to a mode that disables the wireless functions when directed by airline personnel.

Protect batteries and chargers from damage

- Avoid exposing batteries to very cold or very hot temperatures (below 0° C/32° F or above 45° C/113° F). Extreme temperatures can reduce the charging capacity and life of your batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and - terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

Handle your phone carefully and sensibly

- Do not allow your phone to get wet—liquids can cause serious damage. Do not handle your phone with wet hands. Water damage to your phone can void your manufacturer's warranty.

CAUTION

- Avoid using or storing your phone in dusty, dirty areas to prevent damage to moving parts.
- Your phone is a complex electronic device—protect it from impacts and rough handling to avoid serious damage.
- Do not paint your phone, as paint can clog moving parts and prevent proper operation.
- Avoid using the phone's camera flash or light close to the eyes of children or animals.
- Your phone and memory cards may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with magnetic closures or allow your phone to come in contact with magnetic fields for extended periods of time.

Avoid interference with other electronic devices

Your phone emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience.

CAUTION



Important usage information

Use your phone in the normal position

Avoid contact with your phone's internal antenna.

Allow only qualified personnel to service your phone

Allowing unqualified personnel to service your phone may result in damage to your phone and will void your warranty.

Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.

- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.

Handle SIM cards and memory cards with care

- Do not remove a card while the phone is transferring or accessing information, as this could result in loss of data and/or damage to the card or phone.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Frequent writing and erasing will shorten the life span of memory cards.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

Ensure access to emergency services

Emergency calls from your phone may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.

Specific Absorption Rate (SAR) certification information

Your phone conforms to European Union (EU) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile phones that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 2.0 watts per kilogram of body tissue.

During testing, the maximum SAR recorded for this model was 0.403 watts per kilogram. In normal use, the actual SAR is likely to be much lower, as the phone has been designed to emit only the RF energy necessary to transmit a signal to the nearest base station. By automatically emitting lower levels when possible, your phone reduces your overall exposure to RF energy.


The Declaration of Conformity at the back of this manual demonstrates your phone's compliance with the European Radio & Terminal Telecommunications Equipment (R&TTE) directive. For more information about the SAR and related EU standards, visit the Samsung mobile phone website.

Correct disposal of this product

(Waste Electrical & Electronic Equipment)



(Applicable in the European Union and other European countries with separate collection systems)

 This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Correct disposal of batteries in this product



(Applicable in the European Union and other European countries with separate battery return systems)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life.

Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

introducing your mobile phone

In this section, learn about your mobile phone's layout, keys, display, and icons.

Unpack

Check your product box for the following items:

- Mobile phone
- Battery
- Travel adapter (charger)
- User manual

 


The items supplied with your phone may vary depending on the software and accessories available in your region or offered by your service provider.

 
You can obtain additional accessories from your local Samsung dealer.

Phone layout

The front of your phone includes the following keys and features:

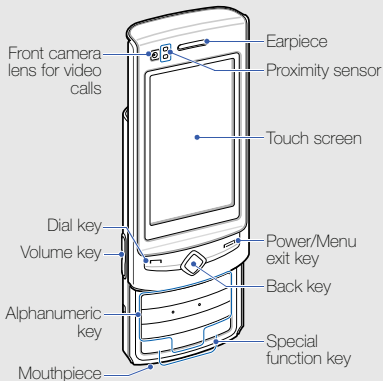


 


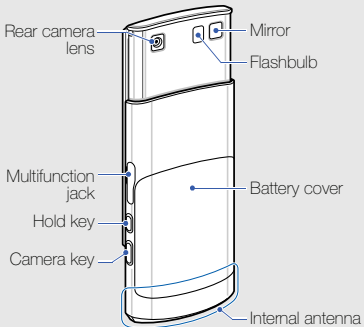




The rear of your phone includes the following keys and features:



 You can lock the touch screen and keys to prevent any unwanted phone operations. To lock, press [🔒].


Keys

Key	Function
 Dial	Make or answer a call; In Idle mode, retrieve recently dialed, missed, or received numbers
 Back	In Menu mode, return to the previous level
 Power/ Menu exit	Turn the phone on and off (press and hold); End a call; In Menu mode, return to the main menu or return to Idle mode
 Alpha- numeric	Enter numbers, letters and special characters; In Idle mode, press and hold [1] to access voice mails and [0] to enter an international call prefix

Key	Function
  Special function	Enter special characters or perform special functions; In Idle mode, press and hold [#] for the silent profile; Press and hold [*] to enter a pause between numbers
 Volume	Adjust the phone's volume
 Hold	Lock or unlock the touch screen and keys
 Camera	In Idle mode, turn on the camera (press and hold); In Camera mode, take a photo or record a video; If you change the key function, open the application switch window to access other applications without exiting the current application (press and hold)

Display

 Your phone's display consists of the following areas:

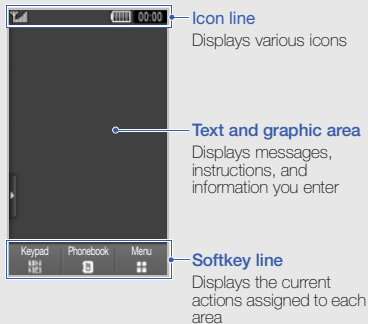
















Icons


Learn about the icons that appear on your display.

Icon	Definition
	Signal strength
	GPRS network connected
	Transferring data via GPRS network
	EDGE network connected
	Transferring data via EDGE network
	UMTS network connected
	Transferring data via UMTS network
	HSDPA network connected
	Transferring data via HSDPA network

Icon	Definition
	Voice call in progress
	Video call in progress
	SOS message feature activated
	Browsing the web
	Connected to secured web page
	Roaming (outside of normal service area)
	Call diverting activated
	Synchronised with PC
	Bluetooth hands-free car kit or headset connected
	Bluetooth activated
	Alarm activated

Icon	Definition
	Memory card inserted
	New text message (SMS)
	New multimedia message (MMS)
	New email message
	New voice mail message
	New push message
	New configuration message
	Text message full
	Multimedia message full
	Email message full
	Push message full

 Icon	Definition
	Configuration message full
	Normal profile activated
	Silent profile activated
	Driving profile activated
	Meeting profile activated
	Outdoor profile activated
	Offline profile activated
	Battery power level
	Current time

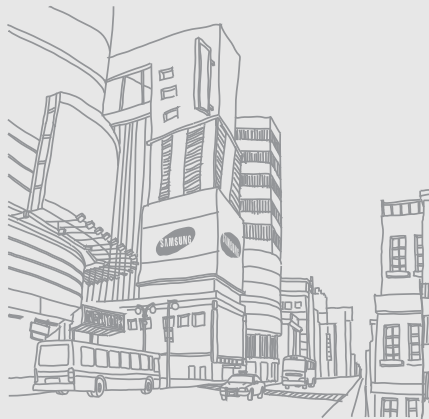 

assembling and preparing your mobile phone

Get started by assembling and setting up
your mobile phone for its first use.

 
Install the SIM or USIM card and battery

When you subscribe to a cellular service, you will receive a Subscriber Identity Module, or SIM card, with subscription details, such as your personal identification number (PIN) and optional services.

To use UMTS or HSDPA services, you can purchase a Universal Subscriber Identity Module (USIM) card.


To install the SIM or USIM card and battery,

1. Remove the battery cover.

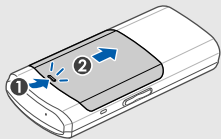


If the phone is on, press and hold [Power] to turn it off.

 2. Insert the SIM or USIM card.

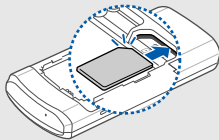


- Place the SIM or USIM card in the phone with the gold-coloured contacts facing down.
- Without inserting a SIM or USIM card, you can use your phone's non-network services and some menus.

 3. Insert the battery.

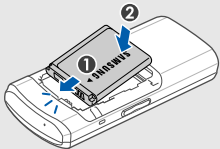

 
4. Replace the battery cover.

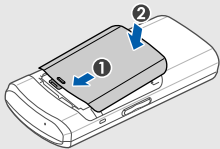

Charge the battery

Before using the phone for the first time, you must charge the battery.

 
1. Open the cover to the multifunction jack and plug the small end of the travel adapter into the multifunction jack.

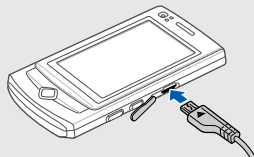

With the triangle facing up



Improperly connecting the travel adapter can cause serious damage to the phone. Any damages by misuse are not covered by the warranty.

2. Plug the large end of the travel adapter into a power outlet.
3. When the battery is fully charged (the  icon is no longer moving), unplug the travel adapter from the power outlet.
4. Unplug the travel adapter from the phone.
5. Close the cover to the multifunction jack.



 
About the low battery indicator

When your battery is low, the phone will emit a warning tone and a low battery message. The battery icon will also be empty and blinking. If the battery level becomes too low, the phone will automatically power off. Recharge your battery to continue using your phone.

Insert a memory card (optional)

To store additional multimedia files, you must insert a memory card. Your phone accepts microSD™ memory cards up to 16 GB (depending on memory card manufacturer and type).

1. Remove the battery cover and battery.
2. Insert a memory card with the label side facing up.

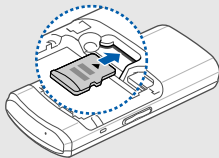

using basic functions

Learn how to perform basic operations and use the main features of your mobile phone.

Turn your phone on and off

To turn your phone on,

1. Slide open the phone.
2. Press and hold [].
3. Enter your PIN and touch **Confirm** (if necessary).

To turn your phone off, repeat steps 1 and 2 above.

Switch to the offline profile

By switching to the offline profile, you can use your phone's non-network services in areas where wireless devices are prohibited, such as aeroplanes and hospitals.

To switch to the offline profile, in Menu mode, touch **Settings** → **Phone profiles** → **Offline**.



 
Follow all posted warnings and directions from official personnel when in areas where wireless devices are prohibited.

Use the touch screen


Learn basic actions to use the touch screen.

Your phone's touch screen lets you easily select items or perform functions.


- Touch an icon to open a menu or launch an application.

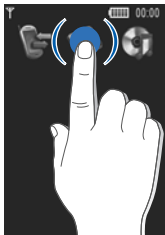

  - Drag your finger left or right to scroll through horizontal lists.

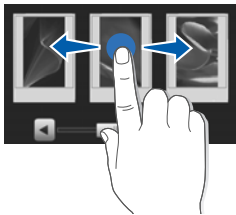

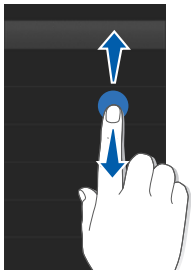

- Drag your finger up or down to scroll through vertical lists.



Access menus

To access your phone's menus,

1. In Idle mode, touch **Menu** to access Menu mode. You can also drag your finger to the left.
2. Select a menu or option.
3. Press [] to move up one level; Press [] to return to Idle mode.

Switch applications

Learn to switch to other applications from a menu, without closing the menu screen you are using.

To switch applications,



You must change the camera key function to **Switch** (in Menu mode, touch **Settings** → **Phone settings** → **Camera key function**).

1. While using a menu, press and hold the Camera key.

The following applications are available:

- **Call:** open the dialling screen
 - **Music player:** launch the music player
 - **Messages:** access the **Messages** menu
 - **Browser:** launch the web browser
 - **Main menu:** access the main menu screen
 - **Games and more:** access the **Games and more** menu
2. Select an application.

Use widgets

Learn to use widgets on the toolbar.

Open the toolbar

In Idle mode, touch the arrow at the bottom left of the screen to open the toolbar. You can rearrange widgets on the toolbar or move them to the idle screen.



Depending on your region or service provider, available widgets may vary.

Add the widgets to the idle screen

1. Open the toolbar.
2. Drag a widget from the toolbar to the idle screen. You can position the widget anywhere on the screen.



Change the widgets

1. In Menu mode, touch **Settings** → **Display and light** → **Widget**.

2. Select the widgets you want to include to the toolbar and touch **Save**.

Access help information

Learn to access helpful information about your phone.

1. Open the toolbar.
2. Touch  from the toolbar.
3. Rotate the phone anti-clockwise to landscape view.
4. Select a help topic to learn about an application or feature.
5. Drag your finger to the right or left to get more information. To return to the previous level, touch .

Customise your phone

Get more from your phone by customising it to match your preferences.

Adjust the volume of the key tones

In Idle mode, press the Volume key up or down to adjust the key tone volume.

Adjust the vibration intensity on the touch screen


You can adjust the intensity of the vibration when you touch the phone screen.

1. In Idle mode, press the Volume key up or down.
2. Touch **Vibration** and press the Volume key up or down to adjust the intensity of the vibration.

Switch to or from the silent profile

In Idle mode, press and hold [#] to silence or un silence your phone.

Change your ringtone

1. In Menu mode, touch **Settings** → **Phone profiles**.
2. Touch  next to the profile you are using.
3. Touch **Voice call ringtone** or **Video call ringtone**.
4. Select a ringtone from the list and touch **Save**.
5. Touch **Save**.

Select a wallpaper (Idle mode)

1. In Menu mode, touch **Settings** → **Display and light** → **Wallpaper**.
2. Scroll left or right to an image.

3. Touch **Set**.


Lock your phone

1. In Menu mode, touch **Settings** → **Security**.
2. Touch **On** under **Phone lock**.
3. Enter a new 4- to 8-digit password and touch **Confirm**.
4. Enter the new password again and touch **Confirm**.



Use basic call functions

Learn to make or answer calls and use basic call functions.






During a call, your phone automatically locks the touch screen to prevent accidental inputs. To unlock, press [].

Make a call

1. In Idle mode, enter an area code and a phone number.
2. Touch **Voice call** or press [] to dial the number.
For a video call, touch **More** → **Video call**.
3. To end the call, press [].

Answer a call

1. When a call comes in, press [].
2. For a video call, press [] and touch **Show me** to allow the caller to see you via the front camera lens.
3. To end the call, press [].

Adjust the volume

To adjust the volume during a call, press the Volume key up or down.

Use the speakerphone feature

1. During a call, touch **Speaker** → **Yes** to activate the speaker.
2. To switch back to the earpiece, touch **Speaker**.



In Speakerphone mode, a noisy environment will make it difficult to hear the person whom you are speaking with. In a noisy environment, it is better to use the normal phone mode for better audio performance.

Use the headset

By plugging the supplied headset into the phone, you can make and answer calls:

- To redial the last call, press the headset button, and then press again and hold.
- To answer a call, press the headset button.
- To end a call, press the headset button.

Send and view messages

Learn to send and view text (SMS), multimedia (MMS), and email messages.

Send a text or multimedia message

1. In Menu mode, touch **Messages** → **Create message** → **Message**.
2. Touch **Tap to add recipient** → **Enter manually**.
3. Enter a destination number.
4. Touch **Tap to add text**.
5. Enter your message text. ► p. 28
For sending as a text message, skip to step 7.
For attaching multimedia, continue with step 6.
6. Touch **Add media** and add an item.
7. Touch **Send** to send the message.

Send an email


1. In Menu mode, touch **Messages** → **Create message** → **Email**.
2. Touch **Tap to add recipient** → **Enter manually**.
3. Enter an email address.
4. Touch **Tap to add subject** and enter a subject.
5. Touch **Tap to add text** and enter your email text.
6. Touch **Add files** and attach a file (if necessary).
7. Touch **Send** to send the message.

Enter text



Enter text and create messages or notes.

Enter text using the virtual keypad


1. Open the text input field with the phone closed.
2. Touch the appropriate virtual keys to enter text.

- To switch between T9 and ABC modes, touch **T9**.
- To change case or switch to Number or Symbol mode, touch **Abc**.
- To switch to Symbol mode, touch .

You can use the following text input modes:

Mode	Function
ABC	Touch the appropriate virtual key until the character you want appears on the display.
T9	<ol style="list-style-type: none"> 1. Touch the appropriate virtual keys to enter an entire word. 2. When the word displays correctly, touch  to insert a space. If the correct word does not display, touch  to select an alternate word.
Number	Touch the appropriate virtual key to enter a number.
Symbol	Touch the appropriate virtual key to enter a symbol.

Enter text using the keypad

1. Open the text input field with the phone open.
2. Press the appropriate keys to enter text.
 - To switch between T9 and ABC modes, press and hold [*****].
 - To change case or switch to Number mode, press [*****].
 - To switch to Symbol mode, touch .

You can use the following text input modes:

Mode	Function
ABC	Press the appropriate alphanumeric key until the character you want appears on the display.
T9	<ol style="list-style-type: none"> 1. Press the appropriate alphanumeric keys to enter an entire word. 2. When the word displays correctly, press [#] to insert a space. If the correct word does not display, press [0] to select an alternate word.

Mode	Function
Number	Press the appropriate alphanumeric key to enter a number.

View text or multimedia messages

1. In Menu mode, touch **Messages** → **Inbox**.
2. Select a text or multimedia message.

View an email

1. In Menu mode, touch **Messages** → **Email inbox**.
2. Select an account.
3. Touch **Download**.
4. Select an email or a header.
5. If you selected a header, touch **Retrieve** to view the body of the email.

Add and find contacts

Learn the basics of using the phonebook feature.

Add a new contact

1. In Idle mode, enter a phone number.
2. Touch **More** → **Add to Phonebook** → **New**.
3. Touch **Phone** or **SIM**.
4. Enter contact information.
5. Touch **Save** to add the contact to memory.

Find a contact

1. In Idle mode, touch **Phonebook**.
2. Touch the text input field (if necessary).
3. Enter the letter of the name you want to find. You can also drag  to select the first letter of the name.

4. Select the contact's name from the search list.



Once you have found a contact, you can:

- call the contact by touching 
- edit the contact information by touching **Edit**

Use basic camera functions

Learn the basics to capture and view photos and videos.



When you turn on the camera, the display may appear blank due to temporary electrostatic discharge. Try restarting the phone to solve the problem.

Capture photos

1. Slide open the phone.
2. In Idle mode, press and hold the Camera key to turn on the camera.

3. Rotate the phone anti-clockwise to landscape view.
4. Aim the lens at the subject and make any adjustments.
5. Press the Camera key to take a photo.
The photo is saved automatically.


View photos

In Menu mode, touch **My files** → **Images** → **My photos** → a photo file.




Rotate the phone anti-clockwise to landscape view. Tilt the phone to the left or right, photos will scroll left or right automatically.

To categorise and view photos in a wide view,

1. In Menu mode, touch **Photo browser**.
2. Rotate the phone anti-clockwise to landscape view.

3. Touch  to categorise the photos.
4. Scroll left or right to view photos.
Tilt the phone to the left or right, photos will scroll left or right automatically.

Capture videos

1. Slide open the phone.
2. In Idle mode, press and hold the Camera key to turn on the camera.
3. Rotate the phone anti-clockwise to landscape view.
4. Touch  →  to switch to Recording mode.
5. Aim the lens at the subject and make any adjustments.
6. Press the Camera key to start recording.
7. Touch  or press the Camera key to stop recording.
The video is saved automatically.

View videos

In Menu mode, touch **My files** → **Videos** → **My video clips** → a video file.

Listen to music

Learn how to listen to music via the music player or FM radio.

Listen to the FM radio

1. Plug the supplied headset into the phone's multifunction jack.
2. In Menu mode, touch **Applications** → **FM radio**.
3. Touch **Yes** to start automatic tuning.
The radio scans and saves available stations automatically.



The first time you access the FM radio, you will be prompted to start automatic tuning.

