

Sony Ericsson

User guide


Satio™

Experience more. Discover how.

Please read the *Important information* before you use your mobile phone.

Fill it with pop and let it rock. Share your life in pictures. Or why not go online for the latest updates? Your new phone is the key to a wider world. And it's just around the corner. Get started with this User guide. And join us online to get the full picture. Music, games, apps, updates, downloads, support and more.

All in one place: www.sonyericsson.com/Satio

 
-  Don't forget to update your phone software. See *Updating your phone* on page 5.

Getting started

Assembly

Before you start using your phone, you need to insert a SIM (Subscriber Identity Module) card and the battery.

To insert the SIM card

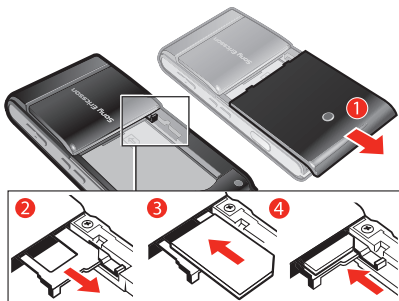

- 1 Remove the battery cover.
- 2 Pull out the SIM card holder.
- 3 Put the SIM card into its holder with the gold-coloured contacts facing down.
- 4 Push the holder back into place.

To insert the battery



- 1 Insert the battery with the label side up and the connectors facing each other.
- 2 Put the battery cover into place.

Turning on the phone

To turn on the phone



- 1 Press and hold down **Ⓜ**.
- 2 Enter your SIM card PIN, if requested, and select **OK**.
- 3 The first time you turn on the phone, follow the instructions to use the setup wizard for basic settings and useful tips.

Help

You can find **Help** on most applications in **Organiser** or you can access **Help** from within a specific application by selecting **Options**.

To access the general Help in your phone

- Select **Menu** > **Organiser** > **Help**.

To view Help when you are in an application

- Select **Options** > **Help**.

Updating your phone

 
You can view your phone software version, phone model name, or update your software from a server.

To check for updates


- 1 Select **Menu** > **Settings** > **Phone** > **Phone management** > **Device updates**.
- 2 Select **Options** > **Check for updates**.

Phone overview

- 1 On/off key
- 2 Loud speaker
- 3 Charging/message indicator
- 4 Proximity sensor
- 5 Ear speaker
- 6 Video call camera
- 7 Brightness sensor
- 8 Keylock key
- 9 Screen
- 10 Connector for charger, handsfree and USB cable
- 11 Memory card cover
- 12 Call key
- 13 Main menu key
- 14 End key

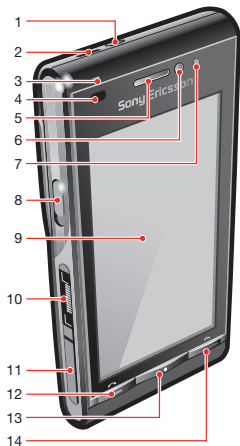

 - 15 Main camera
- 16 Xenon flash
- 17 Volume, digital zoom keys
- 18 LED light/AF assisting light
- 19 Video recording indicator
- 20 Camera brightness sensor
- 21 Camera view key
- 22 Camera mode key
- 23 Camera lens cover
- 24 Camera key
- 25 Strap holder

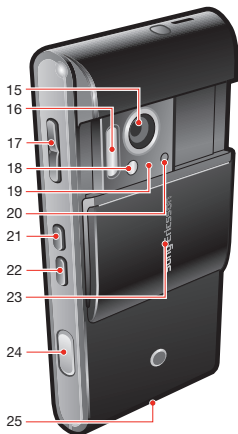

Menu overview*

 **Messaging**


 **Internet**


 **Camera**

 **Media**
Photo, Music, Video

 **Contacts**

 **PlayNow™**

 **Entertainment**
Radio, TrackID™,
Chat, Record sound

 **Location services**
Google maps,
Location, Wisepilot

 **Calendar**

 **Calls****

 **Organiser**
File manager, My
applications, Clock,
RoadSync, Google,
Search, Notes,
Converter, Calculator,

Adobe PDF,
Quickoffice, Help

 **Settings**

Personal

Profiles, Themes,
Standby

Phone

Date and time,
Language, Display,
Download settings,
Sensor settings,
Touch input,
Accessories,
Application sett.,
Phone mgmt.

Application mgr

Installed apps.,
Installation files, Install
settings

Calling

Call, Speed dialling,
Voicemail, Divert calls,
Call barring

Connectivity

Network, Wi-Fi,
Bluetooth, USB,
Destinations,













 


 

 

Connection mgr, Data transfer, Remote drives, Video sharing, Admin. settings

* Some menus are operator-, network- and subscription-dependent.

** You can use touch functionality to scroll between tabs in submenus. For more information, see *Navigation* on page 11.

Status icons

Status icons appear at the top of the screen. You can tap status icons to view more information or change settings.

-  Battery fully charged
-  Network signal strength
-  Messages in the outbox
-  GSM available
-  Missed call
-  Handsfree connected
-  Call diverted
-  Text message received
-  New email received
-  Headphone inserted
-  GPS connected
-  Alarm activated
-  Bluetooth™ connected
-  Keylock activated
-  USB data transferring
-  Data synchronising
-  Flight mode activated
-  Secure Wi-Fi™ network connected
-  Wi-Fi™ network connected

- 3G** 3G available
- H** HSDPA available
- E** EGPRS available

Navigation

You can move through menus with your fingertips or with a stylus. Tap or double-tap an item to select or open it. You can also switch between running applications.

To access the main menu

- Press the main menu key.

To lock or unlock the phone

- Slide the keylock key.

To view running applications

- 1 Press and hold down the main menu key.
- 2 To switch to a running application, tap it.

- ! Leaving applications running in the background increases the demand on battery power and reduces the battery life.

To end a function

- In most cases, select **Options > Exit**.

To delete items



- In most applications, to delete items such as files, folders, messages, or media files, select an item, and then select **Options > Delete**.

Standby

After you have turned on your phone and entered your PIN, the name of the network operator appears. This view is called standby. Your phone is now ready to use.

To return to standby

- Press and hold down the main menu key and select .

 To end the current application and return to standby, press .

Default standby theme

The default standby theme provides five different views:



Favourites view



Bookmarks view



Idle view




Photos view*



Shortcuts view

* The icon for Photos view changes based on the last photo you took.

 These five views are only available for the default standby theme.

Idle view

After you turn on your phone, you reach Idle view. You can access the standby music player and touchbar at the bottom of the display. The standby music player is activated when you play music in **Media**. The touchbar provides quick access to four applications:



Number entry – make calls



Media – go to Media



Messaging – send and receive messages





Search – search the phone


Favourites view

The Favourites view provides quick access to your favourite contacts.

To add contacts to Favourites

- 1 Tap .
- 2 Tap  and select the contacts you wish to add.

To call a favourite contact



- 1 Tap .
- 2 Tap a contact and select **Call**.

Bookmarks view

The Bookmarks view provides quick access to your favourite websites. You can add and remove bookmarks.

- ! You need the correct Internet settings to visit websites.
For cost information, contact your service provider.

To add bookmarks

- 1 Tap .
- 2 Tap  and select the bookmarks you wish to add.

Photos view

The Photos view provides quick access to your 200 most recently taken photos. The most recently taken photo is displayed in the centre of the screen. All photos are reduced and then cropped to 360x360 pixels.



To set a photo as wallpaper

- 1 Tap .
- 2 Tap a photo and select **Set as wallpaper**.

Shortcuts view

The Shortcuts view provides a list of shortcuts to different applications and bookmarks. You can personalise the shortcuts you wish to show.

To change shortcut settings

- 1 Tap .
- 2 Tap .
- 3 Select a shortcut and tap **Options** > **Change**.
- 4 When **Shortcut type:** appears, select **Application** or **Bookmark**.
- 5 Double-tap an item.
- 6 To save your settings, select **Back**.

To charge the battery



1 Connect the charger to the phone. It takes approximately 2.5 hours to fully charge the battery. Activate the screen with a tap to view the charge status.

2 Remove the charger by tilting the plug upwards.

💡 You can use your phone while it is charging. You can charge the battery at any time and for more or less than 2.5 hours. You can interrupt the charging without damaging the battery.

 
Memory card

! You may have to purchase a memory card separately.

Your phone supports memory cards, adding more storage space to your phone. The memory card can also be used with other compatible devices.


You can move content between the memory card and the phone memory.

To insert or remove a memory card

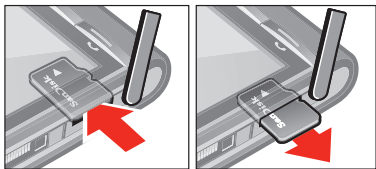

1 Open the memory card cover.

2 Insert the memory card with the gold-coloured contacts facing down.










- 3 To remove the memory card, press  and select **Remove memory card**, and then press the edge of the memory card to release and remove it.



Entering text

You can enter letters, numbers and special characters using the on-screen keyboard, alphanumeric keypad or handwriting recognition. You can switch between these input methods.




Text input icons

These icons may appear in the text input window.

-  Tap to accept the text in the input window and close the on-screen keyboard view
-  Tap to open the input options menu to change, for example, the **Writing language**, or view **Help**
-  Tap to switch character cases
-  Tap to display numbers and symbols
-  Tap to move the cursor left or right
-  Tap to delete a character
-  Tap to enter a space
-  Tap to insert a carriage return
-  Tap to change to another input method: **Mini QWERTY keyboard**, **Fullscr. QWERTY keyboard**, **Alphanumeric keypad** or **Handwriting**

-  When using **Mini QWERTY keyboard**, tap and hold to move the input window around the screen
- *# When using handwriting recognition, tap to open the symbol table
- 12 When using handwriting recognition, tap to switch to number input mode
-  Tap to turn predictive text input modes on or off, change the character case, and switch between letter and number modes
- AB When using handwriting recognition, tap to switch character case

To copy and paste text

- 1 Tap to place the cursor at the beginning of the text you want to select for copying. Then drag your fingertip or stylus to the end of the text.
 - 2 To copy the selected text, tap  and select **Copy**.
 - 3 To paste the text within the same text field, move the cursor to where you want the text be inserted, tap  and select **Paste**.
-  To paste the text to another text field, go to that text field, move the cursor to where you want to insert the text and select **Options > Paste**.


Media

You can manage media files in your phone or on your memory card. You can also manage photos in albums on the web.


Viewbar and touchbar


You can use the viewbar and touchbar to navigate through different views and manage your media files.

- Viewbar – a bar that appears at the top of the screen after you select an application in **Media**. Using this bar, you can navigate to play view, to various list views within the same application, or to the main **Media** menu.
- Touchbar – a bar at the bottom of the screen where you can manage your media files or go back to the previous level.

 To get tips for an icon in the bars, touch and hold the icon.

To update media libraries manually

- Tap  in the touchbar.

 Your media libraries update automatically when you use **Media** for the first time.

To go to the play view

- Tap  at the top of the screen.



To view more commands in the touchbar

- Tap  in the touchbar.

Mark mode

You can mark several files and manage them in batches.

To mark media files

- 1 When in list or grid view of the files, tap  in the touchbar.
- 2 Tap the files to highlight them as marked.
- 3 To exit mark mode, tap .

Photo

You can view, send and manage photos in your phone. You can also edit and arrange your online photo albums.

To view a photo in full screen

- 1 Select **Menu** > **Media** > **Photo**.
- 2 Select a view option and tap a thumbnail to view the photo.
- 3 To view the next or previous photo, flick left or right.

To edit a photo






- 1 When viewing a photo, tap  > .
- 2 Select **Options** and select an item.

Photo tags



You can manage your photos easily by creating tags for them.

- 💡 Only photos with EXIF info can be tagged.

To create a tag

- 1 When viewing a photo, tap  > .
- 2 Tap , enter a new name and select **OK**.
- 3 Select a tag icon.
- 4 Select the created tag to add it to your photo.

To tag a photo

 
 
- 1 When in play view or mark mode, tap  > .
- 2 Select a tag.

Music

You can listen to music, audiobooks, podcasts and your recordings.


Playback controls

The following playback controls may appear in your music player and video player:



Additional music controls

 The following music controls may appear in your music player:





To play music or other audio tracks

- 1 Select **Menu** > **Media** > **Music**.
- 2 Browse for tracks in **Artists**, **Albums**, **Tracks**, **Playlists**, **Audiobooks**, **Podcasts** and **My recordings**.
- 3 Tap a track.

To change the volume

- Press the volume key up or down.

To minimise the music player




- 1 When the music player is open, tap .
- 2 To restore the music player on the screen, tap .

!  may appear as the album cover of the current track.

Playlists

You can create playlists to organise your music. You can add tracks and folders to a playlist. It may take a few minutes for the phone to create a playlist.

To create a playlist

- 1 Select **Menu** > **Media** > **Music** > **Playlists**.
- 2 Tap **New playlist**.
- 3 Enter a name and select **OK**.
- 4 To add tracks, select, for example,  from the viewbar and tap .
- 5 Select tracks you want to add to the playlist and tap .
- 6 Select the playlist.

Video

You can browse and play video clips saved in your phone.

To play a video clip

- 1 Select **Menu** > **Media** > **Video**.
- 2 Select an option.
- 3 Tap a video clip.

Transferring and handling content

You can transfer and handle content such as pictures and music.

- ! You are not allowed to exchange some copyright-protected material.

File manager

You can use **File manager** in your phone to handle content saved in the phone memory or on a memory card. If the memory is full, delete some content to create space.

Sending content to another phone

You can send content, for example, using **Messaging** or using Bluetooth™ wireless technology.

PC Companion

PC Companion lets you:

- explore content in your phone
- use your phone as a modem
- install PC Software used to synchronise, transfer and back up phone content

For more information, go to

www.sonyericsson.com/support.

To install PC Companion

- 1 Connect your phone to a PC using a USB cable supported by your phone.
- 2 **Computer:** Select **Mass storage**.

- 3 Computer:** Wait until the memory card in your phone appears as the external disk in *Microsoft® Windows® Explorer*.
- 4 Computer:** On the computer desktop, double-click the *My Computer* icon.
- 5 Computer:** To launch the PC Companion installer from the memory card, double-click the icon representing your memory card and double-click **Startme.exe** under the folder **pccompanion**.
- 6 Computer:** Follow the instructions that appear.

Transferring media files

You can use Media Go™ to transfer media files from CDs or from your computer to the memory card in your phone. Media Go™ computer software and USB drivers are available for download at www.sonyericsson.com/support.

Using a USB cable

You can connect your phone to a computer using a USB cable to synchronise, transfer and back up phone content, and to use your phone as a modem.

- ! You may have to purchase a USB cable separately.

Required operating systems

You need one of these operating systems to use Sony Ericsson PC software:

- Microsoft® Windows Vista™
- Microsoft® Windows XP, Service Pack 2 or higher

Before using a USB cable

Only use a USB cable supported by your phone. Do not remove the USB cable from your phone or computer during transfer as this may corrupt the memory card or the phone memory.

To use mass storage

- 1 Connect the USB cable to the phone and the computer.
 - 2 **Phone:** Select **Mass storage**.
 - 3 **Computer:** Wait until your memory card appears as the external disk in *Microsoft Windows Explorer*.
 - 4 **Computer:** On the computer desktop, double-click the *My Computer* icon.
 - 5 **Computer:** To view the memory card folders, double-click the icon representing your memory card.
 - 6 Copy and paste your file, or drag and drop it, into a folder on your computer or on your memory card.
- ! You cannot view the transferred files in your phone until you remove the USB cable from the phone.

PlayNow™

When you select **PlayNow™**, you enter PlayNow™ arena, where you can download music, games, ringtones, themes and wallpapers. You can preview or listen to content before you purchase and download it to your phone.

- ! This service is not available in all countries.

For extended functionality, you can also access the PlayNow™ arena web shop on a computer from www.playnow-arena.com. For more information, go to www.sonyericsson.com/support.

To use PlayNow™

- 1 Select **Menu > PlayNow™**.
- 2 Surf through PlayNow™ arena and follow the instructions to preview and purchase content.

TrackID™

TrackID™ is a music recognition service. You can search the title, artist and album name for a track you hear playing through a loudspeaker.

To search for track information

- When you hear a track through a loudspeaker, select **Menu > Entertainment > TrackID™ > Start**.
- 💡 For best results, use TrackID™ in a quiet area.
- 💡 You get a vibrating alert when the recording is finished or if it fails.


Calls

Making and receiving calls


You need to turn on your phone and be within range of a network.

- 💡 The touch screen is disabled automatically during calls when you place your phone next to your ear.

To make a call

- 1 Select  to open the dialler and enter a phone number (with international country code and area code, if applicable).


2 Press .

 You can call numbers from your contacts and call lists.

To end a call

- Press .

To answer a call

- Press .

To reject a call

- Press .

To change the ear speaker volume during a call

- Press the volume key up or down.

Emergency calls



Your phone supports international emergency numbers, for example, 112 or 911. You can normally use these numbers to make emergency calls in any country, with or without the SIM card inserted, if you are within range of a network.

- ! In some countries, other emergency numbers may also be promoted. Your network operator may therefore have saved additional local emergency numbers on the SIM card.

Call list

You can view information about recent calls.

To call a number from the call list


- 1 Press  and select a tab.
- 2 Select a name or a number and press .

Contacts

You can save names, phone numbers and personal information in **Contacts**. Information can be saved in the phone memory or on the SIM card.

- 💡 You can synchronise your contacts using the *Sony Ericsson PC Suite*.

To add a new contact

- 1 Select **Menu** > **Contacts**.
- 2 Tap .
- 3 Add contact information. To close the text input window, tap ✓.
- 4 Select **Done**.

To set default contacts

- Select **Menu** > **Contacts** > **Options** > **Settings** > **Contacts to display**.

To copy contacts between the memory card and SIM card

- 1 Select **Menu** > **Contacts**.
- 2 Select a contact and then select **Options** > **Mark/Unmark** > **Mark**.
- 3 To mark more than one contact, repeat step 2.
- 4 Select **Options** > **Copy**.
- 5 Select an option.

- ! When you copy contacts from the **Phone memory** to the **SIM memory**, only the contact name and phone number will be saved to the SIM card.

To find a contact


- In the search field, enter the first letters of the contact name.

Using the camera

 
Your phone has a 12.1 megapixel camera and a 3.5 nHD touch display with touch capture, face detection, smile detection, Xenon flash and image stabiliser functions.

To activate the camera



- Open the camera lens cover.
- 💡 You can also activate the camera by pressing .
- 💡 Do not take photos when a strong light source is in the background. Use a support or the self-timer to avoid blurred photos.

Viewfinder

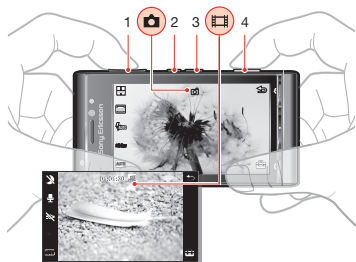

- 1 Zoom in or out
- 2 View photos and video clips
- 3 Switch between photo mode and video mode
- 4 Take photos/Record video clips



To close the camera

- Close the camera lens cover.

To take a photo

- 1 Activate the camera.
- 2 To use auto focus, press  halfway down.  begins to blink.

3 When  turns green, press  fully down to take the photo. The photo is automatically saved.

 To take a photo more quickly, you can skip step 2 and press  fully down.

To record a video clip

- 1 Activate the camera and press  to switch to video mode.
- 2 Press  fully down to start recording.
- 3 To stop recording, press  fully down. The video is automatically saved.

More camera features

BestPic™ helps you capture a precise moment. You can touch a point on the screen to choose where the camera should focus. The image stabiliser reduces the impact from vibrations.

To change settings

- Activate the camera and tap .


To view information about a setting

- Tap a setting and tap .

Face detection

You can use face detection to bring an off-centre face into focus. The camera automatically detects one face, indicated by a white frame. The frame becomes green when focus is locked. Focus is set to the face closest to the camera.

To set face detection






- 1 Activate the camera.
- 2 Tap .
- 3 Select **Photo > Focus > Face detection**.

! Face detection is not available in Landscape, Document or Twilight landscape scenes.

Smile detection

Smile detection is a technology that detects a person's smile and automatically takes the photo.

To use smile detection


- 1 Activate the camera.
- 2 Tap  > .
- 3 To start smile detection, press .  blinks on the upper-left part of the viewfinder.
- 4 When the face in the viewfinder smiles,  stops blinking and the photo is taken automatically.

BestPic™

BestPic™ is often used for capturing objects that move quickly. It lets you capture nine photos in a short interval so that you can choose the best. You can set the BestPic™ speed.

To take a photo using BestPic™





 
 
- 1 Activate the camera.
- 2 Tap  > .
- 3 To use auto focus, press  halfway down.  begins to blink.
- 4 When  becomes green, press  fully down. Nine thumbnails appear at the bottom of the screen.

- 5 Tap a thumbnail to view the photo in the viewfinder, and tap again to mark the photo. Tap  to save marked photos. You can mark and save more than one photo.

Panorama

The panorama feature helps you take wide panorama photos automatically. Three photos are taken sequentially in a row and connected to each other to form a seamless wide photo.

To take a panorama photo

- 1 Activate the camera.
- 2 Tap  > .  appears at the top of the screen.
- 3 To take the first photo, press .
- 4 To take the second photo, move the camera left or right until the indicator fits into  and becomes fully green. The photo is taken automatically and the direction of the panorama is now fixed.
- 5 To take the third photo, move the camera in the same direction as the previous shot until the indicator fits into  and becomes fully green. The photo is taken automatically.

Touch capture

In touch capture mode, you can touch the screen to focus and capture a photo. A white border in the viewfinder indicates the touchable area.


To take a photo in touch capture mode

- 1 Activate the camera.
- 2 Tap  > .

3 Tap within the white border to select the focus point. A photo is then taken automatically.

! Do not touch the viewfinder until you want to take a photo.

Image stabiliser

The image stabiliser compensates for small movements of the hand to ensure steady photos. When you turn on this function,  appears in the viewfinder.

To activate the image stabiliser

1 Activate the camera.

2 Tap .

3 Select **Photo > Image stabiliser > On**.

! The image stabiliser is only available when the flash is off.

Messaging

Text and multimedia messages

Messages can contain text, pictures, sound effects, video clips and presentations. You can also create and use templates for your messages.



When sending messages, the phone automatically selects the most suitable method to use (either a text or multimedia message) for sending the message.

To create and send a message

1 Select **Menu > Messaging > New message**.


2 Tap the **To** field and select a contact name from **Contacts**.

3 Tap **OK**.

- 4 Tap the text field and input your text.
 - 5 Select **Options** > **Add content** and add a picture, video clip and sound, as desired.
 - 6 Select  to send the message.
-  When manually entering the phone numbers of multiple recipients, use a semicolon to separate their numbers.

Internet

To start the Internet browser

- 1 Select **Menu** > **Internet**.
- 2 Tap , and enter a web address.
- 3 Select **Go to**.

Location services

Your phone has a GPS receiver that uses satellite signals to calculate your location. You can get help to find your way to a destination and save your favourite locations. With information from mobile towers near you, you may be able to view your approximate location on a map.

To access location services

- Select **Menu** > **Location services**, and select an application.

Using GPS

Your location can be found when you have a clear view of the sky. If your location is not found after a few minutes, move to another location. To help the search, stand still and

do not cover the GPS antenna, which is located in the upper-right part of the phone.

- ! The first time you use the GPS, it may take up to 10 minutes before your location is found.

Locks

SIM card lock

This lock only protects your subscription. Your phone will work with a new SIM card. If the lock is on, you have to enter a PIN.

The PIN2 is required to access some network services, and your SIM card must support these services.

If you enter your PIN incorrectly three times in a row, the SIM card is blocked and you need to enter your PUK (Personal Unlocking Key). Your PIN, PIN2 and PUK are supplied by your network operator.

To unblock your SIM card

- 1 When **PIN blocked. Enter PUK:** appears, enter your PUK and select **OK**.
- 2 Enter a new four-to-eight-digit PIN and select **OK**.
- 3 Re-enter the new PIN and select **OK**.

To turn on the SIM card lock

- 1 Select **Menu > Settings > Phone > Phone management > Security > Phone and SIM card > PIN request > On**.
- 2 Enter your PIN and select **OK**.

To edit your PIN

- 1 Select **Menu > Settings > Phone > Phone management > Security > Phone and SIM card > PIN.**
- 2 Follow the instructions to enter your old PIN once and new PIN twice.

Phone lock

You can stop unauthorised use of your phone. Change the phone lock code (0000 as default) to any four-to-eight-digit personal code.

When the touch screen and keys are locked, the touch screen and the keys are inactive.

- ! It is important that you remember your new code. If you forget it, you need to take your phone to your local Sony Ericsson retailer.

To turn on the phone lock

- 1 Select **Menu > Settings > Phone > Phone management > Security > Phone and SIM card > Phone autolock period > User defined.**
- 2 To automatically lock your phone when you do not use it for a defined time, tap the text input field under **Lock after (minutes):** and enter the time-out period.
- 3 Enter your phone lock code and select **OK.**
- 4 To unblock the phone, slide the keylock key on the side of the phone and follow the instructions that appear.

To edit your phone lock code

- 1 Select **Menu > Settings > Phone > Phone management > Security > Phone and SIM card > Lock code.**

- 2 Follow the instructions to enter your old lock code once and your new lock code twice.

Legal information

Sony Ericsson Satio™ phone U1i/U1a

This User guide is published by Sony Ericsson Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide.

All rights reserved.

©Sony Ericsson Mobile Communications AB, 2009

Publication number: 1227-3864.1

Your mobile phone has the capability to download, store and forward additional content, e.g. ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your mobile phone. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content.

Bluetooth is a trademark or a registered trademark of Bluetooth SIG Inc. and any use of such mark by Sony Ericsson is under license.

The Liquid Identity logo, Satio, PlayNow, BestPic and TrackID are trademarks or registered trademarks of Sony Ericsson Mobile Communications AB.

TrackID™ is powered by Gracenote Mobile MusicID™. Gracenote and Gracenote Mobile MusicID are trademarks or registered trademarks of Gracenote, Inc.

SyncML is a trademark or registered trademark of the Open Mobile Alliance, Ltd

Sony is a trademark or registered trademark of Sony Corporation.
Media Go is a trademark or registered trademark of Sony Media Software and Services.

Wi-Fi is a trademark or a registered trademark of the Wi-Fi Alliance.
Google™ and Google Maps™ are trademarks or registered trademarks of Google, Inc.

Ericsson is a trademark or registered trademark of Telefonaktiebolaget LM Ericsson.

Microsoft, Windows and Vista are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

RoadSync is a trademark or registered trademark of DataViz, Inc.
Quickoffice is a registered trademark of Quickoffice, Inc.

Wisepilot is a registered trademark of Appello Systems AB.

This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

Other product and company names mentioned herein may be the trademarks of their respective owners.

Any rights not expressly granted herein are reserved.

All illustrations are for illustration only and may not accurately depict the actual phone.

www.sonyericsson.com



Sony Ericsson

Sony Ericsson Mobile Communications AB
SE-221 88 Lund, Sweden

1227-3864.1